



Number Loving Oven


The perfect recipe for number learning fun!



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

FUN NEXT STEPS ON YOUR CHILD'S PATH TO LEARNING!

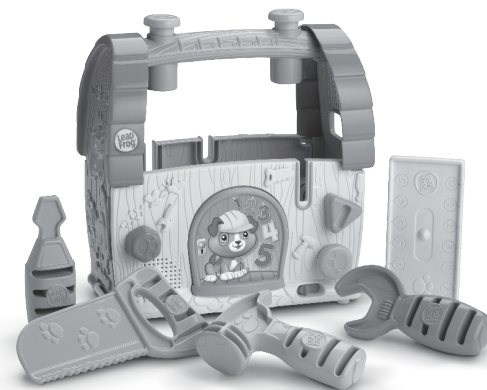

Scout's Build & Discover Tool Box
2+ years



Shapes & Sharing Picnic Basket
6-36 months



Fridge Phonics™
2+ years



Musical Rainbow Tea Party
1-3 years



Read With Me Violet
2+ years

Get more ideas to support your child's learning at: leapfrog.com

Products sold separately, and may not be available in all countries. Actual products may vary.

CORE LEARNING SKILLS

The right recipe for building early maths skills

Early number learning is about much more than identifying numbers. Toddlers are developing number sense—an understanding of concepts such as relative value, which are fundamental to future maths learning. Designed by LeapFrog educational experts, the Number Loving Oven offers a fun and easy way to introduce early skill building.

Pretend Play

Imaginative play, such as pretend cooking, is a natural way for toddlers to build language and life skills.

Number Sense


Hear the name for each number as it's selected on the number slider. Connect the numbers 1 to 5 on the slider with low, medium and high temperature settings, as well as shorter and longer cooking times.

Sharing

Thoughtfully designed food pieces are made for sharing. Little ones can divide the pre-sliced food onto two plates to share a meal with a friend or parent.



INSTRUCTIONS FOR PLAY

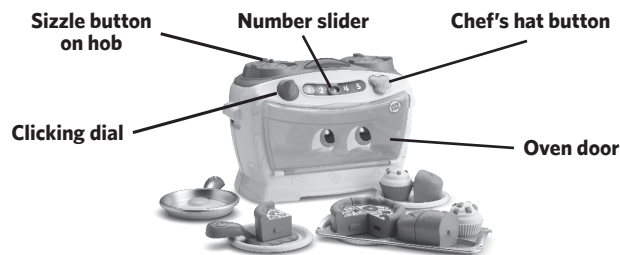

Getting Started

To turn on the Number Loving Oven toy, slide the power/volume switch to the desired volume setting.

Note: The Number Loving Oven toy will turn off automatically after a period of inactivity. You can wake it up again by pressing any button.

How to Play

Baking play: Close the oven door and move the number slider to explore time and temperature.

Sharing and counting play: Open the oven door for phrases about sharing. Divide and count the food pieces, and put them together to make a whole.

Music: Press the chef's hat to hear songs about counting and cooking.

Hob play: Place the pan on the left hob ring and hear real sizzle sounds and funny phrases.

For indoor, dry-location use only.

Keep food and beverages away from product. Do not spill liquid of any kind on this product as it may render it inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry before re-use. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

SOIN ET ENTRETIEN Utiliser uniquement en l'intérieur, dans des lieux secs

Tenir le produit à l'écart de la nourriture et des boissons. Ne jamais renverser un liquide sur ce produit car cela peut l'endommager ou en faire cesser son fonctionnement. Nettoyer avec un chiffon légèrement humide (utiliser de l'eau froide). Ne pas utiliser de savon ou de produit détergent. Ne jamais immerger le produit dans l'eau. Éviter une exposition prolongée aux températures extrêmes et aux rayons du soleil. Éviter de laisser tomber le produit. Ne jamais essayer de le démonter.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

ATTENTION: Vérifiez régulièrement que ce jouet est en bon état et qu'il ne présente pas de danger. Dans le cas contraire (par exemple, s'il est cassé certains endroits), tenez ce jouet hors de portée des enfants.

WARNING: This product is not suitable for use with food or liquid.

ATTENTION: Ce produit n'est pas destiné à être utilisé avec de la vraie nourriture ou du vrai liquide.

Battery Information

Requires 3 AAA (called LR03 in some countries) alkaline batteries.

Nécessite 3 piles alcalines AAA (appelées LR03 dans certains pays).

Battery Removal and Installation Instructions

1. Open the battery door with a Phillips screwdriver.
2. If used or dead batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of dead batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (e.g., alkaline/standard).

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Rechargeable batteries are to be removed from the toy before being charged.

Rechargeable batteries are only to be charged under adult supervision.

Sécurité relative aux piles

Les piles sont des objets de petite taille et peuvent constituer un risque d'étouffement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les bornes d'alimentation.

les accumulateurs doivent être chargés uniquement sous le contrôle d'un adulte.

les accumulateurs doivent être enlevés du jouet avant d'être chargés.

TROUBLESHOOTING

Toy does not turn on or does not respond

- Make sure the Off/Low/High switch is not in Off position
- Make sure the batteries are correctly installed
- Make sure the battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contact
- Install new batteries

FCC NOTICE:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

CAN ICES-3 (B) / NMB-3 (B)

ENVIRONMENTAL PHENOMENA

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

IMPACT DE L'ENVIRONNEMENT

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CONSUMER SUPPORT

U.S. Consumer Service Contact:

Visit our U.S. Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact:

Visit our Canada Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact:

Visit our U.K. Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Service Contact:

Visit our Australia Consumer Support website at www.leapfrog.com.au/support 24 hours a day.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE: Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

For information on how this product might be recycled visit www.leapfrog.com/recycle
For UK consumers: visit www.leapfrog.co.uk/recycle

TM & © 2015 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

Recommended for children ages 2 years and up. Convient aux enfants à partir de 2 ans.

Part number: 605-12280-C