



Sing-Along Song Bot™

 


Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the Sing-Along Song Bot™. Get ready to giggle as you sing, dance and record with your new musical pal!

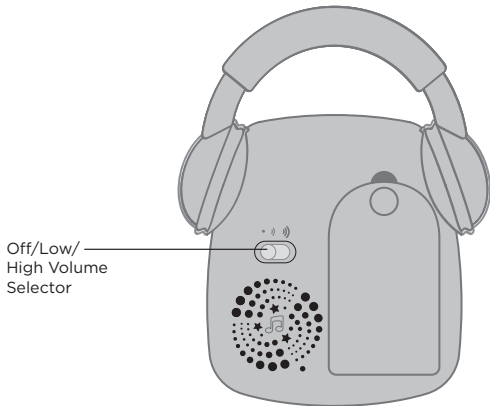

INCLUDED IN THE PACKAGE

- One Sing-Along Song Bot™
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

ATTENTION :

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks


- ① Turn the packaging lock counterclockwise several times.
- ② Pull out and discard the packaging lock.

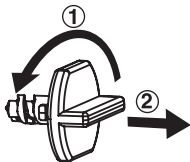

INSTRUCTIONS

Battery Removal and Installation

 1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.) (see remark 3)
5. Replace the battery cover and tighten the screw to secure.

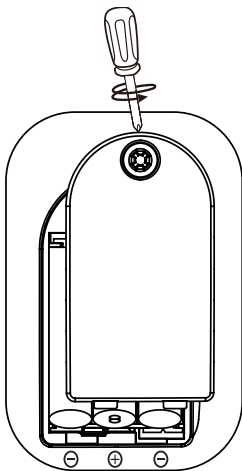



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

 
ACTIVATE NORMAL PLAY MODE

This product is in Try-Me mode in the packaging. To activate normal play mode, please turn the toy off and then back on.

PRODUCT FEATURES


1. Off/Low/High Volume Selector

Slide the **Off/Low/High Volume Selector** to turn on the toy and to select the volume.

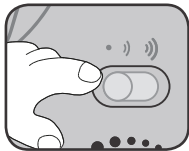


2. Play Button

 Press the **Play Button** to receive instructions on how to record your own audio. Once your audio has been recorded, press the **Play Button** again to hear your recording. Continue to press it to hear your recording played in silly robot voices.

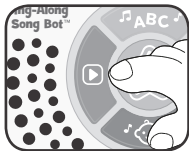


3. Music Buttons

 Press to play Learning Jams, Classical Music and Magical Melodies.

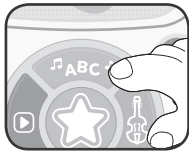

4. Microphone Button

 Press the **Microphone Button** to begin recording. Speak into it when you are told to record. Press it again to stop recording.

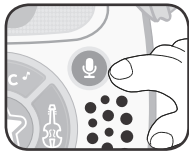

5. Star Button

Press to hear silly phrases from Song Bot.



Music Modes

Press a music button to hear a song or melody. Continue to press it to hear different options. The songs and melodies will always be played in the same order as listed below. However, the Song Bot will vary where to start in the order.

Magical Melodies

1. Row, Row, Row Your Boat
2. The Muffin Man
3. Bingo
4. Twinkle, Twinkle, Little Star
5. London Bridge
6. Mary Had a Little Lamb
7. Tisket a Tasket
8. The Incey Wincey Spider
9. Frere Jacques / Are You Sleeping Brother John?
10. Down By the Bay

Classical Music

1. Vivaldi's "Spring"
2. Bach's "Minuet in G"
3. Mozart's Piano Sonata No. 11
4. Mozart's "Rondo Alla Turca"
5. Chopin's Nocturnes Op. 9 No. 2
6. Rossini's "Galop" from William Tell Overture
7. Debussy's "Clair de lune"
8. Handel's "Hallelujah Chorus"
9. Bach's Brandenburg Concerto #4
10. Beethoven's "Ode to Joy"

Learning Jams

1. The Alphabet Song
2. Old MacDonald Had a Farm
3. Counting 1 to 10
4. I'm a Little Tea Pot
5. The Seven Days of the Week
6. Head, Shoulders, Knees and Toes
7. Give Me a Hug
8. If You're Happy and You Know It
9. Dance and Wiggle
10. The Wheels on the Bus

Lyrics

The Seven Days of the Week

Sunday, Monday, Tuesday too,
Wednesday, Thursday, gonna boogie with you!
Friday, Saturday, make a friend.
Now, let's sing those days again!
Sunday, Monday, Tuesday, Wednesday, Thursday, Friday,
Saturday.
The seven days of the week!

Give Me a Hug

Give me a hug.
Give me a hug.
Give me a hug,
my little love bug!
Myah! I love you!

Dance and Wiggle

Dance and wiggle - come on let's jiggle!
Dance and wiggle - hey, let's jiggle!
Break it down, break it down and let me hear you jiggle!
(Instrumental break)
Oh yeah!

Play Button

Press the **Record and Play Button** and then listen to the instructions to record your own audio.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6078
Product Name: **Sing-Along Song Bot™**
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com
leapfrog.ca

**Read our complete warranty policy online at
*leapfrog.com/legal***

A subsidiary of VTech Holdings Limited.
TM & © 2023 LeapFrog Enterprises, Inc.
All rights reserved.
IM-607800-000
Version:0