



# Sing-Along Song Bot™



## Instruction Manual

This manual contains important information. Please save it for future reference.

# INTRODUCTION

Thank you for purchasing the LeapFrog® Sing-Along Song Bot™. Get ready to giggle as you sing, dance and record with your new musical pal!



# INCLUDED IN THE PACKAGE

- One Sing-Along Song Bot™
- Quick Start Guide

## WARNING:

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE:

Please save this Instruction Manual as it contains important information.

## Unlock the Packaging Locks

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

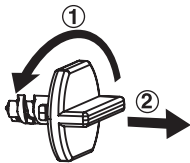


# INSTRUCTIONS

## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

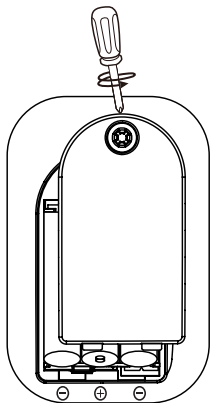

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

### **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheelee bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

### Learn more at:

[www.leapfrog.co.uk/recycle](http://www.leapfrog.co.uk/recycle)

[www.leapfrog.com.au/recycle](http://www.leapfrog.com.au/recycle)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

## ACTIVATE NORMAL PLAY MODE

This product is in Try-Me mode in the packaging. To activate normal play mode, please turn the toy off and then back on.

# PRODUCT FEATURES

 
## 1. Off/Low/High Volume Switch

Slide the **Off/Low/High Volume Switch** to turn On the toy and to select the volume.




## 2. Play Button

Press the **Play Button** to receive instructions on how to record your own audio. Once your audio has been recorded, press the **Play Button** again to hear your recording. Continue to press it to hear your recording played in silly robot voices.

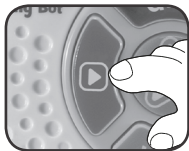

## 3. Music Buttons

 Press the **Music Buttons** to play Learning Jams, Classical Music and Magical Melodies.

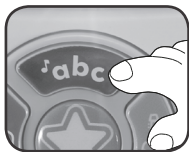


## 4. Microphone Button

Press the **Microphone Button** to begin recording. Speak into it when you are told to record. Press it again to stop recording.



## 5. Star Button

 Press the **Star Button** to hear silly phrases from Song Bot.

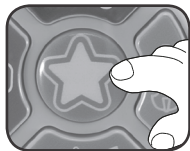

## Music Modes

Press a music button to hear a song or melody. Continue to press it to hear different options. The songs and melodies will always play in the same order as listed below. However, Song Bot will vary where in the order to start.

### Magical Melodies

1. Row, Row, Row Your Boat
2. The Muffin Man
3. Bingo
4. Twinkle, Twinkle, Little Star
5. London Bridge
6. Mary Had a Little Lamb
7. A-Tisket, A-Tasket
8. The Incy Wincy Spider
9. Frère Jacques / Are You Sleeping, Brother John?
10. Down By the Bay

### Classical Music

1. Vivaldi's "Spring"
2. Bach's "Minuet in G"
3. Mozart's Piano Sonata No. 11
4. Mozart's "Rondo Alla Turca"
5. Chopin's Nocturnes Op. 9 No. 2
6. Rossini's "Galop" from William Tell Overture
7. Debussy's "Clair de Lune"
8. Handel's "Hallelujah Chorus"
9. Bach's Brandenburg Concerto #4
10. Beethoven's "Ode to Joy"



## Learning Jams

1. The Alphabet Song
2. Old MacDonald Had a Farm
3. Counting 1 to 10
4. I'm a Little Tea Pot
5. The Seven Days of the Week
6. There Is a Tavern in the Town
7. Give Me a Hug
8. Farmer in the Dell
9. Dance and Wiggle
10. The Wheels on the Bus

## Lyrics

### The Seven Days of the Week

Sunday, Monday, Tuesday, too.

Wednesday, Thursday, gonna boogie with you!

Friday, Saturday, make a friend.

Now, let's sing those days again!

Sunday, Monday, Tuesday, Wednesday, Thursday, Friday,  
Saturday.

The seven days of the week!

### Give Me a Hug

Give me a hug.

Give me a hug.

Give me a hug,

My little love bug!

Myah! I love you!

### Dance and Wiggle

Dance and wiggle - come on, let's jiggle!

Dance and wiggle - hey, let's jiggle!

Break it down, break it down, and let me hear you giggle!

(Instrumental break)

Oh yeah!

# Play Button

Press the **Record and Play Button** and listen to the instructions to record your own audio.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

# CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [leapfrog.com/en-au/legal/warranty](http://leapfrog.com/en-au/legal/warranty) for further information.



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***leapfrog.com***

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
TM & © 2023 LeapFrog Enterprises, Inc.  
All rights reserved.  
IM-607800-001  
Version:0