

nickelodeon.



Clue Into Words



Parents' Guide

This guide contains important information.
Please keep it for future reference.

91-00XXX-000 (US) (CA)

 
INTRODUCTION

Thank you for purchasing the *Blue's Clues & You!*TM **Clue Into Words** book.

Help Josh find clues to figure out which book Blue wants to read, and learn words along the way! Touch the interactive pages to learn words and colors, practice counting and play along with music and sounds inspired by Blue and her friends. Then sit down in the Thinking Chair, figure out Blue's clues, and read along with Josh!

10 Interactive Pages

Thinking Chair Button

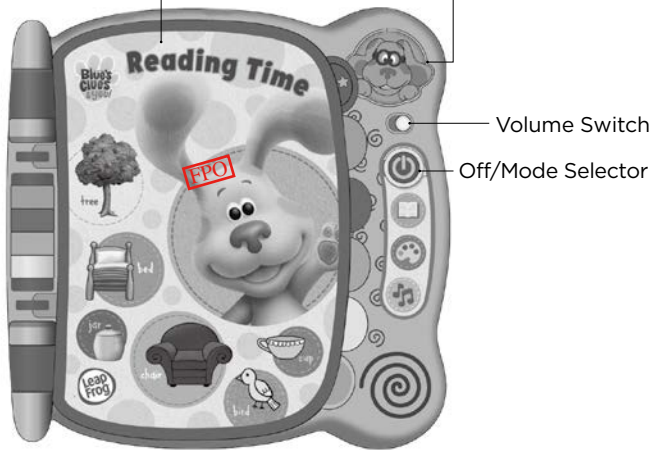

Volume Switch

Off/Mode Selector

INCLUDED IN THIS PACKAGE

*Blue's Clues & You!*TM Clue Into Words

- Parents' guide

WARNING:

All packing materials, such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parents' guide as it contains important information.

ATTENTION :

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

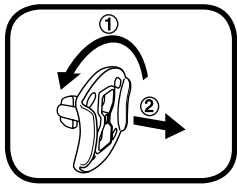

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit, use a screwdriver to loosen the screw and open the battery box.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

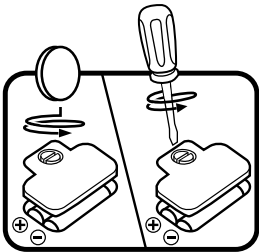

Note:

If the unit repeatedly powers down while playing, please install a new set of batteries.

BATTERY NOTICE

- Use new alkaline batteries for maximum performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc), or rechargeable (Ni-Cd, Ni-MH), or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.

- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

 
MISE EN GARDE

- Utiliser des piles alcalines neuves pour des performances maximales.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mélanger différents types de piles ou d'accumulateurs, ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas utiliser des piles ou des accumulateurs endommagés.
- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Enlever les piles ou les accumulateurs usagés du jouet.
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Ne les jeter ni au feu ni dans la nature.

PRODUCT FEATURES

1. Off/Mode Selector

Slide the **Off/Mode Selector** to turn the unit **ON** and choose Word Explorer mode, Count & Color mode or Music & Sounds mode to play. Slide the **Off/Mode Selector** to the top of the mode selector panel to turn the unit **OFF**.

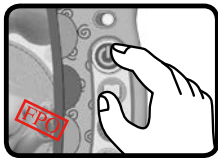


2. 10 Interactive Pages

Turn to any of the **10 Interactive Pages** and touch the pictures to explore and learn.




3. Thinking Chair Button

 Press the **Thinking Chair Button** to play a finding game.

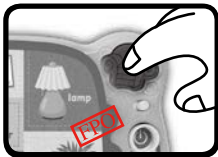

4. Volume Switch

 Slide the **Volume Switch** to select high or low volume.

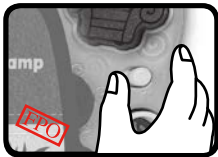

5. Automatic Shut-Off

To preserve battery life, the *Blue's Clues & You!*TM Clue Into **Words** book will automatically turn off after a minute of inactivity. The unit can be turned on again by sliding the **Off/Mode Selector** or pressing the **Thinking Chair Button**.

The unit will also automatically turn off when the batteries are very low.

HOW TO PLAY

To get the most from your *Blue's Clues & You!*TM Clue Into **Words** book, follow these simple instructions:

1. When playing, make sure the book is fully open. The pages should lay flat against the book covers.
2. If the pages are not laying flat, the book will not operate correctly.
3. For optimal performance, use one finger to touch the pages.
4. Do not touch more than one picture at a time.
5. Do not use more than one finger to touch a picture on the page and avoid resting your hand on the page.

ACTIVITIES

1. Word Explorer

Touch the pictures to learn words and hear fun sounds for things found around Blue's home.

Touch the left pages to help Josh find clues to figure out which book Blue wants to read. Then join Blue and her friends in the Thinking Chair and think, think, think!

2. Count & Color

Touch the pictures to learn colors and practice counting with Josh and Blue.

3. Music & Sounds

Touch anywhere on the pages to improvise with musical sounds while one of five original melodies plays. Touch the **Thinking Chair Button** to sing along with Josh!

4. Thinking Chair

Press the **Thinking Chair Button** to play a finding game. Listen to the questions and touch the pictures to answer.

SONG LYRICS

Learning is so fun to do,
Numbers, letters, colors, clues.
Come on, let's go figure it out,
With Blue and you!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep it out of direct sunlight and away from direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes. Then, replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, to remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email support@leapfrog.com. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity

Trade name: LeapFrog®
Model: 6118
Product name: Blue's Clues & You!™ Clue Into Words
Responsible party: LeapFrog Enterprises, Inc.
Address: 6401 Hollis Street, Suite 100,
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

***Read our complete warranty policy online
at leapfrog.com/warranty***

© 2020 Viacom International Inc. All Rights Reserved. Nickelodeon, Blue's Clues & You! and all related titles, logos and characters are trademarks of Viacom International Inc.

LeapFrog Enterprises, Inc.,

A subsidiary of VTech Holdings Limited.

TM & © 2020 LeapFrog Enterprises, Inc.

All rights reserved.

91-00XXXX-000 