



# Choppin' Fun Learning Pot™



## Instruction Manual

This manual contains important information. Please save it for future reference.

# INTRODUCTION

Thank you for purchasing the **Choppin' Fun Learning Pot™**. Cook up some fun while exploring counting, colors, food and music. This interactive pot has a motion sensor that responds with encouraging sounds and phrases as you add and stir the vegetables. It's a recipe for learning. Bon appetit!



# INCLUDED IN THE PACKAGE

- **Choppin' Fun Learning Pot™**
- 2 broccoli pieces
- 2 corn pieces
- 2 tomato pieces
- 2 carrot pieces
- 1 knife
- 1 spoon
- 1 cutting board
- 1 bowl
- Quick Start Guide

## **WARNING**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## **NOTE**

Please save this Instruction Manual as it contains important information.

## **ATTENTION**


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## **NOTE**

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

## Unlock the Packaging Locks

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks.

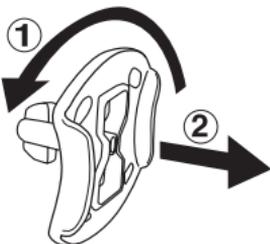

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### **ATTENTION:**


Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

**CAUTION:** Don't bring this toy into contact with food.

# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

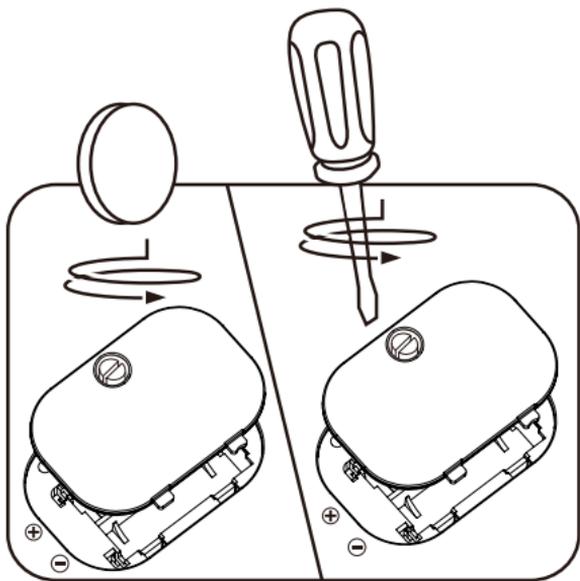

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

# PRODUCT FEATURES

## 1. Off/Low/High Volume Selector

Slide the **Off/Low/High Volume Selector** to turn the toy on and select the volume.



## 2. Food Buttons

Press the **Food Buttons** for silly color phrases, food phrases, music and, step-by-step recipes.



## 3. Temperature Dial

Twist the **Temperature Dial** for lively number phrases and to trigger the **Face Plate's** "bubbling water" motion.



## 4. Motion-Sensing Pot

Drop food into the **Pot** or stir it to trigger playful sounds, music, counting and learning phrases.



# ACTIVITIES

## Food Buttons

Press a **Food Button** several times in a row to hear a recipe suggestion. The pot will provide simple step-by-step instructions.

Recipes include:

Broccoli With Cheese:

1. The pot “adds” the cheese.
2. Chop the broccoli and drop it into the pot.
3. Turn the number dial to 1.
4. Stir while the pot counts to ten.

Corn on the Cob:

1. Chop the corn and drop it into the pot.
2. Turn the number dial to 2.
3. Press the yellow button.

Carrot Soup:

1. Chop the carrot and drop it into the pot.
2. Turn the number dial to 3.
3. Stir while the pot counts to three.

Spaghetti Sauce:

1. Chop the tomato and drop it into the pot.
2. Turn the number dial to 4.
3. Stir when the pot says, “Stir!” Stop when the pot says, “Stop!”

Listen for the special “Rainbow Soup” and “Spice It Up!” recipes that may play after any **Food Button** touch. Have your spoon and knife nearby and be ready to cook!

## **Motion-Sensing Pot**

Drop play food into the pot or stir to hear fun responses. Various activities may be triggered:

“Stir me up while I count to 5!”

“Let’s make a splash! Drop some veggies in me!”

“Stir me up while I count to 10!”

“Let’s spice it up!”

“Let’s make rainbow soup!”

Follow the pot’s instructions to complete these activities and hear encouraging and rewarding responses.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to play again.
5. If the unit still does not work, install a new set of batteries.

### **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Supplier's Declaration of Conformity**

47 CFR § 2.1077 Compliance Information

Trade Name:	LeapFrog®
Model:	6123
Product Name:	Choppin' Fun Learning Pot™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	2200 Powell Street, Suite 500 Emeryville, CA 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***leapfrog.com***  
***leapfrog.ca***

**Read our complete warranty policy online at  
*leapfrog.com/legal***

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
TM & © 2021 LeapFrog Enterprises, Inc.  
All rights reserved.  
**Printed in China.**