



Choppin' Fun Learning Pot™

 


Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Choppin' Fun Learning Pot™**. Cook up some fun while exploring counting, colours, food and music. This interactive pot has a motion sensor that responds with encouraging sounds and phrases as you add and stir the vegetables. It's a recipe for learning. Bon appetit!

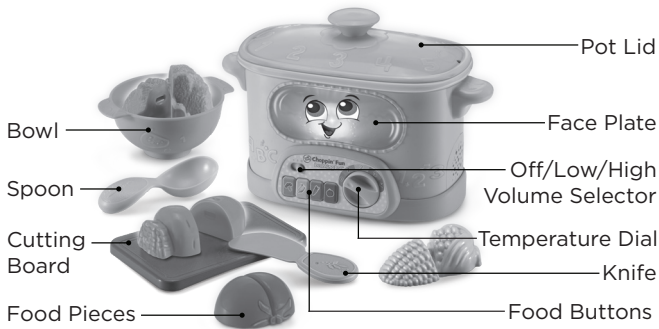

INCLUDED IN THE PACKAGE

- **Choppin' Fun Learning Pot™**
- 2 broccoli pieces
- 2 sweetcorn pieces
- 2 tomato pieces
- 2 carrot pieces
- 1 knife
- 1 spoon
- 1 cutting board
- 1 bowl
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

 
Please keep this parent's guide as it contains important information.

CAUTION:

Don't bring this toy into contact with food.

Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.

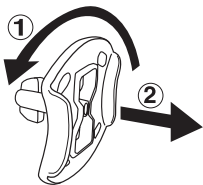

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new 'AA' (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

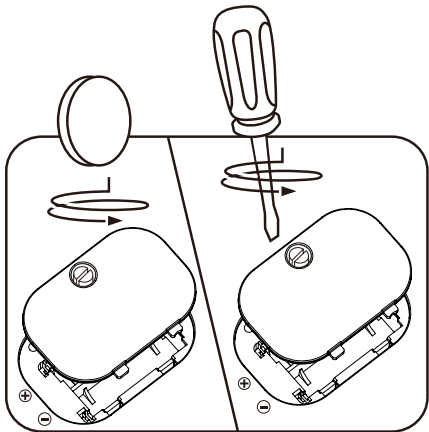

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Disposal of batteries and product



The crossed-out wheelee bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

LeapFrog® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. Off/Low/High Volume Selector

Slide the **Off/Low/High Volume Selector** to turn the toy on and select the volume.



2. Food Buttons

Press the **Food Buttons** for silly colour phrases, food phrases, music and, step-by-step recipes.



3. Temperature Dial

Twist the **Temperature Dial** for lively number phrases and to trigger the **Face Plate's** "bubbling water" motion.



4. Motion-Sensing Pot

Drop food into the **Pot** or stir it to trigger playful sounds, music, counting and learning phrases.



ACTIVITIES

Food Buttons

Press a **Food Button** several times in a row to hear a recipe suggestion. The pot will provide simple step-by-step instructions.

Recipes include:

Broccoli With Cheese:

1. The pot “adds” the cheese.
2. Chop the broccoli and drop it into the pot.
3. Turn the number dial to 1.
4. Stir while the pot counts to ten.

Corn on the Cob:

1. Chop the sweetcorn and drop it into the pot.
2. Turn the number dial to 2.
3. Press the yellow button.

Carrot Soup:

1. Chop the carrot and drop it into the pot.
2. Turn the number dial to 3.
3. Stir while the pot counts to three.

Spaghetti Sauce:

1. Chop the tomato and drop it into the pot.
2. Turn the number dial to 4.
3. Stir when the pot says, “Stir!” Stop when the pot says, “Stop!”

Listen for the special “Rainbow Soup” and “Spice It Up!” recipes that may play after any **Food Button** touch. Have your spoon and knife nearby and be ready to cook!

Motion-Sensing Pot

Drop play food into the pot or stir to hear fun responses. Various activities may be triggered:

“Stir me up while I count to 5!”

“Let’s make a splash! Drop some veggies in me!”

“Stir me up while I count to 10!”

“Let’s spice it up!”

“Let’s make rainbow soup!”

Follow the pot’s instructions to complete these activities and hear encouraging and rewarding responses.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Try to change the batteries for new ones if the toy is not working properly.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

www.leapfrog.com

**Read our complete warranty policy online at
leapfrog.com/legal**

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2021 LeapFrog Enterprises, Inc.
All rights reserved.