




Instruction Manual

This manual contains important information. Please keep it for future reference. Ce guide contient des informations importantes. Veuillez le conserver pour toute référence future.

INTRODUCTION

Thank you for purchasing the **LeapStart®** interactive learning system.

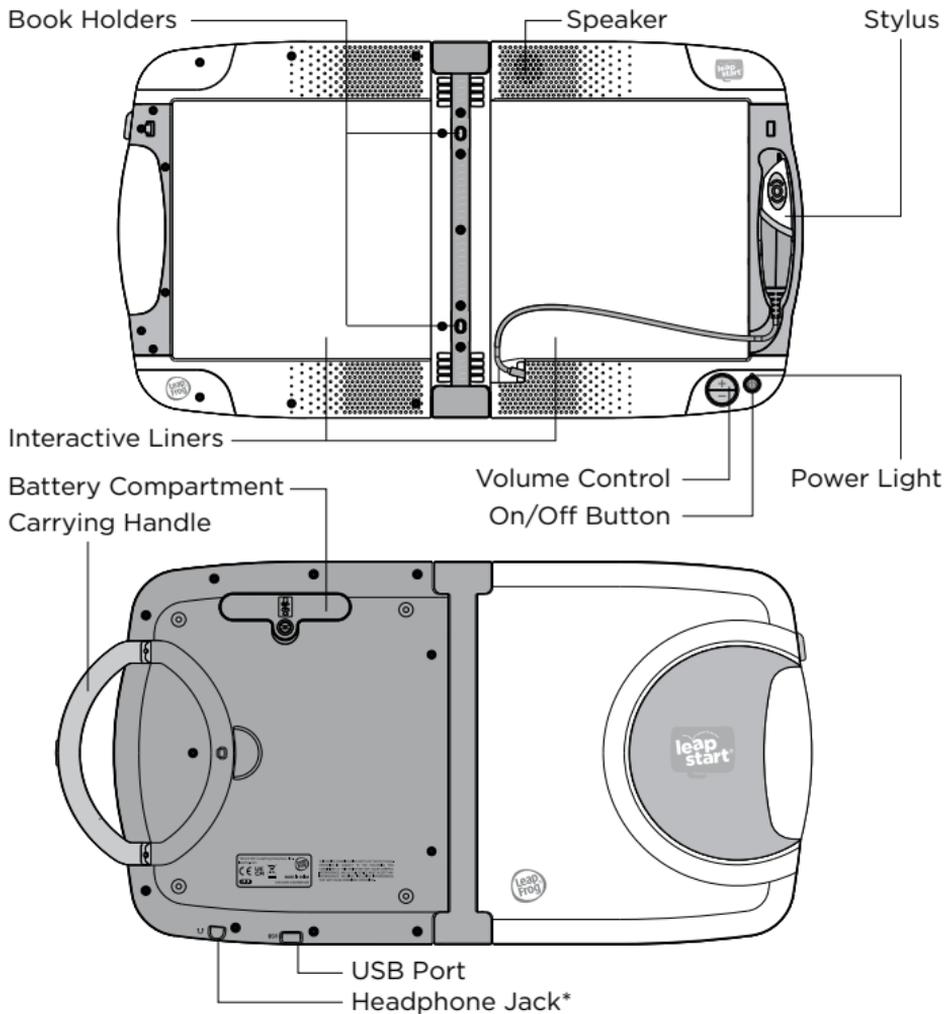


*Compatible with most headphones. Headphones not included.


INCLUDED IN THE PACKAGE



- LeapStart® interactive learning system

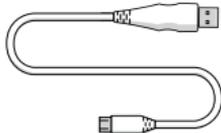

- USB cable

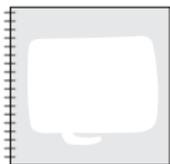

- Activity book
(Number of books may vary
in different versions.)



- Quick Start Guide

WARNING

All packing materials, including tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

- Install 2 AA batteries in your LeapStart® learning system. (See: Battery Information)
- Press the **On/Off Button** to begin. The green **Power Light** will shine when the LeapStart® system is on.

Your LeapStart® system is now ready to be used!

Using LeapStart® Books


- **POWER UP:** Turn on the LeapStart® learning system.
- **SET UP:** Snap a LeapStart® book into the **Book Holders** in your LeapStart® learning system and touch the tip of the **Stylus** to any image or word. If instructed to download the companion audio, download the LeapFrog® Connect application at leapfrog.com/connect and install it on your computer.
- **REGISTER:** Follow the instructions in the LeapFrog® Connect application to create a parent account and update your LeapStart® system.
- **DOWNLOAD:** Download companion audio for each of your books.
- **PLAY & LEARN:** Eject and disconnect the LeapStart® system from your computer. Your child is now ready to play, learn and explore with the LeapStart® system!

Please visit leapfrog.com/system-requirements for LeapFrog® Connect minimum system requirements.

BATTERY INFORMATION

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the unit, use a coin or screwdriver to loosen the screw and open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

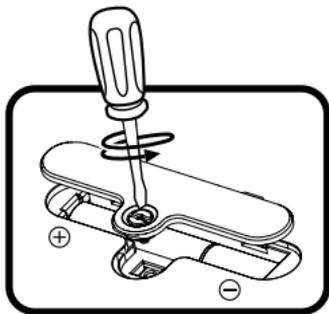

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

PRODUCT FEATURES

1. On/Off Button

Press the **On/Off Button**. The LeapStart® learning system will start up and you will hear a welcome message.

2. Stylus

Touch the tip of the **Stylus** to the book to interact with the pages.

3. Volume Control

Press the - and + **Volume Control** buttons to adjust the volume.

4. Automatic Shut-Off

To preserve battery life, the LeapStart® will automatically power down after approximately five minutes without input. The unit can be turned on again by pressing the **On/Off Button**.

Important Safety Instructions

- The USB cable could be a strangulation hazard. Keep out of reach of children under 3 years of age. The USB cable should be used only by an adult when connecting to a computer and is to be removed by the adult prior to the use of the product by the child.
- This toy is only to be connected to equipment bearing either of the following symbols:  or .

- Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.
-  Long-term exposure to loud sounds, at high volume, may result in permanent hearing loss. When using headphones or ear buds, it is recommended that the product is listened to at lower volumes for shorter periods of time. Set the volume while in a quiet environment; turn the volume down if you cannot hear people speaking near you. Limit the listening time to 90 minutes, followed by a quiet period. The louder the volume, the less time required before your hearing may be affected. If you experience ringing in your ears or hear muffled speech, stop listening and have your hearing checked.
- When books are installed, product may be heavy for some children. Exercise care.
- To avoid choking, do not allow your child to eat or drink during play.
- Parents of children with injuries or other limitations should consult a doctor before use.

NOTICE: Toy works best when used on level surfaces.



WARNING:

- Adult supervision required at all times while children are playing with this product.
- Not suitable for children under 18 months.



AVERTISSEMENT :

- La supervision d'un adulte est toujours requise lorsque l'enfant joue avec ce produit.
- Ne convient pas aux enfants de moins de 18 mois.

CARE & MAINTENANCE

For Indoor, Dry-Location Use Only: Do not use the product near a sink or other wet locations. Take care not to spill food or any kind of liquid on this product as it may render it inoperable and not serviceable. In case the unit does get wet, unplug all cables and turn it **Off**. Allow to dry thoroughly before reusing. Do not attempt to dry with a hair dryer or other heat source.

Avoid Prolonged Exposure to Extreme Temperatures and Direct Sunlight: Operate in places with temperatures ranging from 5°C (40°F) to 38°C (100°F). Do not leave the product in your car as the temperatures in parked cars can exceed the acceptable storage temperature. Exposure to extreme temperatures can result in shortened battery life or cause the product to temporarily stop working.

Handle With Care: To avoid injury, damage to this product or other property, avoid dropping and never disassemble, crush, puncture, microwave, incinerate, insert foreign objects or paint the product. Clean your hands before handling the product if they have been exposed to suntan lotions or other chemicals.

Cleaning: Disconnect all cords before cleaning. Clean the product with a slightly damp cloth (cold water). Do not use soap, detergent or other chemicals. Never submerge the unit in water. Allow to dry thoroughly before re-use.

Using the Stylus

- Do not use the **Stylus** if it is broken.
- Put the **Stylus** back in the stylus holder when not in use.
- Keep **Stylus** tip away from eyes, nose, ears and mouth.
- Do not look directly into the **Stylus** light.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

Static electricity may cause the LeapStart® to malfunction. In cases where LeapStart® is malfunctioning due to static electricity, reset the system by pressing and holding the **Power Button** for 10 seconds until the unit turns on again. Or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 1-800-701-5327 in the U.S. or email support@leapfrog.com. Creating and developing **LeapFrog®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6131
Product Name: LeapStart®
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500,
Emeryville, CA 94608
Website: leapfrog.com/leapfrog.ca

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIREDD OPERATION.

CAN ICES-003(B)/NMB-003(B)

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

USB Cable: Use only the USB cable provided by LeapFrog. Using any other cable may exceed FCC and other regulatory emissions limits. The USB cable is not a toy. Disconnect the toy from the USB connection before cleaning.



Visit our website for more information about our products, downloads, resources and more.

leapfrog.com
leapfrog.ca

Read our complete warranty and legal policies online at
leapfrog.com/legal

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2021 LeapFrog Enterprises, Inc.

All rights reserved.

Version: 0   