

614200 Count-Along Basket & Scanner™

AW Release Date: 21/04/23

Purpose: Printing version

IM Size: 101 X 127MM

C&P Designer/Leader: Jenny Yang / Qin Hu

UK Designer: Natalie

Game/PT Designer: XXX / XXX



Count-Along Basket & Scanner™



 
Instruction Manual

This manual contains important information. Please keep it for future reference.

91-004008-001 

INTRODUCTION

Thank you for purchasing the **Count-Along Basket & Scanner™!** Shop, scan and smile as you learn about numbers, colours, shapes, food names and nutrition.

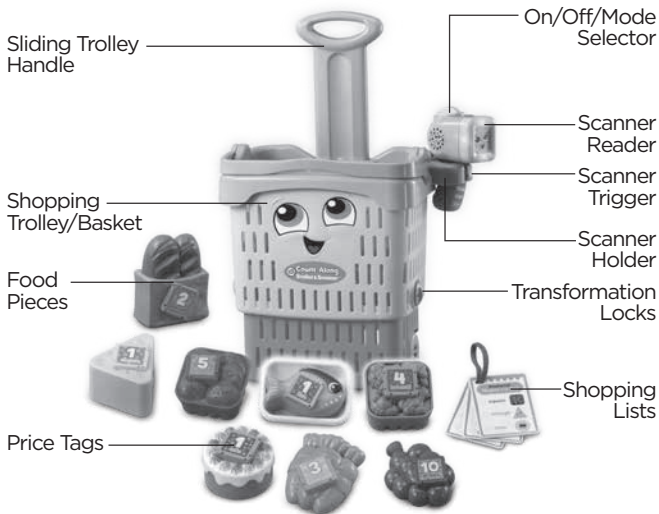

INCLUDED IN THE PACKAGE

 
- **Count-Along Basket & Scanner™**
- 3 double-sided shopping list cards with strap
- 8 food pieces
- Instruction Manual

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

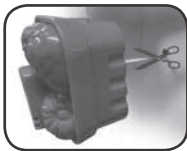


NOTE

Please cut and discard the cords before playing with the unit. The cords are not part of the product and should be discarded for your child's safety.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

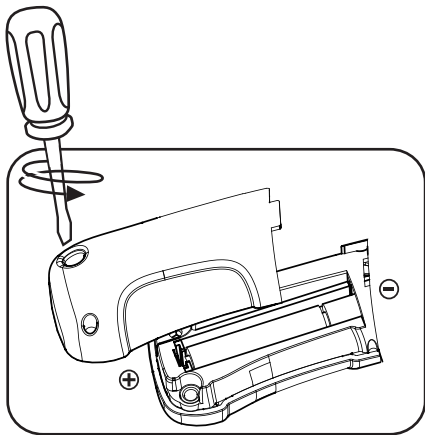

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

LeapFrog® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

PRODUCT FEATURES

1. On/Off Mode Selector

Slide the **On/Off Mode Selector** to turn the toy on and select the mode.



2. Scanner Trigger

Pull the **Scanner Trigger** to activate scanner sounds.



3. Food Pieces

Insert price tags into the square **Scanner Reader** (located on the front of the scanner) to trigger silly learning phrases and sounds. To detach from the scanner, gently pull the food out or press the **Scanner Trigger**.



4. Shopping Lists

Scan all the items on a **Shopping List** to play encouraging sounds and phrases.



5. Shopping Trolley/Basket

Pull the trolley or carry the basket for pretend shopping fun.



 
6. Sliding Trolley Handle

Slide the handle out of the basket to pull the trolley. The toy must be in trolley mode for the wheels to spin freely when pulled.



7. Transformation Locks

Activate the **Transformation Locks** to transform the trolley into a basket and back again. For your child's safety, only adults should transform the trolley/basket.

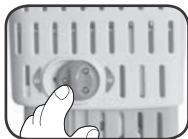

8. Scanner Holder

Insert the scanner into the **Scanner Holder** when not in use.



9. Automatic Shut-Off

To preserve battery life, the unit will automatically shut off after approximately 45 seconds without input. The unit can be turned on again by pressing the trigger, switching modes or inserting food price tags into the square **Scanner Reader**.

TOY TRANSFORMATION

1. For safety reasons, have an adult transform the basket. Locate the **Transformation Locks** on both sides of the trolley.



2. One at a time, press the buttons and slide to the right to the unlocked position.



3. Slide the unit up or down to transform to trolley or basket.



4. Once in the desired form, slide both **Transformation Locks** left to the locked position.



ACTIVITIES

1. Learn Mode

Change the **On/Off/Mode Selector** on the scanner to the magnifying glass icon. Insert price tags on the **Food Pieces** into the square **Scanner Reader** on the front of the scanner to hear food names, numbers, colours, shapes and melodies.

2. Counting Mode

Change the **On/Off/Mode Selector** on the scanner to the numbers icon. Instructions will tell how many items to scan. Insert price tags on the **Food Pieces** into the square **Scanner Reader** on the front of the scanner to scan and count food items.

3. Game Mode

Bargain bonanza! Change the **On/Off/Mode Selector** on the scanner to the star icon. The toy will describe different types of food. Scan the correct food as quickly as you can!

To increase the challenge, spread the **Food Pieces** further apart.

4. Shopping Lists

Scan all the items on any of the six **Shopping Lists** in order. Start with the items at the top of the list and move downwards. Properly scanning all the items on a list in order triggers rewarding sounds and phrases.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the program or activity stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **01702 200244** in the U.K. or email support@leapfrog.co.uk. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2021 LeapFrog Enterprises, Inc.
All rights reserved.
91-004008-001 (UK)