



**My Pal Scout  
Smarty Paws™**



 
**My Pal Violet  
Smarty Paws™**

## **Instruction Manual**

This guide contains important information. Please keep it for future reference.

# INTRODUCTION

Thank you for purchasing the **My Pal Scout Smarty Paws™/My Pal Violet Smarty Paws!** Cute, cuddly and customisable, this interactive plush lets you add your child's name and favourite things, activities and phrases. The touch-sensitive smarty paws encourage your child to interact with Scout/Violet and allow you and your child to enjoy playtime together.

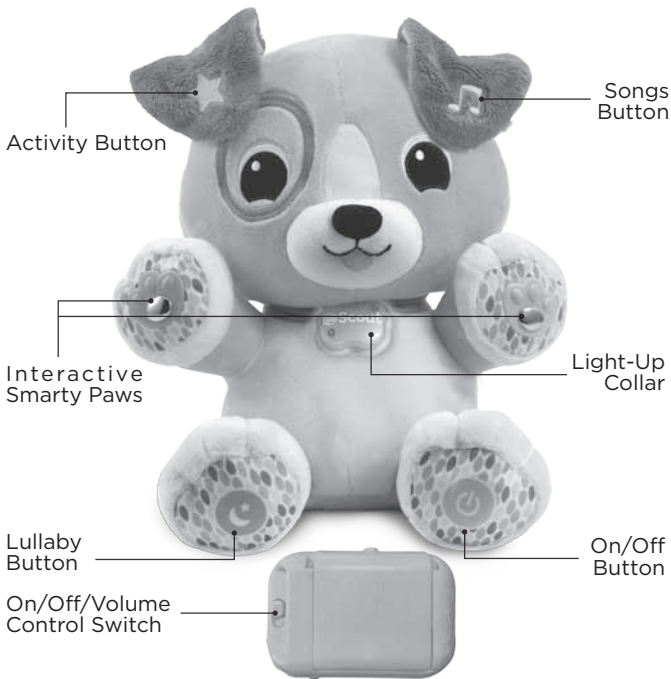

# INCLUDED IN THE PACKAGE

- 1 My Pal Scout Smarty Paws™/My Pal Violet Smarty Paws™!
- 1 cable (inside the battery box)
- 1 Quick Start Guide

## WARNING

All packing materials, including tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

# GETTING STARTED

## PERSONALISATION

### Step 1

Using a smartphone, tablet or computer with a 3.5mm headphone jack, go to [leapfrog.com/SmartyPaws](http://leapfrog.com/SmartyPaws). Follow the instructions to select your child's name and favourite things.

For a list of supported browsers, see System Requirements on the opposite side of this guide.



### Step 2

Open the hook-and-loop fastener on the back of Scout/Violet to access the battery box. Use a screwdriver to loosen the screw and slide open the battery box door to reveal the **Cable**. Slide the **On/Off/Volume Control Switch** to the On position.

When prompted by the website, connect the **Cable** in Scout's/Violet's battery box to the 3.5mm headphone jack or adapter on your smartphone, tablet or computer. Do not plug the **Cable** into peripheral or external accessories such as speakers, docks, etc. Follow the instructions on the website to begin the download.

### Step 3

When personalisation is complete, disconnect the **Cable** from your device and tuck the **Cable** back into the battery box. Close the battery box door and use a screwdriver to tighten the screw to secure. Close the hook-and-loop fastener over the battery box.

## BATTERY INSTALLATION

1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.



### WARNING

Adult assembly needed. Close the battery door and tighten the screw to secure before giving your child the toy.

## IMPORTANT: BATTERY INFORMATION

 
- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## ACTIVATE NORMAL PLAY MODE


This product is set to Try-Me mode in the package. To activate normal play mode, switch the **On/Off/Volume Control Switch** to (●) and then back to (🔊) to activate normal play mode.

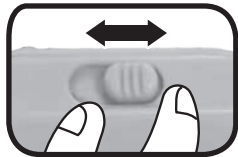

# PRODUCT FEATURES


## 1. On/Off Button

 Press the **On/Off Button** to wake up Scout/Violet and begin to play.

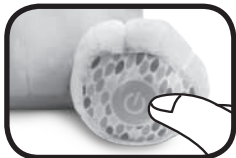


## 2. Interactive Smarty Paws

 Touch the **Interactive Smarty Paws** to play a musical activity that features three children's tunes.

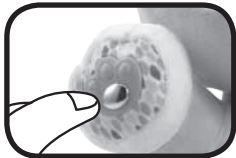


## 3. Lullaby Button

 Press the **Lullaby Button** once to hear five minutes of music. Press it twice to hear 10 minutes of music. Press it three times to hear 15 minutes of music.

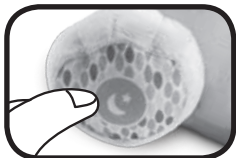

## 4. Activity Button

 Press the **Activity Button** to hear Scout/Violet talk about your child's favourite things, feeling words and explore mindfulness activities.

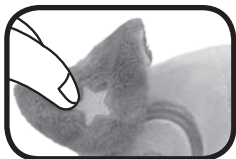

## 5. Songs Button

Press the **Songs Button** to play personalised songs and melodies.



# ACTIVITY

## 1. Interactive Smarty Paws

Scout's/Violet's **Interactive Smarty Paws** can be played by your child alone or in multiplayer mode.

To play in multiplayer mode, each person (such as you and your child) can touch one of Scout's/Violet's **Interactive Smarty Paws**. After the initial dialogue prompt plays, you can now tap your child's skin (nose, face, arm, etc.) with your other hand to create an interactive play circle. Continue to tap your child's skin to keep playing the musical activity.



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off by using the **On/Off/Volume Control Switch** on the battery box.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On by using the **On/Off/Volume Control Switch** on the battery box. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

### IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at 01702 200244 in the U.K. or email [support@leapfrog.co.uk](mailto:support@leapfrog.co.uk). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.



# SYSTEM REQUIREMENTS

PC: Microsoft Edge (latest version), Chrome™ browser (latest version), or Mozilla Firefox (latest version)

Mac Computer: Safari® browser (latest version), Chrome™ browser (latest version), or Mozilla Firefox (latest version)

iOS: iOS version 10 or higher with Safari® browser (latest version) or Chrome™ browser (latest version)

Android™: Android version 8.0 or higher with Chrome™ browser (latest version)

Microsoft Edge is a trademark of Microsoft Corporation; Android and Chrome are trademarks of Google LLC; Safari and Mac are trademarks of Apple, Inc.; and Mozilla and Firefox are trademarks of Mozilla Corporation. All trademarks, service marks, and company names are the property of their respective owners.

# CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

**NZ Customers:**

Phone: 0800 400 785

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## **Product Warranty/ Consumer Guarantees**

**UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

**Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [vtech.com.au/consumerguarantees](http://vtech.com.au/consumerguarantees) for further information.



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***[leapfrog.com](http://leapfrog.com)***

Read our complete warranty and legal policies  
online at [leapfrog.com/warranty](http://leapfrog.com/warranty)

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
TM & © 2022 LeapFrog Enterprises, Inc.

All rights reserved.  
IM-615000-001