



ABC & 123 Laptop™

 


Instruction Manual

This guide contains important information. Please keep it for future reference.

INTRODUCTION

Thank you for purchasing the **ABC & 123 Laptop™**! Learn and giggle as you practice letter identification, counting and basic computer skills with your new pal, Pixel!

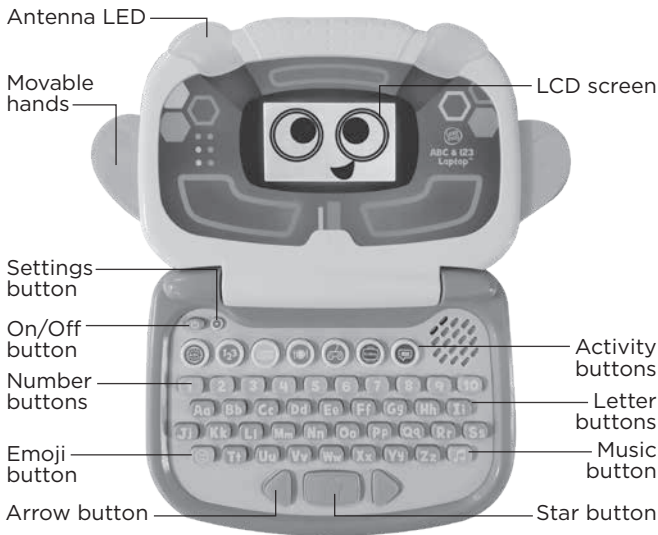

Closed

INCLUDED IN THIS PACKAGE

- **ABC & 123 Laptop™**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Quick Start Guide as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

 
NOTE

Il est conseillé de conserver ce guide de démarrage rapide car il comporte des informations importantes.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver or a coin to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

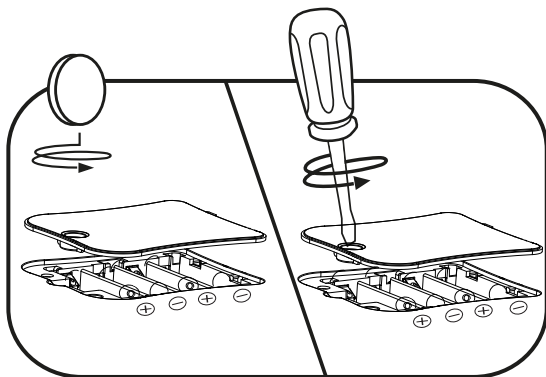



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove low batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. On/Off Button

Press the **On/Off Button** to turn the toy on and off.

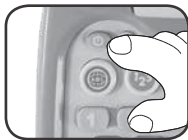

2. Settings Button

Press to adjust the volume and screen's contrast.



3. Activity Buttons

Press to choose a fun learning activity.



4. LCD Screen

The LCD Screen displays Pixel's face and the visuals for all the learning activities.



 
5. Movable Hands

Pixel's hands move and wiggle as you play.



6. Antennae LED

Pixel's antennae light up and flash as you interact with them.

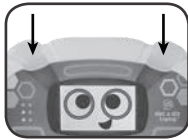

7. Number Buttons

Press the **Number Buttons** to activate fun number animations and phrases.



8. Letter Buttons

Press the **Letter Buttons** to activate silly letter animations and phrases.



9. Emoji Button

Press the **Emoji Button** to trigger emoji animations and sounds.



 
10. Music Button

Press the **Music Button** to play learning songs, melodies and classical music. There's even a simple Freeze Dance game!




11. Star Button

The **Star Button** is used as a confirmation button in certain activities. When no activity is in progress, it triggers fun phrases, mini-activities, music and songs.

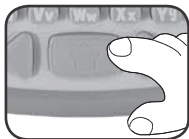

12. Arrow buttons

 The **Arrow Buttons** are used to choose answers in certain activities. When no activity is in progress, an arrow button triggers fun phrases, mini-activities, music and songs.

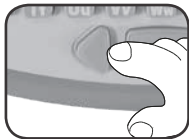

Activities

1. Letters

Help Pixel find letters based on their names and sounds or words based on their initial letter sounds.

2. Counting

Pixel needs your help! Kiss, tickle and high five them by pressing the correct buttons the correct amount of times. Listen to Pixel coo, giggle and sing as they count.

3. Typing

Type the correct letters to reveal the mystery word!

4. Snack Time

Count the snacks, then feed them to Pixel!

5. Letter Run

Press the star button to make Chip jump and collect letters to spell words. Watch out for the code bugs and remember to grab the gems!

6. Coding

Make Pixel happy by inputting three adorable actions into their simple code.

7. Text with Chip

Receive texts from Pixel's buddy, Chip, then text them back!

CARE & MAINTENANCE

1. Keep the toy and accessories clean by wiping it with a slightly damp cloth.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. and Canada, or email support@leapfrog.com. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	LeapFrog®
Model:	6151
Product Name:	ABC & 123 Laptop™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	2200 Powell St., Suite 500 Emeryville, CA 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2022 LeapFrog Enterprises, Inc.
All rights reserved.
IM-615100-003
Version:0