 




# Wooden AlphaPup™

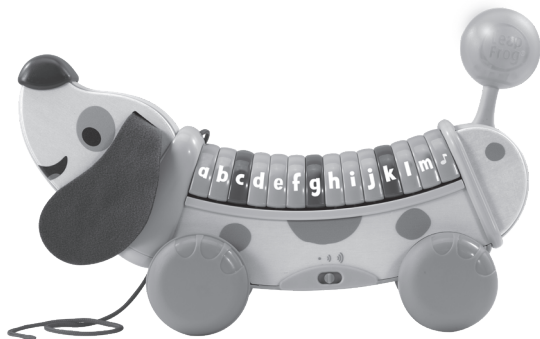

 
## Instruction Manual

This manual contains important information. Please save it for future reference.

# INTRODUCTION

Thank you for purchasing the **Wooden AlphaPup™!**

This playful pup is your child's new best friend with a wooden body and soft, floppy ears and a wagging, light-up tail. Explore phonics with letter buttons from A to Z. Pull the Wooden AlphaPup™ by the lead to hear sing-along songs and practise gross motor skills.

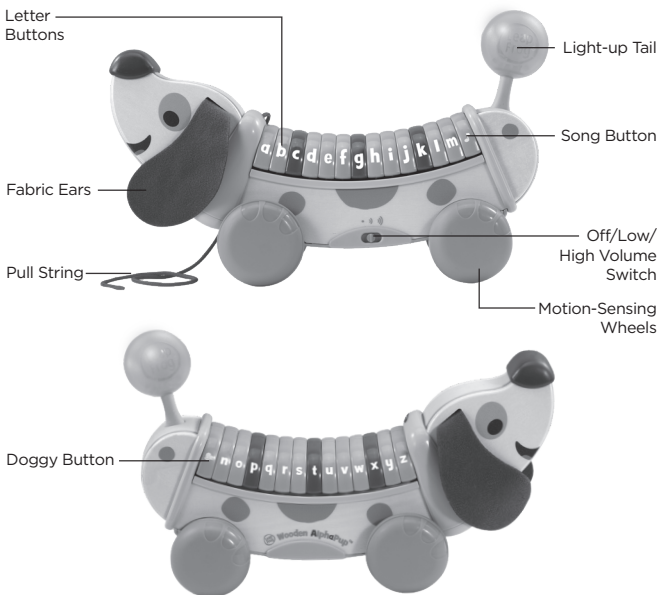

## INCLUDED IN THE PACKAGE

- **Wooden AlphaPup™**
- Quick Start Guide

### WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

### NOTE

Please save this Instruction Manual as it contains important information.

 
### NOTE

Please ask us about the availability of FSC Products.

## INSTRUCTIONS

### BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

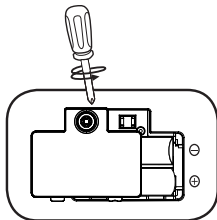

### WARNING :

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product

The crossed-out wheelie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

**LeapFrog® cares for the planet.**

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

**In the UK:**

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

 
**In Australia & New Zealand:**

Check with your local council for kerbside collections.

## PRODUCT FEATURES

### 1. Off/Low/High Volume Switch

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the Low **)** or High **)))** position. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off ●** position.

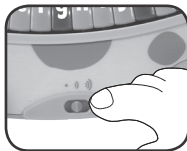

### 2. Letter Buttons

Press any **Letter Button** to hear the corresponding letter name, letter sound, and a word that starts with that letter.



### 3. Song Button

Press the **Song Button** to hear one of three learning songs.



#### 4. Doggy Button

Press the **Doggy Button** to hear fun doggy phrases and sounds.



#### 5. Automatic Shut-Off

To preserve battery life, the **Wooden AlphaPup™** will automatically shut off after approximately 60 seconds without input. The unit can be turned on again by pulling the pup or pressing any of the buttons.

### ACTIVITIES

 
#### 1. Button Play

Press the buttons to learn letter names and sounds or to hear songs and fun doggy phrases.



#### 2. Pull-Along Play

Simply pull **Wooden AlphaPup™** to play one of three learning songs. Continue pulling to keep the song playing.

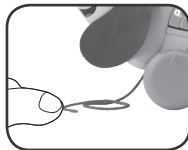

**Note:** Songs are activated by rotating the rear **Motion-Sensing Wheels**, which must maintain contact with the play surface.



# SONG LYRICS

## Alphabet Song

A, B, C, D,  
E, F, G,  
H, I, J, K,  
L, M, N, O, P,  
Q, R, S,  
T, U, V,  
W, X, Y and Z!

## Let's Take a Walk

Let's take a walk in the fresh air,  
Outside the sun shines brightly everywhere,  
Smelling the flowers, sniffing the trees,  
Watching the birds, butterflies and bees.

## 1-2 Rhyme

1-2, chew on a shoe.  
3-4, bark at the door.  
5-6, fetch some sticks.  
7-8, open the gate.  
9-10, find a friend to play with me,  
and then I'll count to ten again!



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit is still not working properly, install a brand new set of batteries.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.





## CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

### **UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

### **Australian Customers:**

Phone: 1800 862 155

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

### **NZ Customers:**

Phone: 0800 400 785

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## PRODUCT WARRANTY/ CONSUMER GUARANTEES

### **UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

### **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [leapfrog.com/en-au/legal/warranty](http://leapfrog.com/en-au/legal/warranty) for further information.



*Visit our website for more  
information about our products,  
downloads, resources and more.*

***leapfrog.com***

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
TM & © 2022 LeapFrog Enterprises, Inc.  
All rights reserved.

**Printed in China.**

IM-615200-001

Version:0