



Let's Record! Music Player™



Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Let's Record! Music Player™**! Sing and boogie as you explore letters, numbers, classical music and your inner superstar!



INCLUDED IN THE PACKAGE

- **Let's Record! Music Player™**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes

Unlock the Packaging Locks

- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

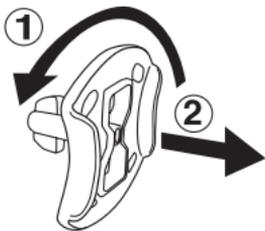

Activate Normal Play Mode


This product is in Try-Me mode in the packaging. To activate normal play mode, please complete the following steps:

1. Slide the On/Off Switch to the Off position.
2. Slide the On/Off Switch to the On position to activate normal play mode.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

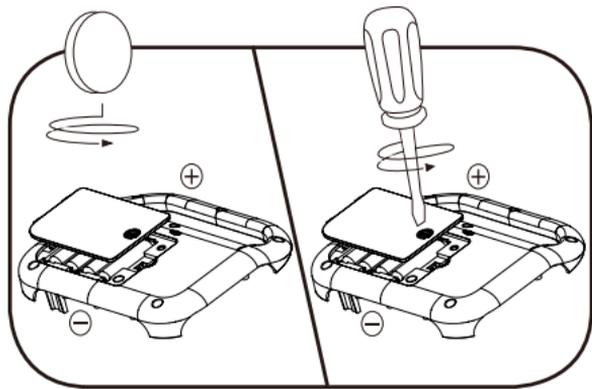

⚠ WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

⚠ ATTENTION:

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

PRODUCT FEATURES

1. On/Off Switch

Slide the **On/Off Switch** to turn the toy on and off.




2. Record Button

Press the **Record Button** and then listen to the instructions to record your own audio. Each numbered button can save a three-minute piece of audio.




3. Volume Control

Rotate the **Volume Dial** up or down to adjust the volume level.

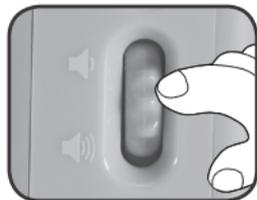


4. Headphone Jack

Insert headphones (not included) for on-the-go listening fun.

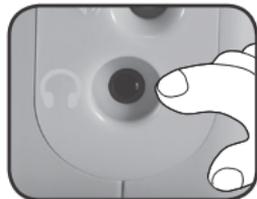


5. Mode Dial

Turn the **Mode Dial** to choose a mode. After selecting a mode, press a **Song Button** to play an individual song or press the **Play/Pause Button** to play all the songs in order.

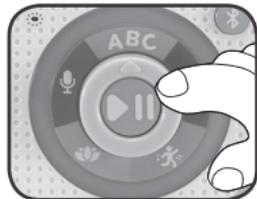

6. Play/Pause Button

Press to hear a selected mode, song, melody or recording. Press again to pause.

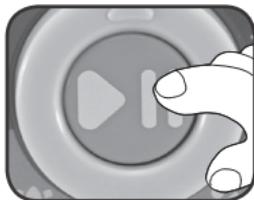


7. Bluetooth Button

Press and hold for three seconds to activate **Bluetooth**® wireless technology. Open your personal Bluetooth-enabled device to initiate pairing. To clear any previous device connections, press and hold the **Play/Pause Button** for five seconds.




8. Song Buttons

Press to play a song, melody or recording.

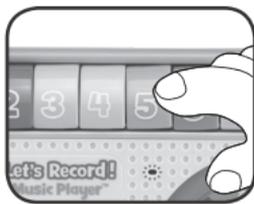

9. Microphone

Speak into the microphone when using the record feature.

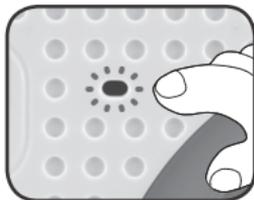

ACTIVITIES

1. Learning Songs

Turn the **Mode Dial** to Learning Songs **ABC** and press a **Song Button** to select from ten educational songs.



2. All Star Classics

Turn the **Mode Dial** to All Star Classics and press a **Song Button** to select from ten favorite children's songs. ★



3. Active Songs

Turn the **Mode Dial** to Active Songs and press a **Song Button** to select from ten active movement songs. 🏃



4. Relaxing Music Mode

Turn the **Mode Dial** to Relaxing Music and press a **Song Button** to select from ten lullabies and classical music pieces. 🌸



5. Record and Play

Turn the **Mode Dial** to Record and Play 🎤 and press a **Song Button** to select from your recorded audio.



SONGS AND MELODIES

Learning Songs

1. The Alphabet Song
2. Counting 1 to 10
3. All the Colors of the Rainbow
4. Love Grows
5. The Days of the Week
6. Wash Your Hands
7. Five Little Birdies
8. Clean Up
9. On the Farm We Can Play
10. What Is the Weather Like Outside Today?

All Star Classics

1. Old MacDonald Had a Farm
2. Twinkle, Twinkle, Little Star
3. Bingo
4. The Wheels on the Bus
5. Down by the Bay
6. I'm a Little Teapot
7. The Muffin Man
8. London Bridge
9. Row, Row, Row Your Boat
10. Five Little Speckled Frogs

Active Songs

1. Animal Rock
2. Can You Hear?
3. Animal Jive
4. Scrub That Body
5. Animal Sounds
6. Let's Go on a Stroll Together
7. If You're Happy and You Know It
8. Dem Bones
9. Let's Do the Funky Bear
10. Tick Tock

Relaxing Music

1. Hush Little Baby
2. Beethoven's "Ode to Joy"
3. Brahms' "Lullaby"
4. Pachelbel's "Canon in D"
5. Bach's "Minuet in G"
6. Ocean Waves - Music of the Sea
7. Vivaldi's "Spring"
8. Frère Jacques
9. Beethoven's "Für Elise"
10. Goodnight ABC's

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit is still not working properly, install a brand new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6155
Product Name: Let's Record! Music Player™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell St., Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Bluetooth Statement

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by VTech is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

(1) This device may not cause interference.

(2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

(1) L'appareil ne doit pas produire de brouillage;

(2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



***Visit our website for more
information about our products,
downloads, resources and more.***

***leapfrog.com
leapfrog.ca***

**Read our complete warranty policy online at
leapfrog.com/warranty
leapfrog.ca/warranty**

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2022 LeapFrog Enterprises, Inc.
All rights reserved.
IM-615500-000
Version:0