



# Clean Sweep Mop & Bucket

 


## Instruction Manual

This manual contains important information. Please save it for future reference.

# INTRODUCTION

Thank you for purchasing the **Clean Sweep Mop & Bucket!** Mop, sweep, spray and wipe as you boogie to the music. Cleaning and counting has never been so much fun!

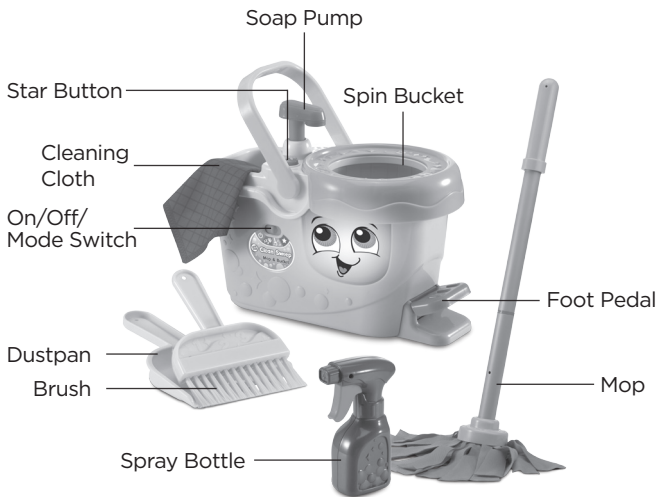

# INCLUDED IN THE PACKAGE

- Clean Sweep Mop & Bucket



Bucket base



 
Green bucket ring



Spray bottle



2 mop pieces

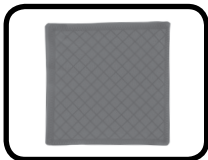

Cloth



Dustpan



Brush

- Quick Start Guide

## WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

### Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

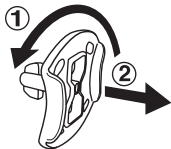

# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver or coin to loosen the screw, and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

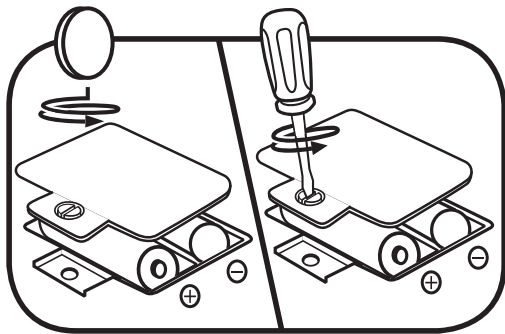

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES:**

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.



### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Help protect the environment by disposing of your product or batteries responsibly.

### **LeapFrog® cares for the planet.**

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

#### **In the UK:**

Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

#### **In Australia & New Zealand:**

Check with your local council for kerbside collections.

 
# ASSEMBLY

With the **LeapFrog® Clean Sweep Mop & Bucket** safety comes first. To ensure your child's safety, adult assembly is required. Once assembled, the unit cannot be disassembled.

1. Click the green ring onto the bucket.



2. Snap the top and bottom halves of the mop together. You will hear a click when they are firmly connected.

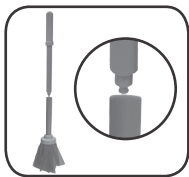

## NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.



# PRODUCT FEATURES

## 1. On/Off/Mode Switch

Slide to choose between Colours and Counting 123, Dance and Clean 123, and Pretend ★ modes. Slide the **On/Off/Mode Switch** to **Off** ⏻ to turn the toy off.



## 2. Soap Pump

Push down on the **Soap Pump** to hear silly sounds and learning phrases.



 
## 3. Foot Pedal

Insert the **Mop** into the **Bucket**, then step on the **Foot Pedal** to trigger the **Bucket's** spinning action and sound effects.



## 4. Star Button

Press the **Star Button** to initiate energetic learning, dancing and pretend play activities.

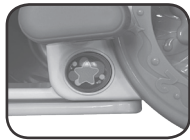

# ACTIVITIES

## 1. Colours and Counting Mode

Move the **On/Off/Mode Switch** to the number icons 1, 2, 3 to hear goofy chore scenarios. Find the correct cleaning tools based on the colour descriptions, then groove to one of three learning songs as you sweep, mop, spray and wipe.

Pressing the **Soap Pump** or **Foot Pedal** in this mode allows you to hear funny sounds and explore counting.



## 2. Dance and Clean Mode

Move the **On/Off/Mode Switch** to the music notes to start one of the three dance-and-clean songs. Follow the directions as you hop, spin, clap and count! Pressing the **Soap Pump** in this mode plays fun sounds and learning phrases. Pressing the **Foot Pedal** plays spinning sounds and learning songs.



## 3. Pretend Mode

Move the **On/Off/Mode Switch** to the star icon to receive kooky pretend play scenarios. Boogie to the music and let your imagination run wild as you complete nutty pretend tasks. Pressing the **Soap Pump** or **Foot Pedal** in this mode plays fun sounds and phrases.



## **SONG LYRICS**

### **Song 1**

Do some chores!  
Join the club!  
It's time to clean!  
A scrub-a-dub-dub!

### **Song 2**

Clean up, clean up - hooray, hooray!  
Everyone helps - every day!

### **Song 3**

The cloth is red and the mop is green!  
The bottle is purple; now it's time to clean!

### **Song 4**

OK! Let's mop!  
Mop to the left.  
Mop to the right.  
Mop all day!  
Mop all night!  
Hop three times!  
Boogie, boogie, boogie!  
Boogie, boogie, boogie!  
Boogie on down,  
Yeah, boogie on down!  
Mop up!  
Mop down!  
Mop fast!  
Turn around!  
And freeze! ALL clean!  
I'm outta here!

## **Song 5**

OK! Let's sweep!  
Sweep to the left.  
Boogie to the right.  
Sweep all day!  
Boogie all night!  
Clap three times!  
Boogie, boogie, boogie!  
Boogie, boogie, boogie!  
Boogie on down,  
Yeah, boogie on down!  
Sweep up!  
Boogie down!  
Sweep slow!  
Turn around!  
And freeze! ALL clean!  
I'm outta here!

## **Song 6**

OK! Let's wipe!  
Wipe to the left.  
Wipe to the right.  
Boogie all day!  
Boogie all night!  
Stomp three times!  
Boogie, boogie, boogie!  
Boogie, boogie, boogie!  
Boogie on down,  
Yeah, boogie on down!  
Wipe up!  
Wipe down!  
Wipe slow!  
Turn around!  
And freeze! ALL clean!  
I'm outta here!

# CARE & MAINTENANCE

1. Keep the toy and accessories clean by wiping them with a slightly damp cloth.
2. Enjoy pretend cleaning, but do not use with real water.
3. Keep the unit out of direct sunlight and away from direct heat sources.
4. Remove the batteries if the unit will not be in use for an extended period of time.
5. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

# TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

# CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [leapfrog.com/en-au/legal/warranty](http://leapfrog.com/en-au/legal/warranty) for further information.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***leapfrog.com***

LeapFrog Enterprises, Inc.,  
A subsidiary of VTech Holdings Limited.  
TM & © 2022 LeapFrog Enterprises, Inc.  
All rights reserved.  
**IM-615800-001**  
Version:0