



ABCs & Activities Wooden Table™



Instruction Manual

This manual contains important information. Please save it for future reference.

REMOVING PRODUCT FROM PACKAGE

 
Use a screwdriver (not included) to remove **the two packaging screws (see pg. 6 image)** located on the underside of the table.

Discard screws before giving toy to child.

INTRODUCTION


Thank you for purchasing the **ABCs and Activities Wooden Table™**!

Explore letters, animals, music and more while sitting or standing. For sit-down play, place the table insert Activity Center side up to build motor skills. When crawlers become cruisers, place the insert inside the table frame to encourage standing and walking. When your toddler is ready, flip the insert over and kids will explore letters, animals, music and more with colorful, touch-sensitive pictures.

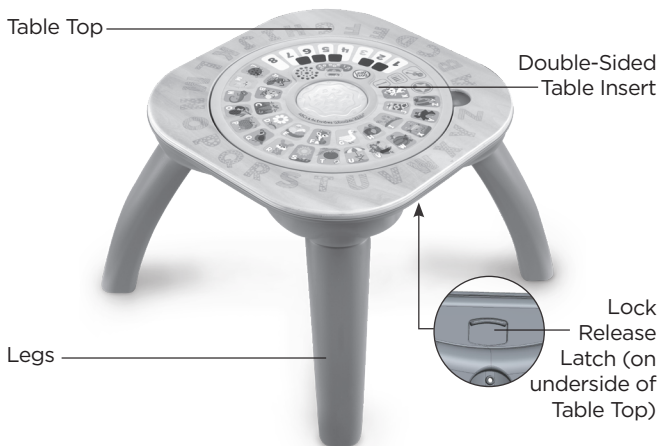


Double-Sided Table Insert

 Letter Center Side

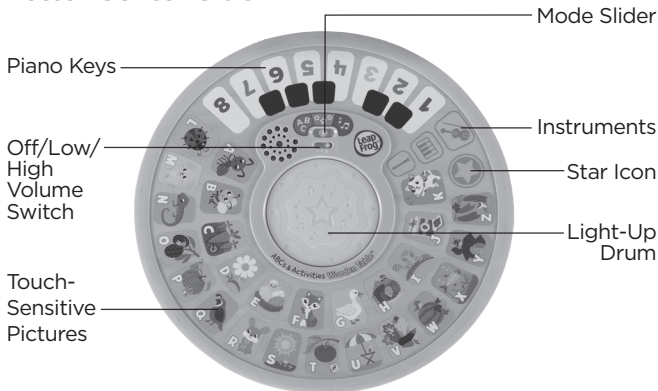

Activity Center Side

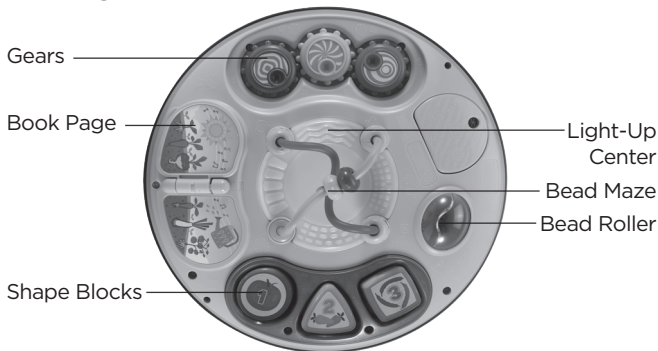 

INCLUDED IN THE PACKAGE


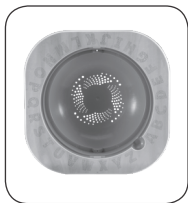 


Table top

 

4 legs

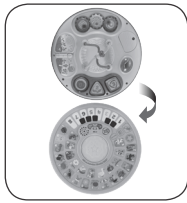

Double-sided
table insert



Circle block



Triangle block



Square block

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

NOTE

Please ask us about the availability of FSC Products.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

NOTE

 
Merci de nous consulter pour connaître la disponibilité des produits FSC.

REMOVE AND DISCARD PACKAGING SCREWS BEFORE USE

Please use a screwdriver to remove the two screws located on the underside of the table. Screws are packing materials and should be discarded for your child's safety.

Retirer et jeter les vis d'emballage avant utilisation

Veuillez utiliser un tournevis pour retirer les deux vis au bas de la table. Les vis sont des matériaux d'emballage qui doivent être jetés pour la sécurité de l'enfant.

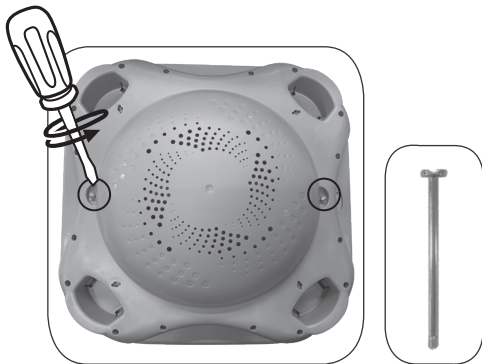

ASSEMBLY

With the **ABCs & Activities Wooden Table™**, safety comes first. To ensure your child's safety, adult assembly is required.

If your little one is *crawling*, place the **Double-Sided Table Insert** onto the floor with the **Activity Center** side facing upwards for seated play.

If your little one is *starting to stand*, insert the **Legs** into the **Table Top** and place the **Double-Sided Table Insert** into the **Table Top** to encourage standing up and walking.

1. Lay the **Table Top** down on a flat surface with the underside facing up. Next, insert and firmly snap the four **Legs** into the slots at each of the four corners.

Note: Once the **Legs** are assembled to the **Table Top**, they can not be disassembled.



2. Flip the table over so it's standing on the four **Legs**. Next, place the **Double-Sided Table Insert** into the **Table Top**. Now, the table is ready for play.



3. To switch sides of the **Double-Sided Table Insert**, first slide and hold the **Lock Release Latch** on the underside of the **Table Top**.



4. Then, remove the **Double-Sided Table Insert**, flip the insert over and place it into the **Table Top**. Repeat these steps to switch back.

 
NOTE: The **Off/Low/High Volume Switch** is located on the **Letter Center** side only.



GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the **Activity Center** side of the insert, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

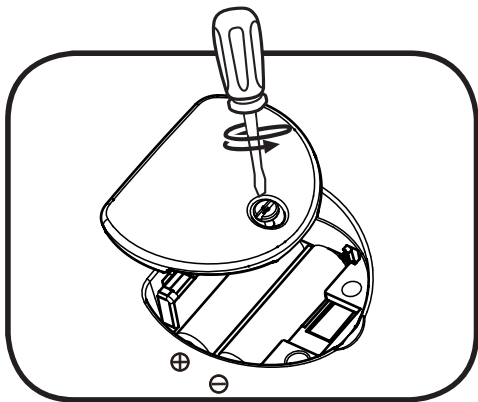



WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

To turn the unit On, find the **Off/Low/High Volume Switch** on the **Letter Center** side of the **Double-Sided Table Insert** and slide the **Off/Low/High Volume Switch** to the Low » or High » position. To turn the unit Off, slide the **Off/Low/High Volume Switch** to the Off ● position.

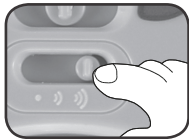

2. Double-Sided Table Insert

Select either the **Activity Center** or **Letter Center** side of the **Double-Sided Table Insert** to explore a variety of activities. (See the Assembly instructions above for details on flipping and securing the table insert.)

 
Activity Center Side

Turn the **Book Page**, sort the **Shape Blocks**, spin the **Bead Roller**, rotate the **Gears** and slide the beads along the **Bead Maze**. Colorful lights will flash and music will play.



Letter Center Side

Touch the colorful **Touch-Sensitive Pictures** to explore letters and words and play music. Hear drum sounds by tapping the **Light-Up Drum** in the center.

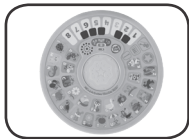

3. Automatic Shut-Off

 
To preserve battery life, the **ABCs & Activities Wooden Table™** will automatically shut off after approximately 50 seconds without input. The unit can be turned on again by turning the **Book Page**, inserting or pressing any of the three **Shape Blocks**, sliding the **Mode Selector**, or tapping the **Light-Up Drum**.

ACTIVITIES

Activity Center Side


1. Shape Blocks

Sort and place the **Shape Blocks** into their matching slots. Press each block to hear about colors, shapes, vegetables and numbers. Music will play and colorful lights will flash.

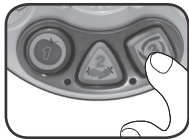


2. Book Page

 Turn the **Book Page** to hear a garden story and phrases about growing vegetables. Turn the page back to hear a garden song and four children's melodies.

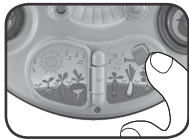

3. Gears, Bead Roller and Bead Maze

 Turn the three **Gears**, spin the **Bead Roller** to watch the beads bounce inside, or slide the beads around the **Bead Maze** to build fine motor skills.

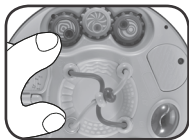

Letter Center Side

1. Mode Slider

Slide the **Mode Slider** to choose from Letters and Words, Garden and Music modes.

Letters and Words – Tap the **Touch-Sensitive Pictures** to explore letter names and sounds, plus words that begin with each letter. Tap the **Light-Up Drum** to count to ten or play the **Piano** while exploring numbers.

 
Garden – Tap the **Touch-Sensitive Pictures** to hear phrases about gardening, animals, counting and colors while hearing fun sounds. Tap the **Light-Up Drum** or play the **Piano** while exploring colors as the drum lights up in the matching color.



Music – Touch an **Instrument** to change the **Piano Keys** to flute or violin notes. Tap the **Touch-Sensitive Pictures** to hear fun sounds. Tap the **Star Icon** to start a jam-along activity and make your own music.

2. Star Icon

In Letters and Words mode, touch the **Star Icon** to hear three songs. In Garden mode, touch it to hear ten childrens' tunes. In Music mode, touch it to start playing one of three tunes.

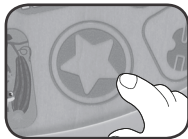

3. Instruments and Piano Keys

Touch any of the eight **Piano Keys** to play piano notes. In Letters and Words mode, touch to hear the note, plus the numbers sung in a scale. In Garden mode, tap to hear the note, plus colors sung in a scale. In Music mode, tap to hear the note only. If you touch one of the **Instruments**, it plays the instrument name and a musical riff. It also changes the sounds the **Piano Keys** play from piano to flute or violin.



4. Light-Up Drum

Tap the **Light-Up Drum** to hear numbers and count along up to ten in Letters and Words mode. In Garden Mode, tap to hear colors as the drum lights up in the matching color. In Music Mode, tap to hear drum beats with colored lights.



MELODY LIST

1. The Itsy-Bitsy Spider
2. The Farmer in the Dell
3. Mary Had a Little Lamb
4. B-I-N-G-O
5. Are You Sleeping?
6. Bach's Minuet in G
7. Ode to Joy
8. Vivaldi's Spring
9. A Tisket, A Tasket
10. Row, Row, Row Your Boat

SONG LYRICS

Intro Song

Pick yourself up and come and play!
We're learning all the letters,
Yeah, learning all the letters today!

Garden Song

Let's grow a garden.
We'll start by planting seeds.
Sunshine and water,
is all our garden needs.

Alphabet Song

A, B, C, D, E, F, G,
H, I, J, K,
L, M, N, O, P,
Q, R, S, T, U, V,
W, X, Y & Z

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6172
Product Name: ABCs & Activities Wooden Table™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell St., Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com
leapfrog.ca

**Read our complete warranty policy online at
*leapfrog.com/legal***

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2023 LeapFrog Enterprises, Inc.
All rights reserved.
IM-617200-000
Version:0