



Build-a-Slice Pizza Cart™

 


Instruction Manual


This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Build-a-Slice Pizza Cart™**! Explore counting, colors and even some Italian phrases while making, baking and delivering your own pretend pizzas! Ding! Ding! Order up!

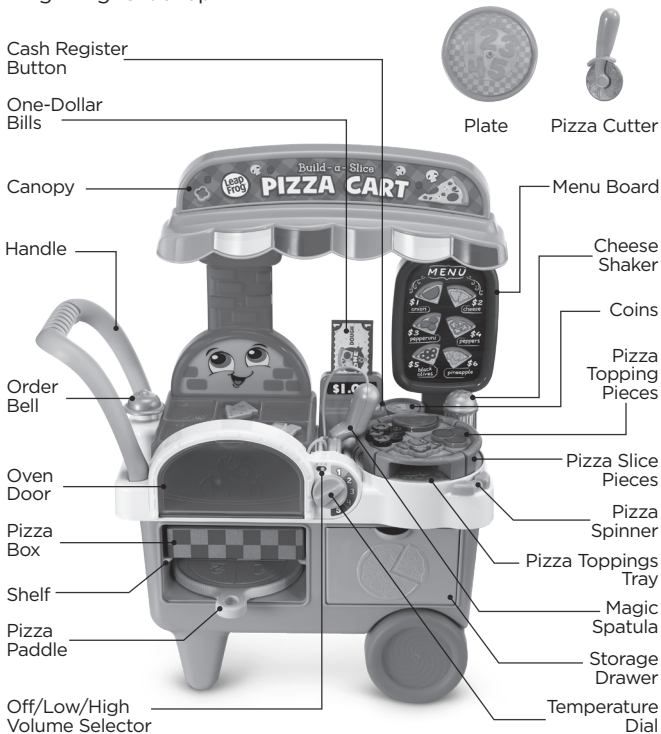

INCLUDED IN THE PACKAGE

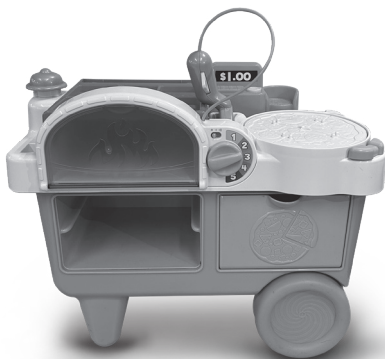 

1 Build-a-Slice Pizza Cart™



 
1 handle



1 canopy




1 menu board

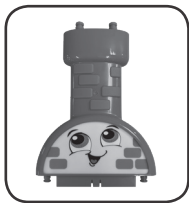

1 chimney



 
4 pizza slices

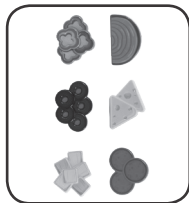

6 pizza toppings



 10 one-dollar bills

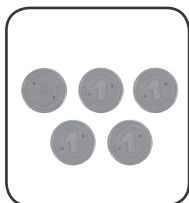

5 coins



1 plate



1 pizza cutter



1 cheese shaker



1 pizza paddle



1 pizza box

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

 
NOTE :

After removing from packaging, wipe all the included pieces using a slightly damp cloth. Wash the **Pizza Cutter**, **Plate** and the **Oven Paddle** thoroughly before and after use. To avoid damaging the electronics, do not submerge the items in water or expose them to excessive moisture.

GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

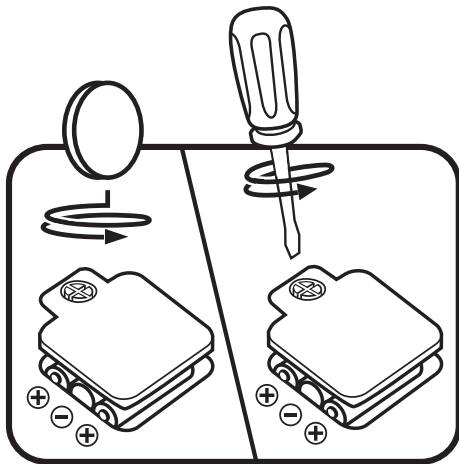



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.


ASSEMBLY

With the **Build-a-Slice Pizza Cart™** safety comes first. To ensure your child's safety, adult assembly is required.

1. Insert the **Chimney** and **Menu Board** firmly into the top of the **Pizza Cart**.

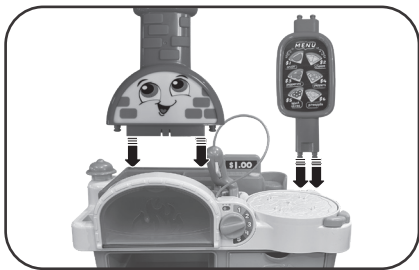

2. Attach the **Canopy** onto the **Chimney** and **Menu Board**.

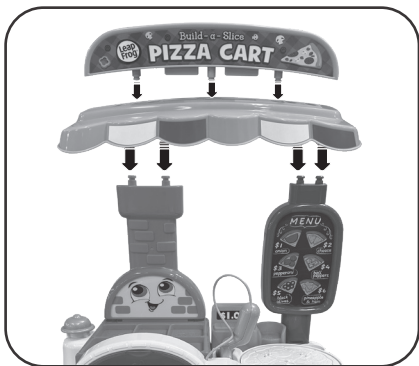 


3. Insert the **Handle** into the top of the **Pizza Cart**.



LABEL APPLICATION

 Please securely adhere the labels to the cart as indicated below. Match the label numbers to the corresponding numbered spots on the cart. Note: Two spots on the **Canopy** will not receive labels. They are intended to remain green.

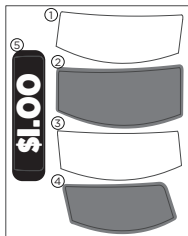

PRODUCT FEATURES

 
1. Off/Low/High/Volume Selector

Slide the **Off/Low/High/Volume** Selector to turn the toy on and to adjust the volume.




2. Magic Spatula

Place a **Pizza Topping** on a **Pizza Slice** and then scoop it with the **Magic Spatula** to hear learning phrases, silly phrases, melodies and short songs.

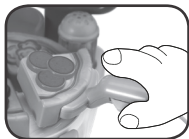

3. Order Bell

 Press the **Order Bell** to receive pizza orders.

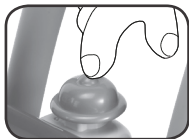


4. Pizza Spinner

Slide the arrows to the right to rotate the **Pizza Spinner** and activate learning songs and melodies.



5. Oven Dial

 Turn the **Oven Dial** to hear number songs, numbers in English and Italian and silly phrases.

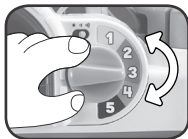

6. Pizza Topping Tray

Look at the images on the tray and then sort the toppings into their correct spots. The tray is non-electronic and doesn't play any audio.



7. Menu Board

Look at the **Menu Board** to see the prices of the different pizza slices. In itself, the **Menu Board** is non-electronic, but pressing the **Order Bell** will play different pizza orders. Certain orders will ask kids to reference the **Menu Board** and then make slices of pizza that cost specific amounts.



 
8. Cash Register Button

Press the **Cash Register Button** to count to 10. Reaching 10 plays silly phrases and farewell phrases in Italian.



9. Oven Door

Open and close the **Oven Door** to hear fun sounds, fun phrases and vocabulary phrases.

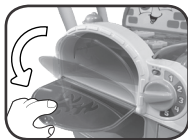

10. Cheese Shaker

The **Cheese Shaker** is non-electronic but periodically the child will be asked to add a certain amount of cheese sprinkles to a pizza slice. The cart will then automatically count to the requested number while playing sprinkle sounds.



11. Pizza Box Shelf

The pizza box **Shelf** is the perfect width to store the **Pizza Box**.



12. Automatic Shut Off

To save power, the **Build-a-Slice Pizza Cart™** shuts down after about 30 seconds without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Order Bell

Pressing the **Order Bell** triggers a range of pizza slice orders. Possible orders include making a slice of pizza:

- Based on its food topping name
- Based on its food topping color
- Based on its food topping shape
- Based on its cost as listed on the menu board
- Based on the type of crust.
 - The child will be asked to make any type of pizza and then will be instructed to bake it at a certain temperature
- That is the “chef’s choice”.
 - The child can be creative and put any type of pizza into the oven
- For delivery.
 - The child will be asked to make any type of pizza, place it into the box and then press the cash register button a certain amount of times to ring it up
- That is “perfectly baked”.
 - The child will be asked to make any type of pizza and then will be instructed to open the oven door when the cart counts to a certain number

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity**47 CFR § 2.1077 Compliance Information**

Trade Name: LeapFrog®
Model: 6173
Product Name: Build-a-Slice Pizza Cart™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell St., Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com
leapfrog.ca

**Read our complete warranty policy online at
*leapfrog.com/legal***

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2023 LeapFrog Enterprises, Inc.
All rights reserved.
IM-617300-000
Version:0