



Learn & Groove[®] Jazzy Saxophone

 


Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Learn & Groove® Jazzy Saxophone**. Enjoy music and early learning with the features and playful tunes of this toy. Turn the dial to explore colors, numbers, jazz-inspired music and the sounds of 5 different musical instruments, and also fun cat meow sounds. Press the numbered music keys to play musical notes and blow into the mouthpiece to play a jazzy flourish and create a colorful light show. Follow the included double-sided music cards to play four familiar melodies.

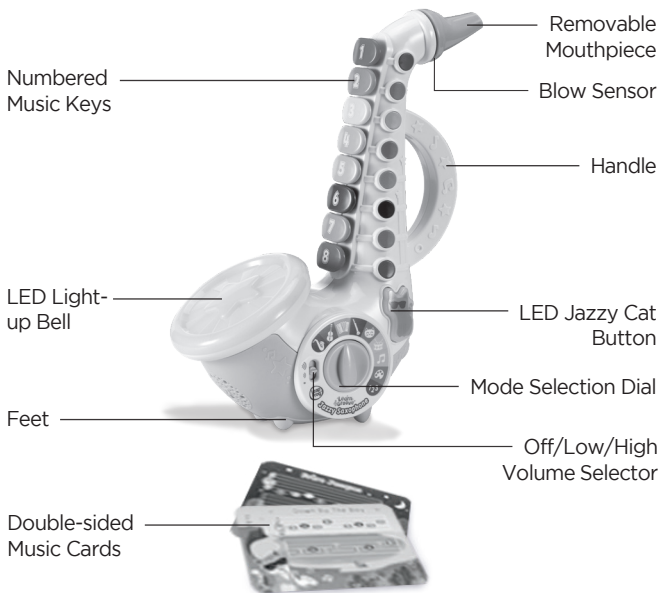

INCLUDED IN THE PACKAGE

- **Learn & Groove® Jazzy Saxophone**
- Removable Mouthpiece
- 2 Double-sided Music Cards
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

 
NOTE: The **Learn & Groove® Jazzy Saxophone** uses IR technology that may not work well in full sunlight conditions. Please do not use the toy in direct sunlight.

NOTE : Ce jouet fonctionne grâce à une technologie infrarouge dont l'efficacité peut être altérée en cas d'exposition directe à la lumière du soleil. Nous vous recommandons de ne pas utiliser ce jouet en extérieur.

INSTRUCTIONS

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old battery by pulling up on one end of the battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

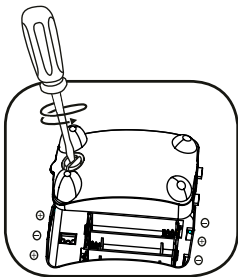

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION




- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

 
1. Off/Low/High Volume Selector

Slide the selector to **Low**  or **High**  to turn the device on and select the desired volume. To turn the unit off, slide the selector to the **Off**  position.



2. Mode Selection Dial

Turn the **dial** to choose among saxophone, bass, accordion, clarinet, cat meow, drums, jazz band, colors and numbers.

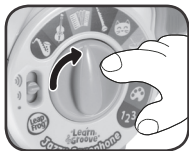

3. LED Light-up Bell

Blow into the saxophone or press the numbered music keys to create a light show in the saxophone's **bell**.



 
4. LED Jazzy Cat Button

Press the **LED Jazzy Cat Button** to hear Jazzy Cat and jazz-inspired music. Every mode has a different mix.



5. Blow Sensor & Removable Mouthpiece

Blow into the green **mouthpiece** to trigger jazz music and flourishes. To remove, pull with some force. Clean with soap and water. Make sure the **mouthpiece** is dry before inserting on the saxophone.

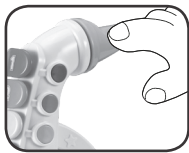


6. Numbered Music Keys

Press any of the 8 **keys** to hear musical notes while in instrument modes and hear colors or numbers while in learning modes.



7. Handle

 The built-in **handle** on the **Learn & Groove® Jazzy Saxophone** makes it easy to hold and play or blow in mouthpiece at the same time.

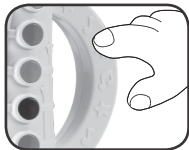

8. Feet

Learn & Groove® Jazzy Saxophone features 4 **feet** on the bottom of the bell for sitting upright on hard surfaces.

9. Automatic Shut Off

To preserve battery life, the **Learn & Groove® Jazzy Saxophone** will automatically shut off after approximately 60 seconds without input. The unit can be turned on again by pressing any button or turning the dial.

10. Double-sided Music Cards

Follow the notes using the color and number cues on the **music cards** to play four different classic melodies.

Activities

1. Instrument Modes: Turn the dial to select an instrument and press keys to play.
2. Jazz Band Mode: Play along as part of a jazz ensemble, then take your turn with a solo. Jazz-inspired tunes loop with a call-and-response play pattern designed to engage children in musical play.
3. Numbers Mode: Press the numbered music keys to hear numbers and see the LED bell light up.
4. Colors Mode: Press the numbered music keys to hear color names and see each corresponding color in the LED bell.
5. Jazzy Cat Mode: Press the Jazzy Cat Button to hear Jazzy Cat talk, sing and listen to music.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. To remove the green mouthpiece, pull with some force. Clean with soap and water. Make sure the mouthpiece is dry before inserting on the saxophone.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6188
Product Name: Learn & Groove® Jazzy Saxophone
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com
leapfrog.ca

**Read our complete warranty policy online at
*leapfrog.com/legal***

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2024 LeapFrog Enterprises, Inc.
All rights reserved.
IM-618800-000
Version:0