



Learn & Groove Jazzy Saxophone

 


Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Learn & Groove Jazzy Saxophone**. Enjoy music and early learning with the features and playful tunes of this toy. Turn the dial to explore colours, numbers, jazz-inspired music and the sounds of 5 different musical instruments, and also fun cat meow sounds! Press the numbered music keys to play musical notes and blow into the mouthpiece to play a jazzy flourish and create a colourful light show. Follow the included double-sided music cards to play four familiar melodies.

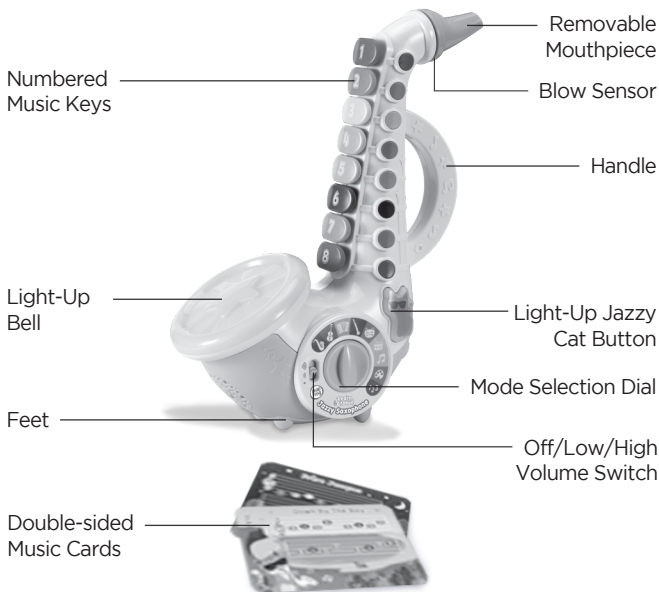

INCLUDED IN THE PACKAGE

- **Learn & Groove Jazzy Saxophone**
- Removable Mouthpiece
- 2 Double-sided Music Cards
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

NOTE: The **Learn & Groove Jazzy Saxophone** uses IR technology that may not work well in full sunlight conditions. Please do not use the toy in direct sunlight.

 
INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

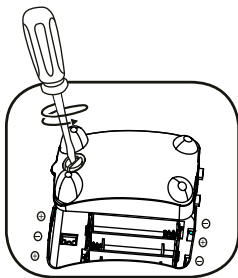

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

Slide the switch to **Low** 📶 or **High** 📶 to turn the device on and select the desired volume. To turn the unit off, slide the switch to the **Off** ● position.



2. Mode Selection Dial

Turn the **Dial** to choose between saxophone, bass, accordion, clarinet, cat meow, drums, jazz band, colours and numbers.



3. Light-Up Bell

Blow into the saxophone or press the numbered music keys to create a light show in the saxophone's **Bell**.



 
4. Light-Up Jazzy Cat Button

Press the **Light Up Jazzy Cat Button** to hear Jazzy Cat and jazz-inspired music. Every mode has a different mix.




5. Blow Sensor & Removable Mouthpiece

Blow into the green **Mouthpiece** to trigger jazz music and flourishes. To remove, pull with some force. Clean with soap and water. Make sure the **Mouthpiece** is dry before inserting on the saxophone.

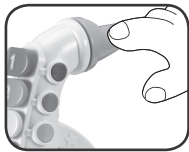


6. Numbered Music Keys

 Press any of the 8 **Keys** to hear musical notes while in instrument modes and hear colours or numbers while in learning modes.

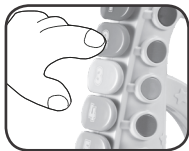

7. Handle

 The built-in **Handle** on the **Learn & Groove Jazzy Saxophone** makes it easy to hold and play or blow in mouthpiece at the same time.

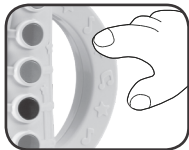

8. Feet

Learn & Groove Jazzy Saxophone features 4 **Feet** on the bottom of the bell for sitting upright on hard surfaces.

9. Automatic Shut Off

To preserve battery life, the **Learn & Groove Jazzy Saxophone** will automatically shut off after approximately 60 seconds without input. The unit can be turned on again by pressing any button or turning the dial.

10. Double-sided Music Cards

Follow the notes using the colour and number cues on the **Music Cards** to play four different classic melodies.

Activities

1. Instrument Modes: Turn the dial to select an instrument and press keys to play.
2. Jazz Band Mode: Play along as part of a jazz ensemble, then take your turn with a solo. Jazz-inspired tunes loop with a call-and-response play pattern designed to engage children in musical play.
3. Numbers Mode: Press the numbered music keys to hear numbers and see the bell light up.
4. Colours Mode: Press the numbered music keys to hear colour names and see each corresponding colour in the light-up bell.
5. Jazzy Cat Mode: Press the Jazzy Cat Button to hear Jazzy Cat talk, sing and listen to music.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth. To remove the green mouthpiece, pull with some force. Clean with water and make sure the mouthpiece is dry before inserting on the saxophone.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)
Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2024 LeapFrog Enterprises, Inc.
All rights reserved.
IM-618800-001
Version:0