



Count & Swirl Ice Cream Maker

 


Instruction Manual

This manual contains important information. Please keep it for future reference.

INTRODUCTION

Thank you for purchasing the **Count & Swirl Ice Cream Maker**. Create sweet treats and learn colours and counting while building listening comprehension and motor skills. Pretend to complete customers orders or create your own frozen desserts, served in a cone or cup.

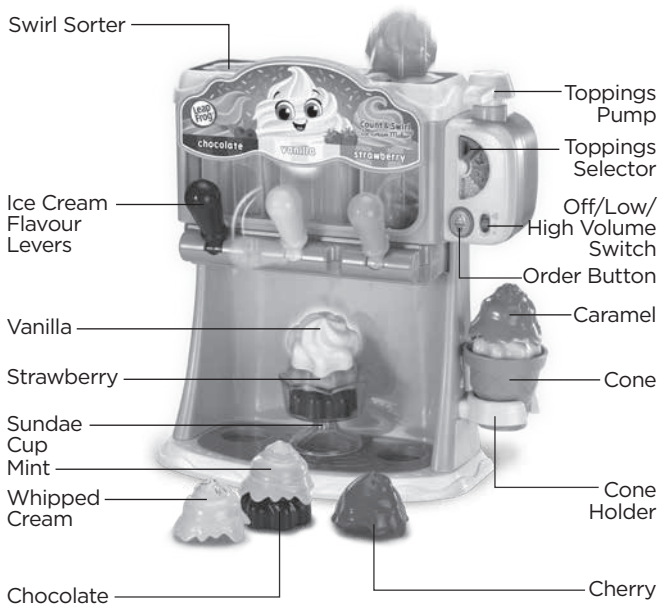

INCLUDED IN THE PACKAGE

- Count & Swirl Ice Cream Maker



1 ice cream maker



2 chocolate swirls



2 vanilla swirls



2 strawberry swirls



1 cherry topping



1 mint topping



1 caramel topping



1 whipped cream
topping



1 cone



1 sundae cup

- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

 
NOTE

Do not place any object into the ice cream maker other than the swirl pieces provided with the **Count & Swirl Ice Cream Maker**.

Wash the sundae cup thoroughly before and after use.

Unlock the Packaging Locks

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

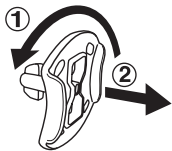


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

WARNING:

 Adult assembly required for battery installation.
Keep batteries out of reach of children.

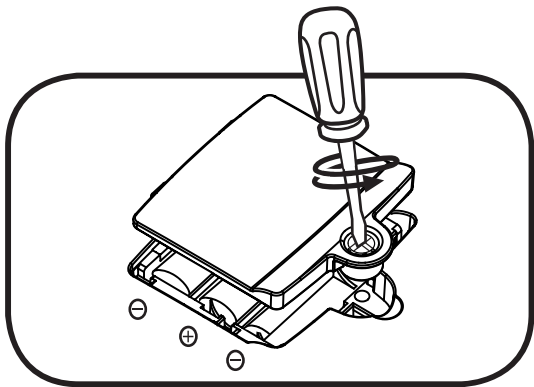

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

 
1. Off/Low/High Volume Switch

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the **Low »** or **High »** position. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off ●** position.



2. Swirl Sorter

Sort ice cream swirls by colour or shape to fill the ice cream maker and light up each flavour.

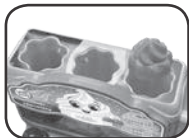


3. Ice Cream Flavour Levers

Pull the **Ice Cream Flavour Levers** to serve ice cream swirls in 3 colourful flavours.



4. Toppings Selector & Toppings Pump

 Choose one of 4 toppings by sliding the **Toppings Selector** and hear topping names, colours or count the number of items moulded on each topping. Press the **Toppings Pump** down to pretend to add the topping and count along up to 10. Then, place the matching topping piece on top of the ice cream to complete your frozen treat.

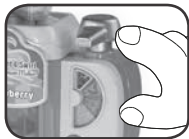

5. Order Button

Press the **Order Button** to hear customers' orders, a **Toppings Pump** counting activity, or creative activities.



6. Cone Holder

Place finished treats in the **Cone Holder** to serve to customers.



7. Automatic Shut-Off

To preserve battery life, the **Count & Swirl Ice Cream Maker** will automatically shut off after approximately 100 seconds without input. The unit can be turned on again by pressing the **Order Button**, inserting swirls into the maker, pulling levers, sliding the **Toppings Selector** or by pressing the **Toppings Pump**.

SONG LYRICS

Song 1

Ice cream, ice cream,
We're all gonna scream for yummy ice cream!
Stacking flavours,
Chocolate, Vanilla and Strawberry, yeah!

Song 2

Try a topping, it's a sweet sensation!
Tart cherry syrup or icy mint!
Caramel and whipped cream too!
That's all we do. This ice cream sundaes for you!

Song 3

Pump, pump it up!
Choose a flavour, pump it up!
How many times should we pump, pump it up?
[Number 3-10]
Ok, here we go, PUMP!

Song 4

Oh, ice cream!
So dreamy delicious!
You're a sweet and tasty treat!

Song 5

Every little taste, (Mmm, so dreamy!)
I can't think of a better treat than this!
Let's serve some today!

Song 6

Soft and swirly,
Such a cool and twirly delight!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.

© 2024 LeapFrog Enterprises, Inc.

All rights reserved.

Printed in China

IM-619000-002

Version:0