



## Instruction Manual

### Story Tails With Gabby



**DREAMWORKS**

DreamWorks Gabby's Dollhouse © DreamWorks Animation LLC.  
All rights reserved.

# INTRODUCTION

Thank you for purchasing **Gabby's Dollhouse Story Tails With Gabby** storyteller! Join Gabby and Pillow Cat as they narrate four a-meow-zing adventures that fans will recognize from the hit show, Gabby's Dollhouse.



**Light-Up Pillow Cat**



**Off/Low/High  
Volume Switch**

**Action Button**

Play character  
lines, activities,  
music, Gabby  
Cat of the Day.



**LED Timer/Off/  
On Switch**

Exit Try-Me mode.

**Peek-a-Boo Kitty Buttons**

Play stories.  
Play activities with Gabby  
and Pillow Cat.

**Light-Up Base**

# INCLUDED IN THE PACKAGE

- **Gabby's Dollhouse Story Tails With Gabby** storyteller
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

 
## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## Unlock the Packaging Locks

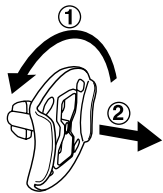

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

# INSTRUCTION



## WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

 


## ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the bottom of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

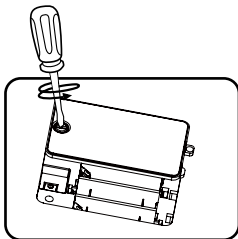

## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.

- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.



## RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## ACTIVATE NORMAL PLAY MODE


 

This product is in Try-Me mode in the packaging.

To activate normal play mode:

1. Slide the **Off/Low/High Volume Switch** from **Off** ● to **Low** 🗣️ or **High** 🗣️).  

2. Slide the **LED Switch** from **On** 💡 to **Off** 🚫💡 or **Timer** ⌚💡. The Gabby Cats will meow when normal play mode is activated. Slide the **LED Switch** back to **On** 💡 for best performance.  





# PRODUCT FEATURES

## 1. Off/Low/High Volume Switch

To turn the unit **On** or to adjust the volume, set the switch to **Low**  or **High** . To turn the unit **Off**, set the switch to **Off** .



## 2. LED Timer/Off/On Switch

Set the switch to **On**  to play the LED effects, or **Off**  to turn the LEDs off. Set the switch to **Timer**  for 10 minutes of soft lights and stories that shut off automatically.



### Note:

The Timer cannot be used to limit play time. Pressing any button will reset the 10-minute countdown.

## 3. Peek-a-Boo Kitty Buttons

Press one of the **Peek-a-Boo Kitty Buttons** to play a story. Press it again to pause. **Peek-a-Boo Kitty Buttons** are also used to play activities with Gabby and Pillow Cat.



## 4. Action Button




Press the **Action Button** to hear character phrases, music, the Gabby Cat of the Day, or play activities with Gabby and Pillow Cat.



## 5. Light-Up Pillow Cat and Base

If the lights in Pillow Cat and the base are off during play, check the **LED Timer/Off/On Switch**.

## 6. Automatic Shut Off

To preserve battery life, the **Gabby's Dollhouse Story Tails With Gabby** storyteller will automatically shut off after approximately 60 seconds without input when the **LED Timer/Off/On Switch** is set to **On**  /**Off** . When the switch is set to **Timer**  the storyteller will shut off after approximately 10 minutes without input. The unit can be turned on again by pressing any button.

## 7. Low Battery Warning

When the batteries are low, the LED in the Pillow Cat's face will flash 3 times and the storyteller will announce "Low Battery." The storyteller will then shut off automatically. See page 4 for Battery Removal and Installation instructions.

# ACTIVITIES

## Listen to a story

Press a **Peek-a-Boo Kitty Button** to play a story. Press it again to pause the story.

## Stories

1. It's Purrsday
2. Gabby, I Shrunk the Kitties
3. Planes, Trains and Kitty Balloons
4. Storytime!

## Play with Gabby and Pillow Cat

Press the **Action Button** to listen to character phrases, music, Gabby Cat of the Day, or play interactive activities with Gabby and Pillow Cat. The **Action Button** responses play at random, so each press is a surprise!

There are 9 interactive activities to discover and play. Press the **Peek-a-Boo Kitty Buttons** when Gabby invites listeners

to play along. Play 4 games, get up and move or take a few calming breaths, laugh at Gabby's jokes, learn silly tongue twisters and learn ways to comfort a friend who needs support in a stressful situation.

## Music

1. Gabby Inspired
2. Pillow Cat Inspired
3. Cakey Cat Inspired
4. DJ Catnip Inspired
5. Kitty Fairy Inspired
6. MerCat Inspired

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.



## NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

**Supplier's Declaration of Conformity**  
**47 CFR § 2.1077 Compliance Information**

Trade Name: LeapFrog®  
Model: 6198  
Product Name: Gabby's Dollhouse Story Tails With Gabby  
Responsible Party: LeapFrog Enterprises, Inc.  
Address: 2200 Powell Street, Suite 500  
Emeryville, CA 94608  
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-3 (B)/NMB-3(B)



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***leapfrog.com***  
***leapfrog.ca***

**Read our complete warranty policy online at  
*leapfrog.com/legal***

A subsidiary of VTech Holdings Limited.  
© 2024 LeapFrog Enterprises, Inc.  
All rights reserved.  
IM-619800-000  
Version:0