

DREAMWORKS

GABBY'S DOLLHOUSE



Gabby's Dollhouse MerCat & Me On-the-Go

 


DreamWorks Gabby's Dollhouse
© DreamWorks Animation LLC.
All rights reserved.

INTRODUCTION

Thank you for purchasing **MerCat & Me On-the-Go**.

Swim into some fun and learning with MerCat, Gabby and the Gabby Cats! Play four games that introduce shapes and letters, and encourage problem solving and memory skills. Then use math skills to whip up spectacular potions. Meow-mazing!

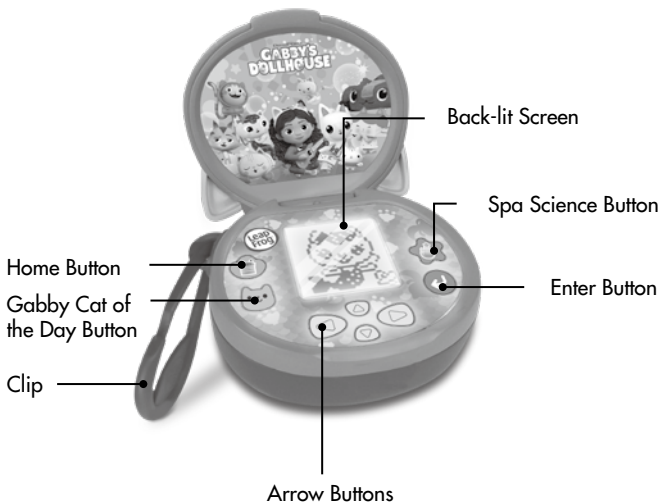

Note: Exit Try-Me mode - see page 6.

INCLUDED IN THE PACKAGE

- **MerCat & Me On-the-Go**
- Quick Start Guide
- One clip

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

 
ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks:

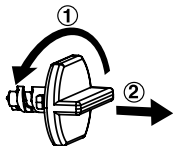


- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

 1. Close the cover to turn the unit OFF.
2. Locate the battery cover on the bottom of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

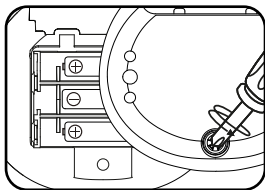

Note: When battery is removed, the time, alarm setting and inventory of potion ingredients will all be reset.



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.

Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Activate Normal Play

When you use **MerCat & Me On-the-Go** for the first time, you must exit the Try-Me mode.

1. Open the **Cover**
2. Press and hold **Home** + **Spa Science** + **Enter Buttons** until you hear 2 short beeps
3. **MerCat & Me On-the-Go** is now ready for Normal Play!
4. Press Left, Right and Enter Buttons to set up time and clockface.

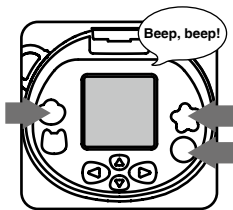

PRODUCT FEATURES

1. Cover

Open the **Cover** to turn the unit on. Close the **Cover** to turn the unit off. If the **Cover** is open and the unit turns off automatically, press the **Home**, **Spa Science** or **Gabby Cat of the Day Button** to turn the unit on again.

2. Home Button

Press the **Home Button** anytime to return to the Main Menu to select Potion Box, Find Ingredients and Settings.

3. Spa Science Button

Press this button to do Spa Science and mix magic potions with MerCat!

4. Gabby Cat of the Day Button

Press this button to see the Gabby Cat of the Day.

5. Four Arrow Buttons

Press the **Up, Down, Left and Right Buttons** to select options or play games.

6. Enter Button

Press the **Enter Button** to confirm a selection.

7. Clock

The **Clock** displays for a few seconds each time the **Cover** is opened.

8. Alarm Clock

Set alarm with a choice of alarm tones. Open the **Cover** and press any button to silence an alarm. Return to the Settings menu to disable alarm.

9. Automatic Shut Off

To preserve battery life, the **MerCat & Me On-the-Go** will automatically turn off after approximately 90 seconds of inactivity. The unit can be turned on again by pressing the **Home, Spa Science** or **Gabby Cat of the Day Button**. The unit will also automatically turn off when the batteries are too low. A warning will be displayed on screen as a reminder to change the batteries.

10. Clip

Use the attached clip to hook the ring on top of the **MerCat & Me On-the-Go** and fasten it to the bag etc. to keep it close.



NOTE:

If the unit powers down while playing, we suggest changing the batteries.

 
Activities

1. Clock

The **Clock** displays for a few seconds each time the **Cover** is opened. While the **Clock** is displayed, press the **Enter Button** to choose a different character face. Press any other button to return to the main menu.


2. Potion Box

Press the **Left** or **Right Button** to see the inventory of potion ingredients: Bubbles, Gems, Sprinkles and Confetti.

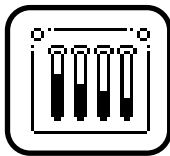


3. Find Ingredients

 Play games to Find Ingredients for purrfect potions in Spa Science! Press the **Left** or **Right Button** to view games. Press the **Enter Button** to confirm a game.

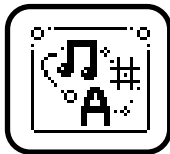


3.1 Bubbles, Bubbles Bubbles

 One of the Gabby Cats is trapped in super strong magic bubbles! Press the **Arrow Buttons** to select shapes or bubbles, then press the **Enter Button** to pop them. Pop shapes and bubbles, free the kitty and find an ingredient.

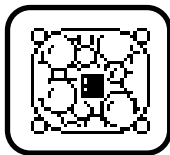

3.2 Hide and Seek

 Watch and remember where the Gabby Cats are hiding. Then press the **Left**, **Right**, **Up** or **Down Buttons** to find them.

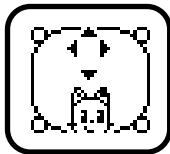


3.3 DJ Dance Off

Ready to groove? Watch and remember DJ Catnip's moves. Then press the **Left, Right, Up** and **Down Buttons** to repeat DJ Catnip's dance moves.




3.4 Tic Cat Toe

 The mirror in the bathroom is all steamed-up – perfect for playing Tic-Cat-Toe! Press the **Arrow Buttons** to choose a space, then press the **Enter Button**.

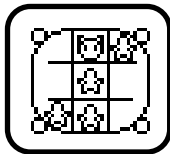

4. Settings

 Set the Clock and adjust the Backlight, Volume and Screen Contrast. Press the **Left** or **Right Buttons**, then press the **Enter Button**.

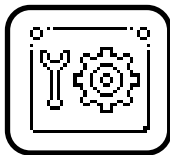

4.1 Backlight Setting



Press the **Left** or **Right Button** then press the **Enter Button**. Select the X (❌) to turn the backlight off. Select the check (✅) to turn backlight on.

4.2 Volume Setting



Press the **Left** or **Right Button** to select the high, mid, or low volume setting, then press the **Enter Button**.

4.3 Contrast Setting



Press the **Left** or **Right Button** to select the light, mid or dark screen contrast setting, then press the **Enter Button**.

4.4 Alarm Setting

Press the **Left** or **Right Button** to set alarm on/off, set the time, and choose between three alarm tones. Press the **Enter Button** to confirm.

4.5 Time Setting

Press the **Left** or **Right Button** to change the time and character faces. (The AM/PM setting is only applicable in 12-hour time format). Press the **Enter Button** to confirm.

5. Spa Science

Press the **Spa Science Button** and use math skills to measure ingredients and whip up potions with MerCat! Press the **Right Button** to add ingredients. Press the **Left Button** to remove ingredients. Then press both buttons quickly to mix the potion. Voila! Purrfect potion-making!

6. Gabby Cat of the Day

Press the **Gabby Cat of the Day Button** to see which Gabby Cat is the Cat of the Day! Come back every day to see who it is this time.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat source.
3. Remove the batteries when the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please close the **Cover** to turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Open the **Cover** to turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-521-2010** in the U.S. or **1-877-352-8697** in Canada, or by going to our website at **vtechkids.com** and filling out our **Contact Us** form located under the **Customer Support** link. Creating and developing **VTech®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions that you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	LeapFrog®
Model:	6201
Product Name:	MerCat & Me On-the-Go
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	2200 Powell Street, Suite 500 Emeryville, CA 94608

Website: vtechkids.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com
leapfrog.ca

**Read our complete warranty policy online at
*leapfrog.com/legal***