



Scan & Learn Checkout

 


Instruction Manual

This Manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Scan & Learn Checkout** by **LeapFrog®**! Shop for essentials like eggs, bread and milk. Play games as you fill your basket and head to the self-checkout to scan items and check the prices. Pay with cash or card and bag up your groceries. Thanks for shopping!

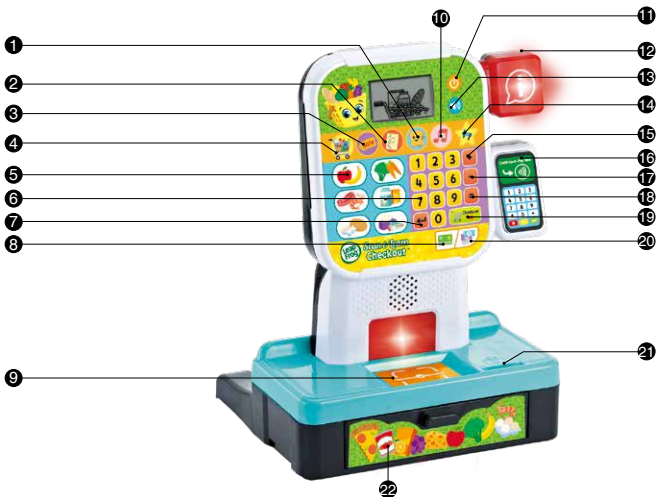

1	Silly Sandwich Mode Button	12	Shopping Light
2	Shopping List Mode Button	13	Volume Button
3	Sale Mode Button	14	Announcement Button
4	Shopping Mode Button	15	Plus Button
5	6 Category Buttons	16	Credit Card Button
6	Number Buttons	17	Minus Button
7	Backspace Button	18	Equal Button
8	Card Payment Button	19	Check Out Button
9	Scanner	20	Cash Payment Button
10	Singing Fun Button	21	Coin Slot
11	On/Off Button	22	Cash Drawer

INCLUDED IN THE PACKAGE

- Self-Checkout



- Base



- Cash Drawer



- 2 Stabilising Feet



 
- 8 Screws



- Tin of Tomatoes



- Apple

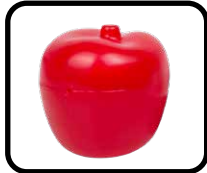

- Broccoli



- Steak



• Bread



• Eggs



• 6 Food Boxes



• 45 Banknotes



• 10 Coins



 
• Credit Card



• Shopping Basket



• 2 Label Sheets

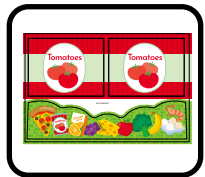

• 2 Insert Cards



 
WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

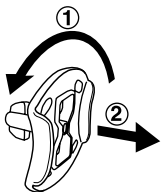


- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks.

LABEL APPLICATION

Please securely place the stickers on the play set as indicated below:


 
- 1 and 2. On the Tin of Tomatoes
3. On the Cash Drawer

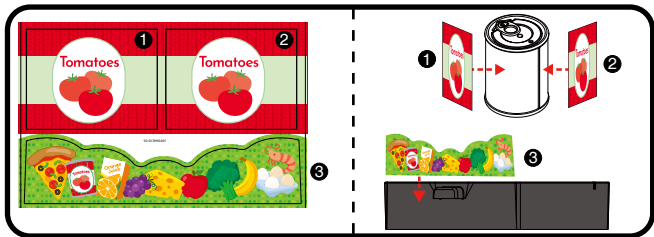


ASSEMBLY

With the **Scan & Learn Checkout** safety comes first. To ensure your child's safety, adult assembly is required.

  1. Align the **Self-Checkout Base** to the **Scan & Learn Checkout**, and use a screwdriver to tighten eight screws.
2. Snap the **Stabilising Feet** into the left and right slots on the back of the **Self-Checkout Base**.

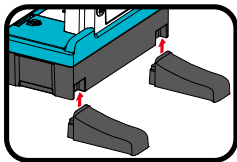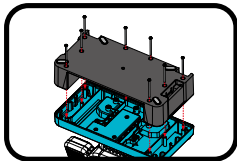

 3. Fold the **Six Food Boxes** to play. Fold the Pizza Box as shown below.

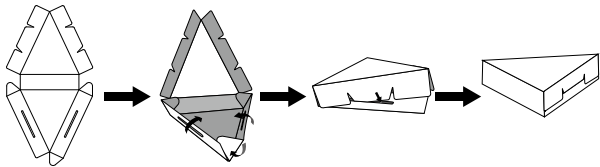

4. Insert the **Paper Cards** into the **Scan & Learn Checkout** as shown.



GETTING STARTED

Exit Try-Me Mode:

The product is in Try-Me Mode in the packaging. To exit Try-Me Mode, turn **On** the unit, then insert a coin into the coin slot. You will hear a beep and the screen will display “Normal Mode” then enter Sleep Mode. Press the **On/Off Button** to enter normal play.



 
WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

Battery Removal and Installation

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

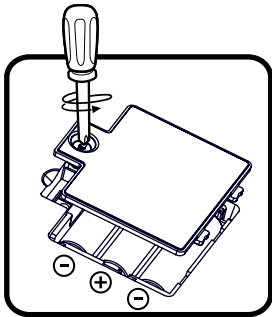

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

 
www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. ON/OFF BUTTON

Press the **On/Off Button** to play.

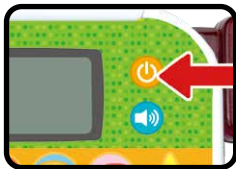

2. VOLUME BUTTON

Press to adjust the volume.



3. SHOPPING MODE BUTTON

Push for pretend shopping. Press **Grocery Buttons** to hear fun facts; scan objects, checkout and pay.



4. SALE MODE BUTTON

Press to play sale games. Match numbers, practise simple addition or count and scan items!



5. SHOPPING LIST MODE BUTTON

 
Match items to your list as they pass the scanner.



6. SILLY SANDWICH BUTTON




Press to build a sandwich. Push 3 **Grocery Buttons** to make your sandwich. What will you make?

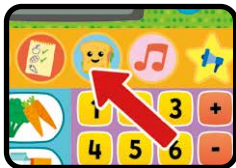

7. SINGING FUN



 Press to hear fun songs about numbers and groceries.

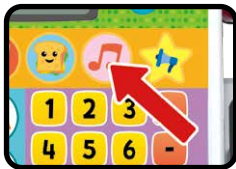

8. CATEGORY BUTTONS



Press to hear fun facts about each item or answer questions in games.



9. ANNOUNCEMENT BUTTON



Press to hear shopping announcements.



10. NUMBER BUTTONS

Press the 0-9 Number Buttons.



11. BACKSPACE BUTTON

Use the **Backspace Button** to delete a number.



12. PLUS / MINUS / EQUAL BUTTONS

Press the **Plus / Minus Buttons** to add or subtract. Check your total by pressing the **Equal Button**.



13. CHECK OUT BUTTON

Press to show your total and get ready to checkout.



14. CARD PAYMENT BUTTON

Press to choose payment by credit card.



15. CASH PAYMENT BUTTON

Press to choose payment by cash.



16. CREDIT CARD BUTTON



When you choose pay by card, press the **Credit Card Button** to finish the payment.



17. SCANNER

Slide objects across the **Scanner** to see prices. Avoid playing under direct sunlight as this may limit performance.



18. COIN SLOT

Insert coins into the **Coin Slot** to play games, count, or pay for groceries.



19. AUTOMATIC SHUT-OFF

To preserve battery life, the **Scan & Learn Checkout** will automatically power down after several seconds without input. The **Scan & Learn Checkout** can be turned on again by pressing the **On/Off Button**. The unit will automatically turn off when the battery power is low. If you see the low battery icon appear on screen, replace the batteries.

ACTIVITIES

1. SHOPPING MODE

1.1 Scanning

Swipe objects across the **Scanner** to display a price, then press the **Checkout Button** to complete your purchase! The maximum total amount is 100 notes.



• Payment Process

Press a **Payment Button** to choose cash or card to pay your bill.



• Credit Card Payment

Press the **Credit Card Panel** to finish the payment.



• Cash Payment

Use play money or coins to pay with cash. Then, press the **Checkout Button** to finish your payment.



1.2 Calculator

Do simple calculation with the **Calculator**. Use the **Backspace Button** to clear a number.



1.3 Category Buttons

Press the **Category Buttons** to hear fun facts about the items. Check the price of an item by pressing the **Checkout Button**.



2. SALE MODE

2.1 Scan the number of items shown on the screen, then press the **Checkout Button**. Insert the number of **coins** shown to complete your purchase.



2.2 This activity builds basic maths skills. Identify the total number of items on the screen and press the correct number button to answer.



3. SHOPPING LIST MODE

In this matching game, groceries roll by on the conveyor belt. Press the **Checkout Button** when an item on your list reaches the checkout area on the left.



4. SILLY SANDWICH MODE

Let's make a silly sandwich! Press three **Category Buttons** to choose items for your sandwich. Let's see what you make!



5. SINGING FUN

Press the **Category**, **Checkout**, **Payment** and **Number Buttons** to hear different songs. Press the **Plus**, **Minus** and **Equal** buttons to hear sound effects.

SONG LYRICS

SONG 1

Let's look at our shopping list,
And see what we can find.
We're looking for some [Item],
Oh, it's right down aisle [Number]!

SONG 2

We have a list of things to buy.
Let's make shopping fun today!
When you find the [Item], shout hooray!
Put it in your bag then wave goodbye.

SONG 3

Raise your hands and jump around.
Look at all the things we found.
Sing and clap and stomp your feet.
Yummy food so very sweet!

SONG 4

One, two, three,
Shop and sing with me.
Four, five, six,
What foods did you pick?
Seven, eight, nine and ten,
Check that price again.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/en-gb/legal

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

www.leapfrog.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
© 2026 LeapFrog Enterprises, Inc.
All rights reserved.
IM-591500-001
Version:0