



# Rainbow Lights Ladybird



 
## Parent's Guide

This guide contains important information. Please keep it for future reference.

91-003444-001 

# INTRODUCTION

Thank you for purchasing **Rainbow Lights Ladybird!** Press Ladybird's antenna to spin the lights on her back and hear her cheerfully talk and sing about colours. Press the abc button and bop along to her upbeat letter song. Finally, give her a push and enjoy her colourful dance music!

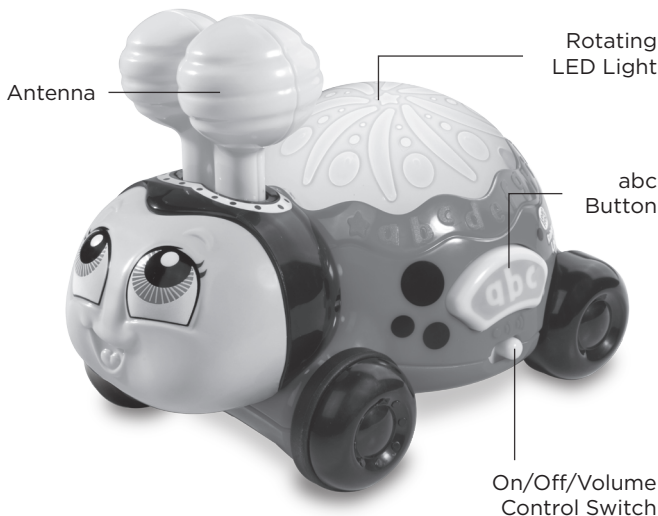

# INCLUDED IN THIS PACKAGE

- One **Rainbow Lights Ladybird**
- One parent's guide

## **WARNING:**

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

 
## **NOTE:**

Please keep this parent's guide as it contains important information.

This product emits flashing lights at 3-60 cycles per second.

## **Unlock the packaging locks:**


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

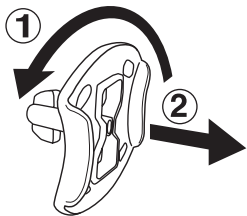

# GETTING STARTED

## BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 3 new AAA (AM-4/LR03) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

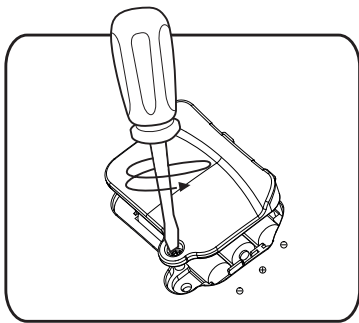

## BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc) or rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity.
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

For more information, please visit:

[\*\*www.recycle-more.co.uk\*\*](http://www.recycle-more.co.uk)

[\*\*www.recyclenow.com\*\*](http://www.recyclenow.com)

# PRODUCT FEATURES

 
## 1. On/Off/Volume Control Switch

Slide the **On/Off/Volume Control Switch** to turn the toy on and select the volume.




## 2. Antenna Button

Push to spin the dome on Ladybird's back and trigger flashing lights and fun audio.

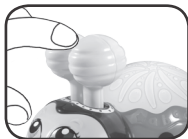


## 3. Colour-Changing Light

 Changes hue to introduce colours.

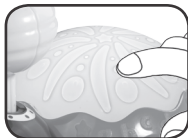


## 4. abc Button

 Press to hear a song that teaches letter names and sounds.

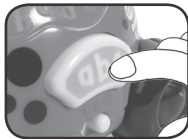

## 5. Motion Sensor Wheels

 Push Ladybird to bop along to fun music and silly colour songs.

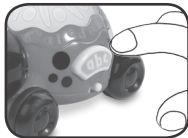

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

## TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

## Environmental phenomena.

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

**IMPORTANT NOTE:**

If the problem persists, please call our Consumer Services Department at **01702 200244** in the U.K. or email [support@leapfrog.co.uk](mailto:support@leapfrog.co.uk). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.



CLASS 1  
LED PRODUCT



***For warranty information, please visit  
[leapfrog.com/warranty](http://leapfrog.com/warranty).***



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***[leapfrog.co.uk](http://leapfrog.co.uk)***