



# Shapes & Sharing Picnic Basket™




## Parent's Guide

This guide contains important information. Please keep it for future reference.

91-003482-032 The logo consists of two overlapping circles, one labeled "UK" and the other "AUS".

# INTRODUCTION

 Thank you for purchasing the **Shapes & Sharing Picnic Basket™!** Let's go on a delightful picnic and learn about shapes, colours and manners.

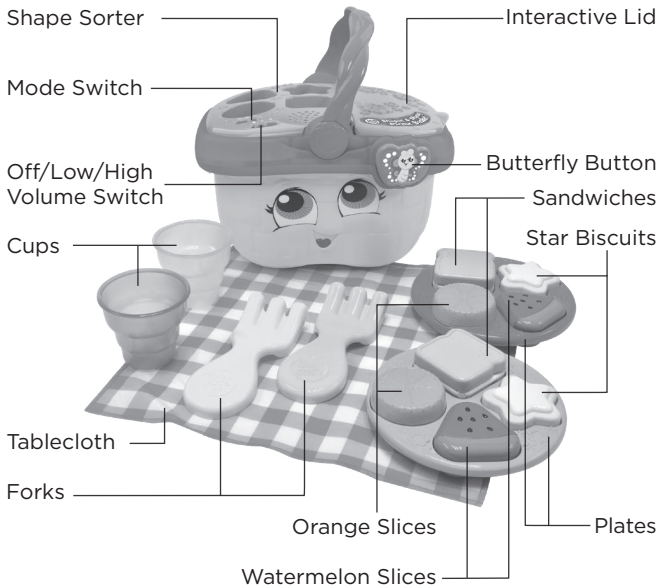

# INCLUDED IN THIS PACKAGE

- One **Shapes & Sharing Picnic Basket™**
- Two orange slices
- Two sandwiches
- Two watermelon slices
- Two star biscuits
- Two forks
- Two cups
- Two plates
- One tablecloth
- One parent's guide

 **WARNING:** This product is not suitable for use with food or liquid.

## **WARNING:**

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy and should be discarded for your child's safety.

## **NOTE:**

Please keep this parent's guide as it contains important information.

## **Unlock the packaging locks:**


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

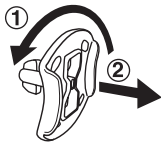

# GETTING STARTED

## BATTERY INSTALLATION

 1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver to loosen the screw and open the battery cover.
4. Install 3 new AA (LR6) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

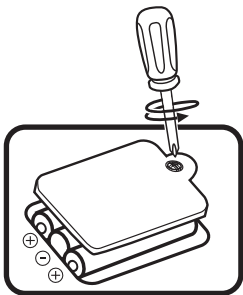

### **WARNING:**

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

### **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:


 

[www.leapfrog.co.uk/recycle](http://www.leapfrog.co.uk/recycle)

[www.leapfrog.com.au/recycle](http://www.leapfrog.com.au/recycle)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

# PRODUCT FEATURES

 
## 1. Off/Low/High Volume Switch

To turn the unit **ON**, slide the **Off/Low/High Volume Switch** to the **Low Volume** (  ) or the **High Volume** (  ) position. To turn the unit **OFF**, slide the **Off/Low/High Volume Switch** to the **OFF** (  ) position.



## 2. Mode Switch

Slide the **Mode Switch** to choose Music, Shapes & Colours or Picnic Time mode.

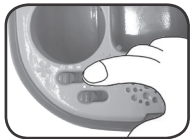


## 3. Automatic Sleep mode

To save power, the **Shapes & Sharing Picnic Basket™** automatically shuts down after 60 seconds without input. Press the **Butterfly Button** to wake up the unit.



## 4. Butterfly Button

 Press the **Butterfly Button** to hear a variety of fun responses in each mode.

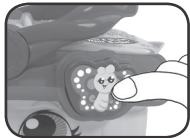

## 5. Shape Sorter

Drop food items through their shape sorting holes to hear fun responses.



## 6. Interactive Lid

Open and close to hear sound effects and learning phrases.



## ACTIVITIES

### Music Mode

Drop food items through the **Shape Sorter**, press the **Butterfly Button** or open the **Interactive Lid** to hear learning songs and sound effects.



 
### Shapes & Colours Mode

Drop food items through the **Shape Sorter**, press the **Butterfly Button** or open the **Interactive Lid** to hear learning phrases about shapes and colours.



### Picnic Time Mode

Press the **Butterfly Button** to hear the picnic basket politely request different snacks. Answer the requests by dropping the correct food items through the **Shape Sorter**.

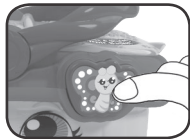

## CARE & MAINTENANCE

1. Keep the unit and accessories clean by wiping them with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from direct heat sources.
3. Remove the batteries when the unit is not in use for an extended period of time.

4. Do not drop the unit on hard surfaces and do not expose the unit to excess moisture or water.

**IMPORTANT NOTE:**

If the problem persists, please call our Consumer Services Department at **01702 200244** in the U.K. or email [support@leapfrog.com](mailto:support@leapfrog.com). Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **OFF**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **ON**. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

## Environmental phenomena.

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

# CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [leapfrog.com/en-au/legal/warranty](http://leapfrog.com/en-au/legal/warranty) for further information.



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***leapfrog.com***

***Read our complete warranty and  
legal policies online at  
leapfrog.com/legal***