



Pull-Along Butterfly Book™



Parent's Guide

 
This guide contains important information. Please keep it for future reference.

91-003947-000 (UK)

INTRODUCTION

Thank you for purchasing the **LeapFrog® Pull-Along Butterfly Book™**.

This delightfully wobbly butterfly encourages new walkers to explore and move their growing bodies in many different ways. Discover a removable book that tells the story of a butterfly's life cycle!

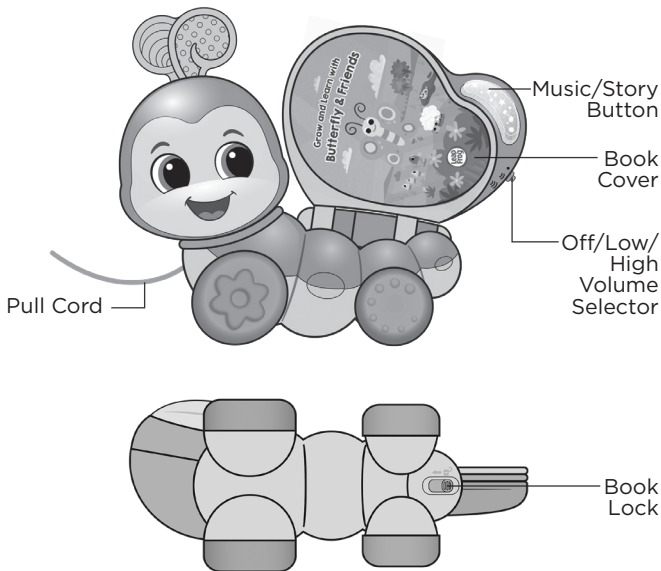

INCLUDED IN THIS PACKAGE

 
- LeapFrog® Pull-Along Butterfly Book™
- Parent's guide

WARNING:

All packing materials, such as tape, plastic sheets, wire ties and tags are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please keep this parent's guide as it contains important information.

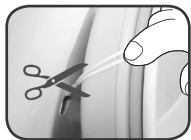


NOTE:

Please cut and discard the cord before playing with the unit. The cord is not part of the product and should be discarded for your child's safety.

Unlock the Packaging Locks:

 
- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

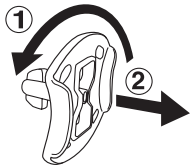

GETTING STARTED

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Locate the battery cover on the bottom of the unit. Use a coin or a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box.
5. Replace the battery cover and tighten the screw to secure.

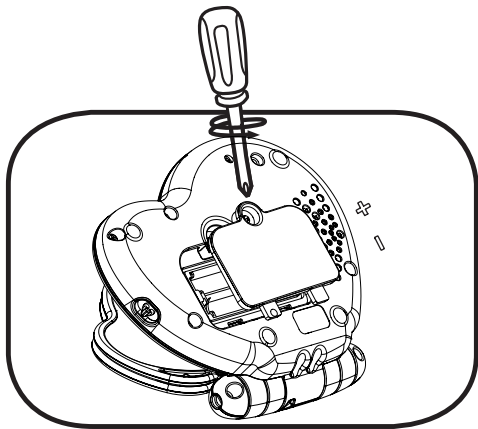

BATTERY NOTICE

- Use new alkaline batteries or fully charged NI-MH (Nickel Metal-hydride) rechargeable batteries for best performance.
- Use only batteries of the same or equivalent type as recommended.
- Do not mix different types of batteries: alkaline, standard (carbon-zinc), rechargeable, or new and used batteries.
- Do not use damaged batteries.
- Insert batteries with the correct polarity (+ and -).
- Do not short-circuit the battery terminals.
- Remove exhausted batteries from the toy.
- Remove batteries during long periods of non-use.
- Do not dispose of batteries in fire.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the toy before charging (if removable).
- Rechargeable batteries are only to be charged under adult supervision.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

Disposal of Batteries and Product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

VTech® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with you local council for kerbside collections.

PRODUCT FEATURES

 
1. OFF/LOW/HIGH VOLUME SELECTOR

To turn the unit **On**, slide the **Off/Low/High Volume Selector** to the **Low**) or **High Volume**))) position. To turn the unit **Off**, slide the **Off/Low/High Volume Selector** to the **Off** ● position.



2. BOOK LOCK

Press the **Book Lock** to safely remove the book.

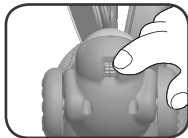

3. MUSIC/STORY BUTTON

Press to hear songs or meet Butterfly's animal friends in the story.



4. AUTOMATIC SHUT-OFF

To preserve battery life, the **LeapFrog® Pull-Along Butterfly Book™** will automatically shut off after approximately a minute and a half without input. The unit can be turned on again by pressing the **Music/Story Button** or by pulling the butterfly.

ACTIVITIES

1. **Starting Play**

Slide the **Off/Low/High Volume Selector** to turn the unit on. Hear an opening sound effect, a playful phrase and a welcome song. The light will flash with the sounds.

2. **Pull-Along Butterfly**

Pull or push the butterfly to explore, meet and move with its animal friends. Butterfly bobbles and its antennae wobble along.

3. **Butterfly Book**

Butterfly's wings are a book. Press the **Book Lock** to remove the book. Turn the pages to hear a story about a butterfly's life cycle, then fly off to meet, move with and mimic the animal friends.

4. **Music/Story Button**

Press the light up **Music/Story Button** to hear more.

SING-ALONG SONG LYRICS

Move With Me

Fly like a butterfly
Buzz like a bee
Now flutter your wings
And move with me!

Counting Song

1, 2, 3, 4, 5

6, 7, 8, 9, 10!

Flap your wings and fly
then do it all over again!

Old MacDonald

Old MacDonald had a farm, E-I-E-I-O

And on his farm he had a Duck, E-I-E-I-O

With a Quack Quack here

And a Quack Quack there

Here a Quack, there a Quack

everywhere a Quack Quack

Old MacDonald had a farm, E-I-E-I-O

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to water or moisture.

TROUBLESHOOTING

If for some reason the unit stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2021 LeapFrog Enterprises, Inc.
All rights reserved.
91-003947-000 