



Interactive Wooden Animal Puzzle™




Instruction Manual

This manual contains important information. Please save it for future reference.

91-003988-000 US CA AUS

INTRODUCTION

Thank you for purchasing the **Interactive Wooden Animal Puzzle™!** Explore four play modes in this interactive wooden puzzle that teaches animal names, animal sounds, Spanish words, colors and counting. Add and remove puzzle pieces to answer questions about animals, to reveal hidden objects, to explore counting, to hear words in Spanish and to play sounds along with background music. Enjoy the challenge of traditional puzzles with the fun of animal sounds and music.

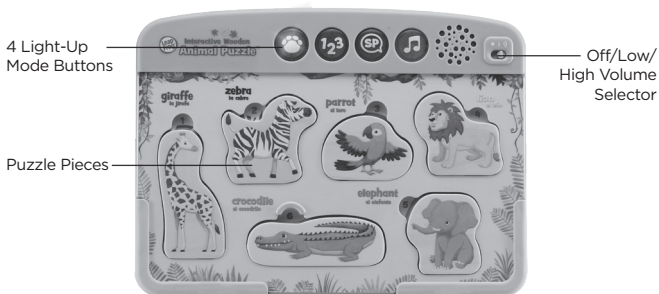

NOTE

This product is in Try-Me mode in the packaging. After opening the package, slide the **Off/Low/High Volume Selector** to the **Off** position, then slide the **Off/Low/High Volume Selector** to the **Low/High** position. If the unit powers down while playing, please install a new set of batteries.

NOTE

Ce produit est en mode Démonstration dans sa boîte. Pour sortir de ce mode, déplacer le **curseur Marche/Arrêt/Réglage du volume sonore** sur la position **Arrêt** puis rallumer le jouet. Il sera prêt à fonctionner normalement. Si le jouet s'éteint de façon répétitive pendant que votre enfant joue, nous vous conseillons de changer les piles.

INCLUDED IN THE PACKAGE

- **Interactive Wooden Animal Puzzle™**
- 1 giraffe puzzle piece
- 1 zebra puzzle piece
- 1 parrot puzzle piece
- 1 lion puzzle piece
- 1 elephant puzzle piece
- 1 crocodile puzzle piece
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

NOTE: The **Interactive Wooden Animal Puzzle™** uses IR technology that may not work well in full sunlight conditions. Please do not use the toy in direct sunlight.

NOTE : Ce jouet fonctionne grâce à une technologie infrarouge dont l'efficacité peut être altérée en cas d'exposition directe à la lumière du soleil. Nous vous recommandons de ne pas utiliser ce jouet en extérieur.

NOTE: Please ask us about the availability of FSC Products.

NOTE : Merci de nous consulter pour connaître la disponibilité des produits FSC.

INSTRUCTIONS

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.




WARNING :

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

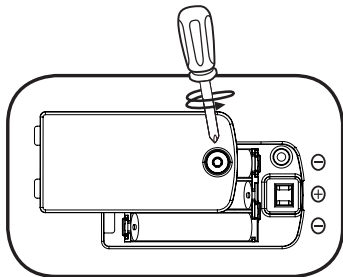

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES

1. Off/Low/High Volume Selector

To turn the unit **On**, slide the **Off/Low/High Volume Selector** to the Low **)** or High **))** position. To turn the unit **Off**, slide the **Off/Low/High Volume Selector** to the **Off** **●** position.



2. Four Light-Up Mode Buttons

Press to choose between four ways to play:

Animals Mode 🐾

Press to learn about animal names, colors, animal sounds and fun facts.

Numbers Mode 123

Press to learn about numbers 1-6, counting and objects under each animal.

Spanish Mode SP

Press to learn about animal names, colors, counting and objects in Spanish.

Music Mode 🎵

Press to hear and make music. Add and remove puzzle pieces to create sounds.



3. Automatic Shut-off

To preserve battery life, the **Interactive Wooden Animal Puzzle™** will automatically shut off after approximately 60 seconds without input. The unit can be turned on again by pressing any of the four **Light-Up Mode Buttons**.



ACTIVITIES

1. Animals Mode

Press to hear an animal question, then add and remove pieces to explore animal names and sounds, fun facts and colors.



2. Numbers Mode

Press to play a game exploring colors, counting and numbers.



3. Spanish Mode

Press to hear animal names, colors, counting and objects in Spanish.



4. Music Mode

Press to play five background tunes and ambient sounds. Add and remove animal pieces to create sounds and music. Enjoy background music during puzzle play.



SONG LYRICS

All around our beautiful planet,
There are so many animals that we can hear.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at 1-800-701-5327 in the U.S. and Canada, or email support@leapfrog.com. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION:

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6136
Product Name: Interactive Wooden Animal Puzzle™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500,
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

CAN ICES-003(B)/NMB-003(B)



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com
leapfrog.ca

**Read our complete warranty policy online at
*leapfrog.com/legal***

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2021 LeapFrog Enterprises, Inc.

All rights reserved.

Printed in China.

91-003988-000 US CA AUS