



My Best Pal Scout™



My Best Pal Violet™

 


Instruction Manual

This manual contains important information. Please save it for future reference.
Ce manuel contient des informations importantes. Veuillez le conserver pour toute
référence future.

INTRODUCTION

Thank you for purchasing **My Best Pal Scout™/My Best Pal Violet™**! Cute, cuddly and customizable, this interactive plush lets you add your child's name and favorite things to activities and phrases.

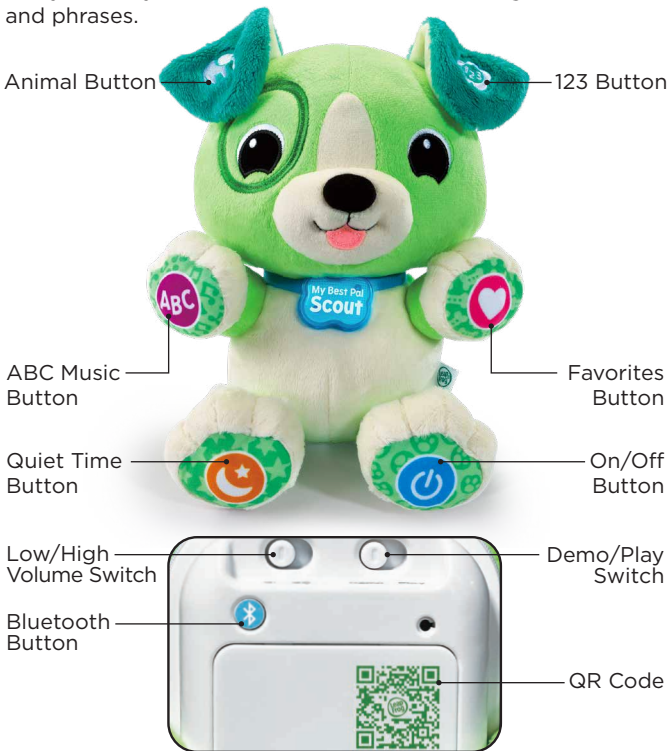

INCLUDED IN THE PACKAGE

- My Best Pal Scout™/My Best Pal Violet™
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

WARNING

 
Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

ATTENTION

Pour éviter tout risque d'étouffement, ce jouet en peluche doit être tenu hors de l'espace de sommeil des enfants de moins de 12 mois.

Unlock the Packaging Locks:

- ① Turn the packaging lock counterclockwise several times.
- ② Pull out and discard the packaging lock.

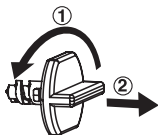

GETTING STARTED

PERSONALIZATION

Scout/Violet can learn your child's name, favorite color, food, and animal! To get started, scan the QR code to the right (also found on the battery box) or go to leapfrog.com/mybestpal to download the LeapFrog Link app on your smartphone or tablet (see system requirements below). Follow the instructions in the app to choose your child's name and spelling, favorite food, favorite animal, and favorite color!



SYSTEM REQUIREMENTS

Please visit leapfrog.com/system-requirements for minimum system requirements.

ACTIVATE NORMAL PLAY MODE

 
This product is set to **Demo Mode** in the package. Slide the **Demo/Play** switch to **Play** to access all the features, including up to 15 minutes of **Quiet Time** music.



BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.

4. Install 3 new 1.5V AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

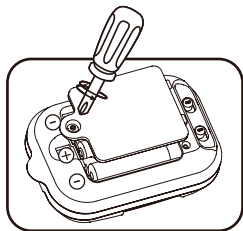

WARNING

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

Les piles fournies avec le produit permettent de tester le jouet en magasin mais ne sont pas des piles longue durée.

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.
- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.

 
PILES RECHARGEABLES

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES


1. On/Off Button

Press the **On/Off Button** to wake up Scout/Violet and begin to play.

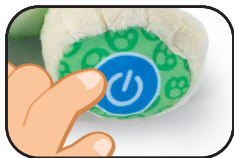


2. Quiet Time Button

 Press the **Quiet Time Button** to select 5, 10 or 15 minutes of calming music. You can press the button again to make another time selection before the music starts. Once the music starts, press this button to change to the next music selection.

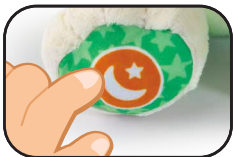

3. Animal Button

 Press the **Animal Button** to hear fun animal sounds and guess what animal Scout/Violet is pretending to be.

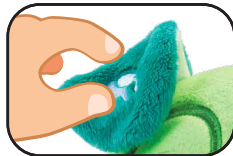


4. 123 Button

Press the **123 Button** to learn about counting and explore calming exercises.




5. ABC Music Button

 Press the **ABC Music Button** to hear music and songs including the ABC song and songs that include your child's name and favorite things.

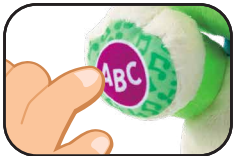


6. Favorites Button

 Press the **Favorites Button** to hear songs and phrases about Scout's/Violet's favorite things. Personalize this toy to hear Scout/Violet talk about your child's favorite things.

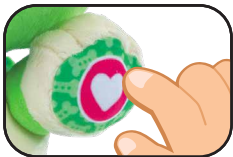

7. Bluetooth Button

 Make sure the toy is powered on and in **Play Mode**. After selecting the name and favorites in the LeapFrog Link app, press this button to activate the **Bluetooth** and transfer the data.

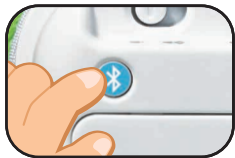

8. Automatic Shut Off

To preserve battery life, the toy will automatically shut off after a short time without input. In **Demo Mode** press the **On/Off Button** to wake it up. In **Play Mode**, press any button to keep playing.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The unit is surface washable only.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn toy **Off** by pressing the **On/Off Button** on the paw.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **1-800-701-5327** in the U.S. or email support@leapfrog.com. Creating and developing LeapFrog® products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Environmental phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power Off and back On, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

Trade Name: LeapFrog®
Model: 6150
Product Name: **My Best Pal Scout™**
My Best Pal Violet™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500,
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Bluetooth Statement

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LeapFrog is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- (1) L'appareil ne doit pas produire de brouillage;
- (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Carrier Frequency: 2402MHz - 2480MHz

Max RF output power: <10mW(10dBm)

Fréquence porteuse: 2402MHz - 2480MHz

Puissance RF maximale : <10mW(10dBm)



***Visit our website for more
information about our products,
downloads, resources and more.***

***leapfrog.com
leapfrog.ca***

**Read our complete warranty and legal
policies online at leapfrog.com/legal**

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.

© 2026 LeapFrog Enterprises, Inc.

All rights reserved.

IM-615000-007

Version:0