



My Best Pal Scout™



My Best Pal Violet™

 


Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing **My Best Pal Scout™/My Best Pal Violet™**! Personalise Scout/Violet to remember your child's name and favourite things, then enjoy engaging activities that teach first words, counting, colours, and emotions.

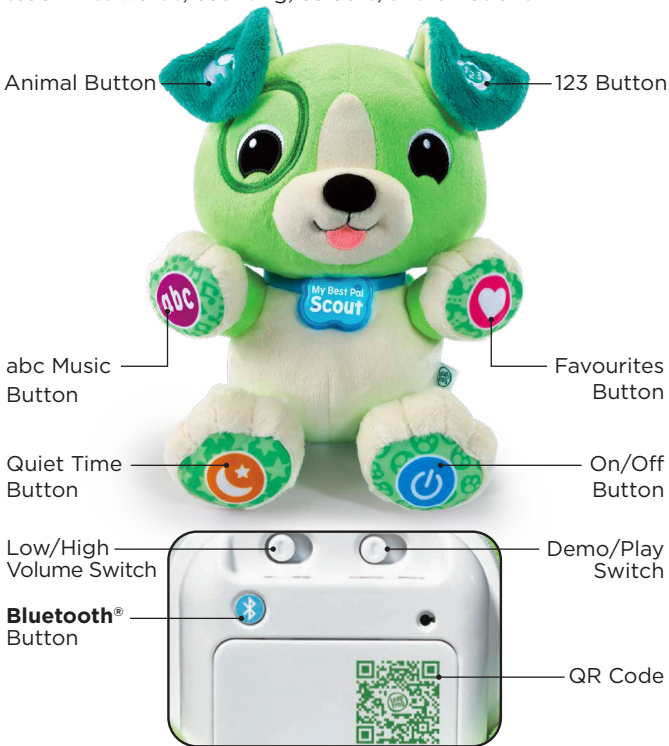

INCLUDED IN THE PACKAGE

- My Best Pal Scout™/My Best Pal Violet™
- Quick Start Guide

WARNING

All packing materials, including tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

 
Please save this Instruction Manual as it contains important information.

WARNING

Keep this soft toy out of the sleeping environment for babies under twelve months to avoid suffocation risk.

Unlock the Packaging Locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

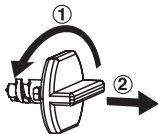

WARNING

Adult assembly needed. Close the battery door and tighten the screw to secure before giving your child the toy.

GETTING STARTED

PERSONALISATION

Scout/Violet can learn your child's name, favourite colour, food, and animal! To get started, scan the QR code to the right (also found on the battery box) or go to **leapfrog.com/mybestpal** to download the LeapFrog Link app on your smartphone or tablet (see system requirements below). Follow the instructions in the app to choose your child's name, favourite food, animal, and colour!



SYSTEM REQUIREMENTS

Smartphone or tablet with Bluetooth® connection. Please visit **leapfrog.com/system-requirements** for minimum system requirements.

ACTIVATE NORMAL PLAY MODE

 
This product is set to **Demo Mode** in the package. Slide the **Demo/Play** switch to **Play** to access all the features, including up to 15 minutes of Quiet Time music.



BATTERY INSTALLATION

1. Make sure the unit is turned Off.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw, and then open the battery cover.

3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new 1.5V AA (LR6/AM-3) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

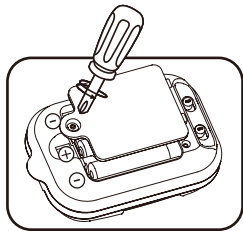

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

 
www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES


1. On/Off Button

Press the **On/Off Button** to wake up Scout/Violet and begin play.

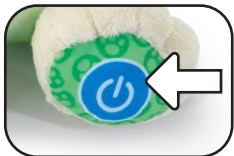


2. Quiet Time Button

 Press the **Quiet Time Button** to select 5, 10 or 15 minutes of calming music. You can press the button again to select another time setting before the music starts. Once the music starts, press this button to change to the next calming music track.

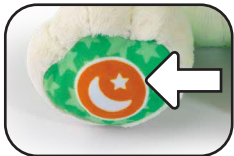


3. Animal Button

 Press the **Animal Button** to hear fun animal sounds and guess what animal Scout/Violet is pretending to be.

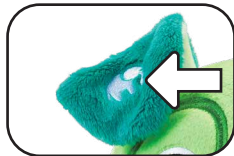


4. 123 Button

 Press the **123 Button** to learn about counting and explore calming exercises.

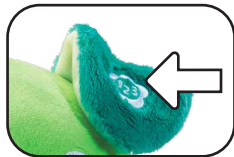


5. abc Music Button

 Press the **abc Music Button** to hear music and songs including the abc song and songs that include your child's name and favourite things.

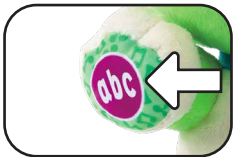


6. Favourites Button

 Press the **Favourites Button** to hear songs and phrases about Scout's/ Violet's favourite things. Personalise this toy to hear Scout/Violet talk about your child's favourite things.

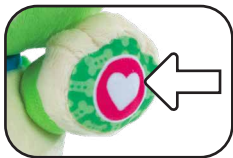

7. Bluetooth® Button

 Make sure the toy is powered on and in **Play Mode**. After selecting your child's name and favourite things in the LeapFrog Link app, press this button to activate **Bluetooth®** and transfer the data.

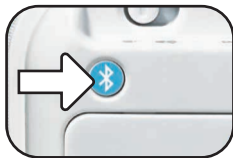

8. Automatic Shut Off

To preserve battery life, the toy will automatically shut off after a short time without input. In **Demo Mode** press the **On/Off Button** to wake it up. In **Play Mode**, press any button to keep playing.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. The unit is surface washable only.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn toy **Off** by pressing the **on/off button** on the paw.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a brand new set of batteries.

Environmental phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power Off and back On, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Bluetooth® Statement

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth® SIG, Inc. and any use of such marks by LeapFrog is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

DECLARATION OF CONFORMITY

Hereby, LeapFrog, a division of VTech Electronics Europe BV, declares that the radio equipment type 6150 is in compliance with Directive 2014/53/EU. The full text of the EU Declaration of Conformity is available at the following internet address :

www.leapfrog.com/en-gb/legal/eudoc

Frequency Band: 2402MHz - 2480MHz

DECLARATION OF CONFORMITY

Hereby, LeapFrog, a division of VTech Electronics Europe Plc, declares that the radio equipment type 6150 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of Conformity is available at the following internet address:

www.leapfrog.com/en-gb/legal/eudoc

Frequency Band: 2402MHz - 2480MHz

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products.

However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/en-gb/legal

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

www.leapfrog.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.

© 2026 LeapFrog Enterprises, Inc.

All rights reserved.

IM-615000-000

Version:0