



Clic the ABC 123 Laptop



 
Instruction Manual

This guide contains important information. Please keep it for future reference.

91-004092-000 

INTRODUCTION

Thank you for purchasing **Clic the ABC 123 Laptop**! Learn and giggle as you practise letter identification, counting and basic computer skills with your new pal, Clic!

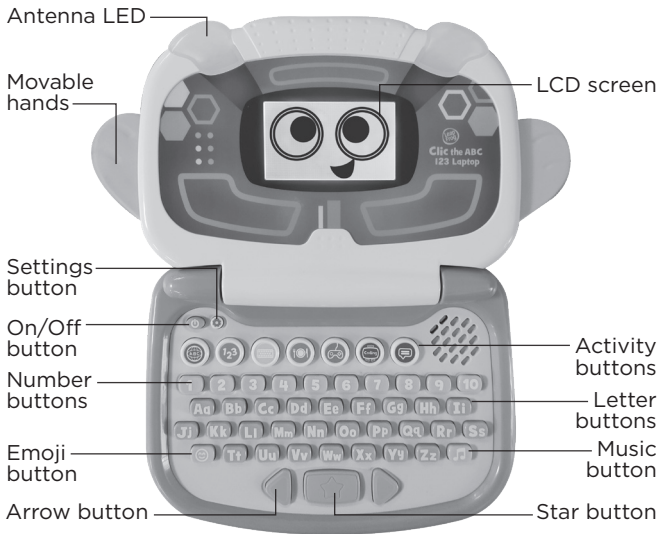

Closed

INCLUDED IN THIS PACKAGE

- **Clic the ABC 123 Laptop**
- Quick Start Guide

WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

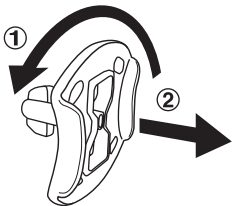


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the bottom of the unit.
3. Use a screwdriver or a coin to loosen the screw and open the battery cover.
4. Install 4 new AA (AM-3/LR6) batteries into the battery box as illustrated. (The use of new alkaline batteries is recommended for maximum performance.)
5. Replace the battery cover and tighten the screw to secure.

WARNING:

 Adult assembly required for battery installation.
Keep batteries out of reach of children.

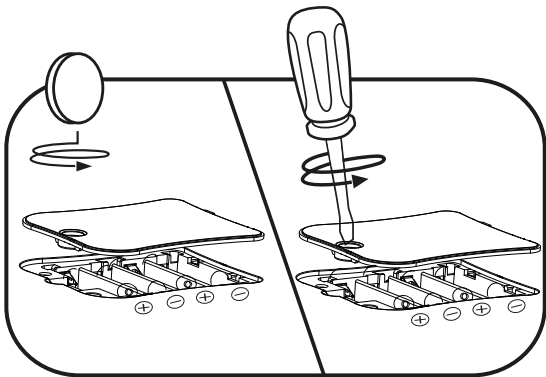

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in Battery Directive (2006/66/EC).



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Help protect the environment by disposing of your product or batteries responsibly.

LeapFrog® cares for the planet.

Care for the environment and give your toy a second life by disposing of it at a small electricals collection point so all its materials can be recycled.

In the UK:

Visit www.recyclenow.com to see a list of collection points near you.

In Australia & New Zealand:

Check with your local council for kerbside collections.

PRODUCT FEATURES

1. On/Off Button

Press the **On/Off Button** to turn the toy on and off.



2. Settings Button

Press to adjust the volume and screen's contrast.



 
3. Activity Buttons

Press to choose a fun learning activity.



4. LCD Screen

The LCD Screen displays Clic's face and the visuals for all the learning activities.

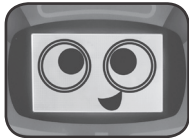


5. Movable Hands

Clic's hands move and wiggle as you play.



6. Antennae LED

 Clic's antennae light up and flash as you interact with him.

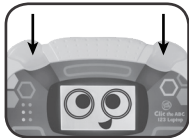

7. Number Buttons

Press the **Number Buttons** to activate fun number animations and phrases.



8. Letter Buttons

Press the **Letter Buttons** to activate silly letter animations and phrases.



9. Emoji Button

Press the **Emoji Button** to trigger emoji animations and sounds.



10. Music Button

Press the **Music Button** to play learning songs, melodies and classical music. There's even a simple Musical Statues game!



 
11. Star Button

The **Star Button** is used as a confirmation button in certain activities. When no activity is in progress, it triggers fun phrases, mini-activities, music and songs.



12. Arrow buttons

The **Arrow Buttons** are used to choose answers in certain activities. When no activity is in progress, an arrow button triggers fun phrases, mini-activities, music and songs.

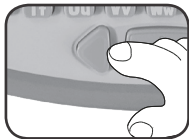

Activities

1. Letters

Help Clic find letters based on their names and sounds or words based on their initial letter sounds.

2. Counting

Clic needs your help! Kiss, tickle and high five him by pressing the correct buttons the correct amount of times. Listen to Clic coo, giggle and sing as he counts.

3. Typing

Type the correct letters to reveal the mystery word!

4. Snack Time

Count the snacks, then feed them to Clic!

5. Letter Run

Press the star button to make Chip jump and collect letters to spell words. Watch out for the code bugs and remember to grab the gems!

6. Coding

Satisfy Clic's wishes by inputting three adorable actions into his simple code.

7. Text with Chip

Receive texts from Clic's buddy, Chip, then text him back!

CARE & MAINTENANCE

1. Keep the toy and accessories clean by wiping it with a slightly damp cloth.
2. Keep it out of direct sunlight and away from direct sources of heat.
3. Remove the batteries when not using it for an extended period of time.
4. Do not drop the unit on a hard surface and do not expose the unit to excess moisture.

TROUBLESHOOTING

If for some reason the program/activity stops working, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **01702 200244** in the U.K. or email support@leapfrog.co.uk. Creating and developing **LeapFrog®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2022 LeapFrog Enterprises, Inc.
All rights reserved.
Printed in China.
91-004092-000 (UK)