



LeapPods Max™




Instruction Manual

This manual contains important information. Please keep it for future reference. Ce guide contient des informations importantes. Veuillez le conserver pour toute référence future.

INTRODUCTION

Thank you for purchasing the **LeapPods Max™** headphones! Dance to party songs, experience immersive adventures, unwind with instrumental music or use with your own **Bluetooth®** wireless technology enabled devices!

Adjustable Headband

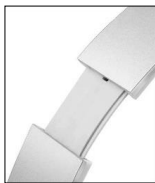

INCLUDED IN THE PACKAGE



- LeapPods Max™



- Micro-USB cable



- Quick Start Guide



- Adventure Passport booklet



- 3.5mm audio cable

WARNING

All packing materials, including tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.


ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de conserver ce guide des parents car il comporte des informations importantes.

GETTING STARTED

When you use the **LeapPods Max™** for the first time, move the **On/Off Switch** to the On position(). When powered on, the **Indicator Light** will turn green.

Battery Charging

Note: Adult operation required.

The LeapPods Max™ cannot be used while charging, even if power is turned on.

When the battery is low, the **Indicator Light** will turn red. To charge the **LeapPods Max™**, connect it to a computer using the included **Micro-USB Cable**. To do so correctly, please follow these steps:

- Please charge the **LeapPods Max™** before first use.
- The **LeapPods Max™** can be charged either in On or Off mode.
- Open the rubber cover of the **USB Charging Port** on the bottom of the **LeapPods Max™**.
- Insert the small end of the included **Micro-USB Cable** into the **USB Charging Port** on the **LeapPods Max™**.
- Insert the large end of the included **Micro-USB Cable** into a USB port on your computer.
- The **Indicator Light** will turn orange while the **LeapPods Max™** is charging. After the battery is fully charged, the **Indicator Light** will turn green. You may then disconnect your fully charged **LeapPods Max™** headphones from the computer.
- This toy contains a rechargeable battery that is non-replaceable.

USB port for battery charging:

The current output of USB = DC 5V, with a minimum of 0.5A

Guidelines for Charging With the Micro-USB Cable

Charge this device using the included **Micro-USB Cable** connected to a computer. Do not charge using a third party adapter. Before use, inspect the cord to confirm that it is in good condition and that there are no breaks or exposed wires. Ensure there are no particles or liquid (water, juice, etc.) in either of the connectors before plugging in either end of the cable. The device should be completely dry with no debris in the cable connectors when charging. Securely plug in the cable in the correct orientation. Never leave the device unattended while charging. Do not charge your device on soft surfaces, as they can trap heat around the device.

Typical charging time is approximately 2-4 hours if the battery is fully depleted. Disconnect the device when it is fully charged. The actual charging time depends on the charging current, the remaining charge in the battery prior to recharging and the ambient temperature. The optimum ambient temperature is 32°F - 104°F (0°C - 40°C).

Battery Life

The time the battery lasts between charges depends on usage. Like other electronic devices, more frequent usage will drain the battery more quickly. When the battery level is low as shown by the red **Indicator Light**, it is recommended to charge the battery before further use. When the battery level is too low, the **LeapPods Max™** will not turn on until it is sufficiently recharged.

Battery Maintenance

Charge the battery regularly for optimal performance, even when the **LeapPods Max™** is not regularly in use. For example, charge the **LeapPods Max™** at least once every six months.

 
BATTERIES CANNOT BE REPLACED

The batteries in this toy are permanently encased. Before giving this toy to a child make sure there are no signs of damage. Regularly check the toy and dispose of it immediately if there are any signs of damage. Do not dispose of the toy in a fire, as the batteries may leak and explode. Keep batteries safely out of children's reach before disposing of them via a safe disposal system.

PRODUCT FEATURES

1. On/Off Switch


Slide the **On/Off Switch** to the On position. When powered on, the **Indicator Light** will turn green.

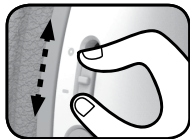

2. Pairing Button

Press the **Pairing Button** to connect with other **Bluetooth®** devices.

 Note: See the Pairing Mode section below for instructions.

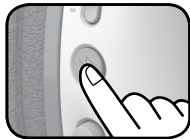


3. Mode Select Dial

Rotate the **Mode Select Dial** to choose a category: Dance Party, Adventures, Learning Songs, Challenges, Quiet Time and Instrumentals.



4. Play/Pause Button

 Press the **Play/Pause Button** to play or pause the track.

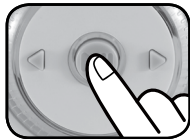

5. Next Button

Press the **Next Button** to skip to the next track in the category.



 
6. Back Button

Press the **Back Button** once to go back to the beginning of the current track. Press the **Back Button** again to skip to the previous track in the category.




7. Volume Button

Press the + on the **Volume Button** to increase the volume and press the - on the **Volume Button** to decrease the volume.

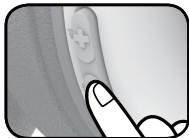


8. Adjustable Headband

 The headband can be adjusted by gently pulling the headphones down from the headband.

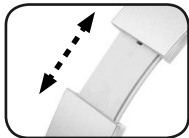


9. USB Charging Port

 Connect the unit to your computer using the included **Micro-USB Cable** to charge the headphones.

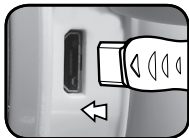

10. Audio Port

 Connect to other devices using the included **3.5mm Audio Cable**.

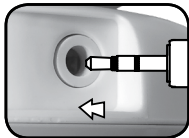

11. Automatic Shut-Off

To preserve battery life, the unit will automatically go to sleep after 5 minutes of inactivity. The unit can be woken up by pressing the **Play Button**.

PLAY MODES

1. Pairing Mode

- Press the **Pairing Button** to turn the **Bluetooth®** connection on or off. Press and hold the **Pairing Button** for 3 seconds to go into Pairing Mode.
- The **Indicator Light** will flash blue when waiting for a connection.
- Choose the **LeapPods Max™** from your peer device to send the connection request. Press and hold the **Play Button** for 3 seconds to confirm. **Bluetooth®** will be disconnected after 60 seconds if the connection is not confirmed.
- When the connection is confirmed, the **Indicator Light** will turn solid blue.
- The **LeapPods Max™** will automatically connect to confirmed devices.

2. Line-In Mode

Make sure the headphones are powered on. Plug in the included **3.5mm Audio Cable** to the **3.5mm Audio Port** on the headphones and connect the other end to an external device.

ACTIVITIES

Content Categories

There are six categories of content:

Dance Party

1. Silly Willy Was a Walrus
2. Dance-O-Rama Llama
3. Stinky Bean
4. Dance Together
5. Don't Stop Dancing
6. Dance It Out
7. Nature's Music
8. Through the Seasons
9. Dancing Robots
10. Just Bounce

Adventures

Explore with the **Adventure Passport** booklet to enhance the fun.

1. Amazon Rainforest
2. African Savanna
3. Under the Sea
4. Australian Animal Sanctuary
5. The Countryside
6. Deciduous Forest



Learning Songs

1. Dew Drops
2. Brush My Teeth
3. Pick It Up
4. Wash My Hands
5. Super Hero Helper
6. I Am Me
7. Mistakes Are Okay
8. Grow Little Seed
9. Counting Dandelions
10. Healthy Snacks

Challenges

1. Wiggle Freeze
2. Bird's the Word
3. Pop and Flop
4. Bunny Hop Hopscotch
5. Twinkle Toes
6. Ocean Motions
7. Creepy Crawlies
8. Jumpin' Jellybeans

Quiet Time

1. I Am Still
2. My Actions Matter
3. I Am Patient
4. Kindness
5. Having Gratitude
6. My Body is Strong
7. Relax and Reset
8. Breathe With Me
9. Trying New Things
10. Practice Makes Progress


Instrumentals


1. Gentle Storm
2. Dancing Trees
3. Summer Nights
4. Buzzing Energy
5. Simple Beats
6. Hidden Journey
7. Playful Winds
8. Magenta Wings
9. Exciting Adventure
10. Desert Sunset


CARE & MAINTENANCE

- Keep the rubber cover over the **Micro-USB Port** closed tightly when not in use in order to prevent dust or water from getting in.
- Keep the **LeapPods Max™** and accessories clean by wiping them with a slightly damp cloth. Never use solvents or abrasives.
- Always keep the **LeapPods Max™** headphones away from water.
- Keep the **LeapPods Max™** out of direct sunlight and away from any direct heat sources.
- Turn off the **LeapPods Max™** if not being used for an extended period of time.
- Avoid dropping the **LeapPods Max™**. NEVER try to dismantle it.
- Do not leave the **LeapPods Max™** plugged in for extended periods of time.
- Use the **Micro-USB Cable** that came with this device to charge it.
- Examine the **Micro-USB Cable** regularly, checking for damage to the cable, plug and other parts. Do not use the **Micro-USB Cable** if there is any damage.

Important Safety Instructions

- As with all electrical products, precautions should be observed during handling to prevent electric shock.
- The **Micro-USB Cable** and **3.5mm Audio Cable** could be a strangulation hazard. Keep out of reach of children under 3 years of age. The **Micro-USB Cable** should be used only by an adult when connecting to a computer and is to be removed by an adult prior to the use of the product by a child.
- Routinely check the **LeapPods Max™** for proper and safe condition. If there is any damage or broken parts, remove from use.
- The **LeapPods Max™** should only be connected to equipment bearing either of the following symbols:  or .
- Adult supervision required at all times while children are playing with this product.
- Always turn the volume level of your headphones down to a low level before placing the headphones on your (or your child's) head. Gradually turn up the volume until you achieve a comfortable level.
- It is not recommended to use this product while sleeping.
- The battery is recyclable, please follow your local recycling regulations.
- The **LeapPods Max™** headphones include a built-in volume limiter to limit the sound output to 85dBA which is recommended by the World Health Organization. This safety level has been tested for the built-in content and streaming via **Bluetooth®** wireless technology connection.
- When using the **3.5mm Audio Cable**, some devices may deliver a sound level that exceeds 85dBA. Make sure to always turn the device volume to a low level before placing the headphones on your child's head.

 **Warning!** Continued exposure to loud noise may cause gradual but permanent damage to hearing.

 **Avertissement !** L'exposition continue à un bruit fort peut causer des dommages auditifs progressifs permanents.

Environmental Phenomena

Static electricity may cause the unit to malfunction. In cases where unit is malfunctioning due to static electricity, reset the unit by turning the power Off and back On again.

Disclaimer and Limitation of Liability

LeapFrog and its suppliers assume no responsibility for any damage or loss resulting from the use of this handbook. LeapFrog and its suppliers assume no responsibility for any loss or claims by third parties that may arise through the use of this product.

TROUBLESHOOTING

If for some reason the headphones do not work, please follow these steps:

Problem	Correction
The LeapPods Max™ has stopped working	<ol style="list-style-type: none">1. Slide the On/Off Switch to the Off position for 30 seconds.2. Slide the On/Off Switch to the On position again. It should now work properly.3. If the headphones don't work, recharge the battery and repeat steps 1 and 2. (Refer to the Getting Started section for details.)
Cannot connect with 3.5mm Audio Cable	<ol style="list-style-type: none">1. Make sure the headphones are powered on.2. Check that the 3.5mm Audio Cable is connected to your headphones and the external device correctly.3. Inspect the 3.5mm Audio Cable for damage.

Charging Indicator flashes rapidly while charging	<ol style="list-style-type: none"> 1. Disconnect from power by unplugging the Micro-USB Cable. 2. Inspect the Micro-USB Cable for damage. 3. Reconnect the cable.
Cannot connect with Bluetooth®	<ol style="list-style-type: none"> 1. On your Bluetooth® device, please go to Bluetooth® settings. If the LeapPods Max™ is found in your list of connected, paired or saved devices, please “forget” or “unpair” it. 2. Then, disable and enable Bluetooth® or restart your device. 3. Turn the LeapPods Max™ off and on and repeat the Bluetooth® wireless technology pairing process.
Cannot control the volume level	LeapPods Max™ cannot control the volume on some external devices. If you do not hear audio, be sure to check the volume setting on both LeapPods Max™ and the external device to be sure they are not set to the lowest volume level.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name:	LeapFrog®
Model:	6162
Product Name:	LeapPods Max™
Responsible Party:	LeapFrog Enterprises, Inc.
Address:	2200 Powell Street, Suite 500, Emeryville, CA 94608
Website:	leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

USB Cable: Use only the **Micro-USB Cable** provided by LeapFrog. Using any other cable may exceed FCC and other regulatory emissions limits. The **Micro-USB Cable** is not a toy. Disconnect the toy from the USB connection before cleaning.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



***Visit our website for more
information about our products,
downloads, resources and more.***

***leapfrog.com
leapfrog.ca***

***Read our complete warranty and
legal policies online at
leapfrog.com/legal***

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
TM & © 2022 LeapFrog Enterprises, Inc.
All rights reserved.

The *Bluetooth*® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LeapFrog is under license. Other trademarks and trade names are those of their respective owners.

IM-616200-000
Version:1 US CAN AUS