



Mr. Pencil's[®] Scribble, Write & Read[™]

 


Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing **Mr. Pencil's® Scribble, Write & Read™!** Enter a world of fun as you play a range of educational activities. Laugh along with Mr. Pencil® and his pals as you explore letter and number names. You can also follow step-by-step instructions to write letters and numbers. Finally, join Mr. Pencil® to practice everything from identifying letter sounds and spelling full words to writing your own name!

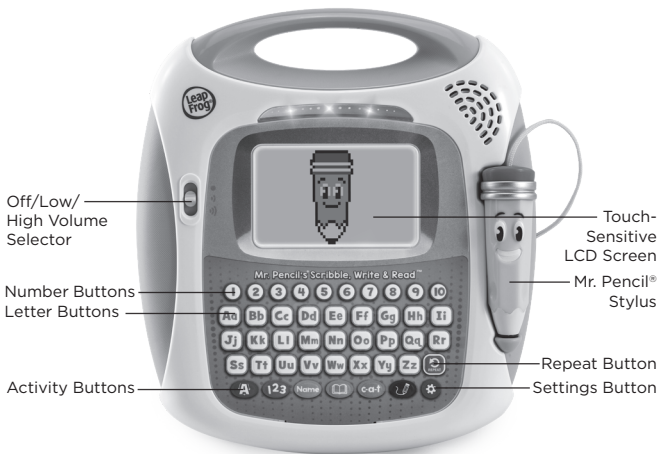

INCLUDED IN THE PACKAGE

- One Mr. Pencil's® Scribble, Write & Read™
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

ATTENTION :

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

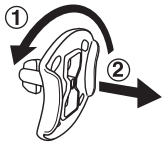

INSTRUCTIONS

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

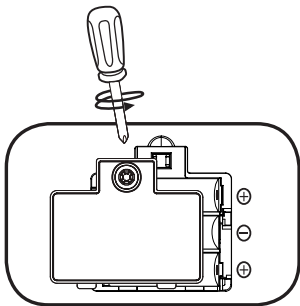

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.


IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES


- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Low Battery Indicator

When the batteries run low, this icon  will appear on the screen and the unit will power off. Remove the old batteries and replace with a new set.



IMPORTANT NOTICE

Occasionally, the LCD touch screen may need to be recalibrated. If this happens, go to Settings Mode  to adjust it before resuming play.



An X will appear in each corner of the screen and you will hear a voice say, “Tap it!”. Use the stylus to touch each X exactly. Another X will appear after the previous one is touched correctly. The screen will show **OK** if the screen has been calibrated correctly. If an X isn’t touched correctly, you will hear a voice say, “Oops, tap this again.”, and the calibration will restart. You may have to tap an X many times before it is properly calibrated.

PRODUCT FEATURES

 
1. Off/Low/High Volume Selector

Slide the **Off/Low/High/Volume Selector** to turn the toy on and to adjust the volume.



2. Touch-Sensitive LCD Screen

Touch the LCD screen to play.

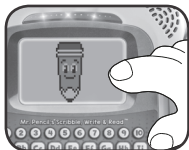

3. Mr. Pencil® Stylus

Use the stylus to tap and write on the screen.



4. Activity Buttons

Press one of the six activity buttons to select an activity.



5. Settings Button

Press this button to change the contrast of the LCD screen, turn the background music on or off and to calibrate the LCD touch screen.



 
6. Repeat Button

Press this button to repeat an instruction or question.




7. Letter Buttons

Press these buttons to hear letter names and sounds.

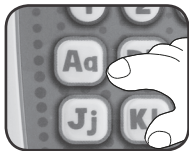

8. Number Buttons

 Press these buttons to hear number names.

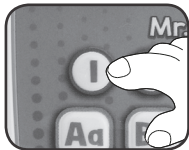

9. Automatic Shut Off

To save power, **Mr. Pencil's® Scribble, Write & Read™** will shut down after about 1 minute without input. The unit can be turned on again by pressing any button.

ACTIVITIES

1. Letter Writing

Use the stylus to choose uppercase or lowercase letters. After making your choice, press a letter button to learn how to write the uppercase or lowercase version of it. Follow the dotted lines. They will show you exactly how to draw perfect letters using the correct stroke order.

2. Numbers

Same as the activity above but with numbers. Correctly tracing a number transforms it into objects that equal the number's value. Tap them to count.

3. Name Writing

Tap an empty name slot to enter a name. A name can hold up to 12 characters. Tap the name to practice spelling it. Tap the edit button to change an existing name.

4. Reading

Use the stylus to rub away sand to find letters. Find three letters to spell a word. Then, drag the stylus across the letters to sound out the word. Spell and sound out three words to complete the game.

5. Spelling

Use the stylus to choose your level.

Level 1: Letterrific!

Tap the letters as they are announced.

Level 2: Complete the Word

Drag letters into the words to complete them. Then drag the stylus across the letters to sound out the words.

Level 3: Slide and Spell

Slide letters into a word to spell it. Then drag the stylus across the letters to sound out the word. When you think you know what the word is, tap the star. Two pictures will appear. Tap the one that shows the word you sounded out.

6. Drawing

Use the stylus to choose Free Draw or Tracing.

Free Draw

Get creative! Tap or drag anywhere on the screen to draw. The following icons can help:

Eraser - Tap to turn the tip of your stylus into an eraser. Only what you touch will be erased.

Pencil - Tap to draw. Tap again to change colors.

“X” - Tap this to erase your entire drawing.

Music Note - Tap this to add your drawing into the Mr. Pencil® Song.

Tracing

Select a drawing. Then, connect the dots in any order to complete it. Once completed, drawings will animate in silly ways. To automatically complete a drawing, press the check mark.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit is still not working properly, install a brand new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6170
Product Name: Mr. Pencil's® Scribble, Write & Read™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.



Visit our website for more
information about our products,
downloads, resources and more.

leapfrog.com
leapfrog.ca

Read our complete warranty policy online at
leapfrog.com/legal

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2023 LeapFrog Enterprises, Inc.
All rights reserved.
Printed in China.
IM-617000-000
Version:0