



Rainbow Learning Lights Mixer™

 


Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Rainbow Learning Lights Mixer™!** Mix up sweet treats with colorful lights and fun songs while learning through imaginative play. Who knew learning colors, numbers, and counting could be so sweet?

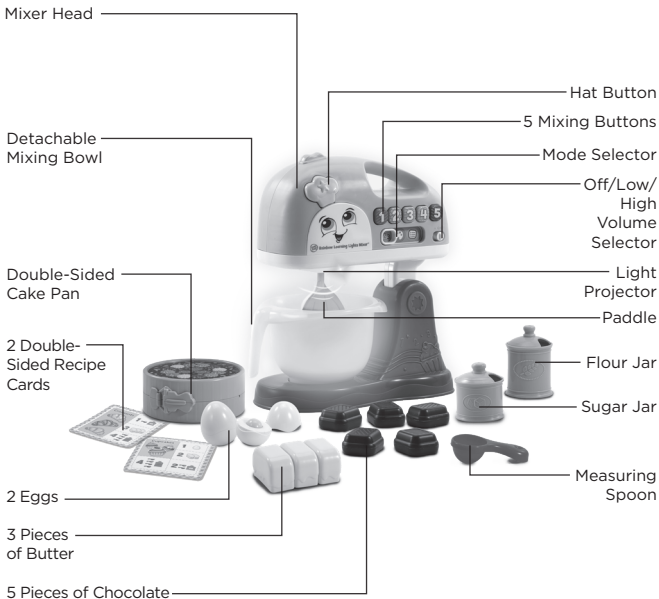

INCLUDED IN THE PACKAGE



1 mixer



2 eggs



3 pieces of butter



5 pieces of chocolate



 
1 flour jar



1 sugar jar



1 measuring spoon

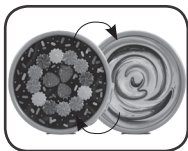

1 double-sided
cake pan



2 double-sided
recipe cards



1 mixing bowl

- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

CAUTION:

Hair entanglement may result if child's hair comes in contact with the moving parts of toy. Adult supervision is required.

NOTE :

After removing from packaging, wipe all the included pieces using a slightly damp cloth. Wash the **Mixing Bowl, Measuring Spoon, Sugar Jar** and **Flour Jar** thoroughly before and after use. To avoid damaging the electronics, do not submerge the mixer in water or expose it to excessive moisture.

ATTENTION :

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

 
Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

ATTENTION :

Pour la sécurité de votre enfant, ne pas le laisser jouer sans surveillance. Les cheveux de l'enfant pourraient s'emmêler au contact des parties mobiles du jouet.

Unlock the Packaging Locks


- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

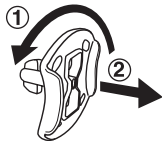

INSTRUCTIONS

Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

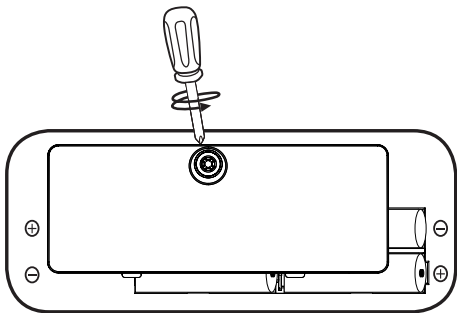

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION




- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.




PRODUCT FEATURES

1. Off/Low/High Volume Selector

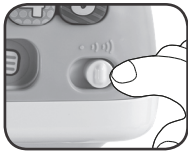To turn the unit **On**, slide the **Off/Low/High Volume Selector** to the **Low**  or **High**  position. To turn the unit **Off**, slide the **Off/Low/High Volume Selector** to the **Off**  position.



2. Mode Selector

Slide the **Mode Selector** to choose from: Numbers mode , Colors mode  or Creative Cakes mode .



3. Five Mixing Buttons

Lower the **Mixer Head** and press one of the **Five Mixing Buttons** to start the mixing and a colorful light show in the bowl.



4. Hat Button

Press the **Hat Button** to start a fun activity. Each mode has a different set of activities to practice counting, colors or creativity.




5. Mixer Head

Manually lift up the **Mixer Head** to add ingredients to the **Mixing Bowl** or to remove the **Mixing Bowl** from the mixer. Remember to lower the **Mixer Head** and **Paddle** into the bowl before pressing a **Mixing Button** to start mixing the ingredients.



6. Double-Sided Cake Pan

Pour pretend batter into the **Double-Sided Cake Pan** then flip the cake pan over to show a decorated cake.

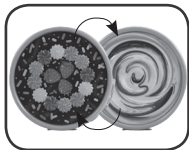

7. Automatic Shut-Off

To preserve battery life, the **Rainbow Learning Lights Mixer™** will automatically shut off after approximately 70 seconds without input. The unit can be turned on again by pressing any button or sliding the **Mode Selector**.

NOTE

Do not place any object into the **Mixing Bowl** to mix other than the **Eggs**, **Pieces of Chocolate** and **Pieces of Butter** provided with the **Rainbow Learning Lights Mixer™**.

NOTE :

Ne placer dans le bol aucun autre objet ou élément que les pièces de jeu en forme d'œufs, de chocolat et de morceaux de beurre, fournies avec le **Rainbow Learning Lights Mixer™**.

NOTE

If the unit powers down or if the light fades out during play, please install a new set of batteries.

Activities

1. Numbers Mode

Slide the **Mode Selector** to Numbers mode. Press one of the **Five Mixing Buttons** to hear the number and see the **Paddle** mix. The number on the **Mixing Button** corresponds with the mixing duration. Press the **Hat Button** to follow a recipe that requests ingredients by quantity. Count along with the mixer for extra baking fun.

2. Colors Mode

Slide the **Mode Selector** to Colors mode. Press one of the **Five Mixing Buttons** to hear the color name and see the **Paddle** mix. The color of the **Mixing Button** corresponds with the color that lights up the bowl. Press the **Hat Button** to follow a recipe that requests ingredients by color.

3. Creative Cakes

Slide the **Mode Selector** to Creative Cakes mode. Press the **Hat Button** to get an idea for a Fantasy Cake and use creativity to make a recipe for the perfect tasty treat. Press one of the **Five Mixing Buttons** to watch the **Paddle** mix and see a colorful light show illuminate the bowl.

SONG LYRICS

Intro Song

Let's mix up a cake.
Check the recipe, make it great!
Woohoo!

Numbers Song

Let's mix up a cake.
Check the recipe, make it great!
1, 2, 3, 4 or 5 ingredients.
Add them to the bowl, let's take it for a spin!
Oh, yeah!

Pour the Batter in Song

When the mixing is done,
Grab the pan, tip the bowl, and pour the batter in.
(Pour the batter in!)
We're gonna' need some heat to cook our tasty treat.
(Mmmmm!)
(Ding!) Flip it over. I think it's done!

Colors Song

Whipping up treats, colorful treats,
Spinning round and round the mixing bowl,
Red, orange, purple, blue and green.

Creative Cakes Song

Let's bake your creation,
Use your imagination!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit is still not working properly, install a brand new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6179
Product Name: Rainbow Learning Lights Mixer™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.



Visit our website for more
information about our products,
downloads, resources and more.

leapfrog.com
leapfrog.ca

Read our complete warranty policy online at
leapfrog.com/legal

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2023 LeapFrog Enterprises, Inc.
All rights reserved.
Printed in China.
IM-617900-000
Version:0