



# Strum & Count Wooden Guitar™

 


## Instruction Manual

This manual contains important information. Please save it for future reference.

# INTRODUCTION

Thank you for purchasing the **Strum & Count Wooden Guitar™**. Enjoy music and early learning with the features and playful tunes of this toy. Turn the dial to explore numbers, colors and musical fun with the sounds of acoustic guitar, electric guitar and barnyard animals.

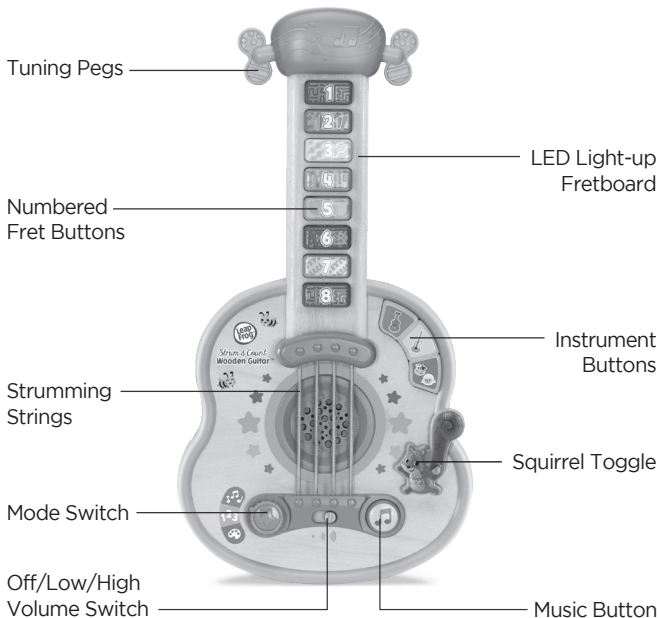

# INCLUDED IN THE PACKAGE

- **Strum & Count Wooden Guitar™**
- Quick Start Guide

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## NOTE

Please ask us about the availability of FSC Products.

## ATTENTION

Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

## NOTE

 
Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

## NOTE

Merci de nous consulter pour connaître la disponibilité des produits FSC.

## Unlock the Packaging Locks


- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

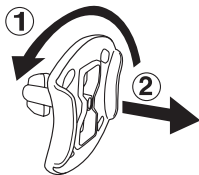

# INSTRUCTIONS

## Battery Removal and Installation

 1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old battery by pulling up on one end of the battery.
4. Install 3 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

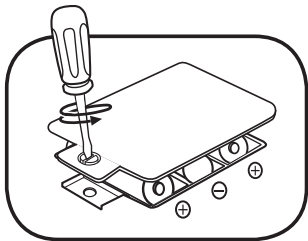

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.



### ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.  
Tenir les piles ou accumulateurs hors de portée des enfants.

## **IMPORTANT: BATTERY INFORMATION**




- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

 
## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

# PRODUCT FEATURES

## 1. Off/Low/High Volume Switch

Slide the switch to **Low**  or **High**  to turn the device on and select the desired volume. To turn the unit off, slide the selector to the **Off**  position.

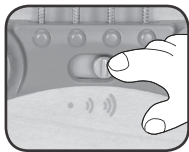


## 2. Mode Switch

Turn the **dial** to select one of 3 modes: **Colors**, **Numbers**, or **Let's Play Together**



## 3. Strumming Strings

 Pluck or strum the **Strings** to make music using the sounds of the acoustic guitar, electric guitar or banjo.

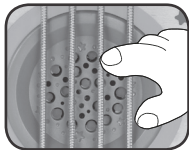

## 4. Numbered Fret Buttons

Press any of the 8 **Buttons** to hear musical notes and hear colors, numbers or animal sounds.



## 5. LED Light-up Fretboard

Strum the strings and press the numbered fret buttons to create a light show.



 
## 6. Instrument Buttons

Choose from acoustic guitar, electric guitar and barnyard animals as the sounds used for making music.



## 7. Squirrel Toggle

Move the **Squirrel Toggle** to hear the squirrel talk and to play musical mini games.

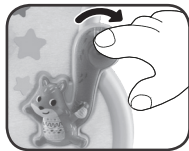

## 8. Music Button

Press the **Music Button** to hear songs, or jam along.



## 9. Tuning Pegs

Turn the pretend **Tuning Pegs** for tactile play.

## 10. Auto Shut-off

To preserve battery life, the **Strum & Count Wooden Guitar™** will automatically shut off after approximately 60 seconds without input. The unit can be turned on again by pressing any **Button** or move the **Squirrel Toggle**.

# Activities

1. **Free Play:** Press the music button, then play the numbered fret buttons or strum the strings to play music.
2. **Music Button:** Press the music button, then play the numbered fret buttons or strum the strings to play along with the music.
3. **Numbers Mode:** Press the numbered fret buttons to hear numbers and see the LEDs light up the fretboard.
4. **Colors Mode:** Press the numbered fret buttons to hear color names and see each corresponding color in the LED Light-up Fretboard.
5. **Let's Play Together Mode:** Choose an instrument and press the numbered fret buttons and strum the strings to make music.
6. **Squirrel Toggle:** Move the squirrel to advance through musical mini games. Each mode has a different mix of games and character talk.
  - In **Let's Play Together mode**, **Squirrel** asks the user to strum the strings to finish a song in sections, or pluck the strings to finish a familiar tune note by note.
  - In **Numbers mode**, **Squirrel** asks the user to strum the strings to count, or press a numbered fret button to finish a song, or strum the strings to play a song.
  - In **Colors mode**, **Squirrel** asks the user to strum the strings to play a song, or press a numbered fret button to finish a song.



## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

## Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

### **IMPORTANT NOTE:**

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

## **NOTE**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **CAUTION**

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## **Supplier's Declaration of Conformity**

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®  
Model: 6208  
Product Name: Strum & Count Wooden Guitar™  
Responsible Party: LeapFrog Enterprises, Inc.  
Address: 2200 Powell Street, Suite 500  
Emeryville, CA 94608  
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***leapfrog.com***  
***leapfrog.ca***

**Read our complete warranty policy online at  
*leapfrog.com/legal***

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
© 2024 LeapFrog Enterprises, Inc.  
All rights reserved.  
IM-620800-000  
Version:0