



Scout's Ring & Record Learning Phone™

 


Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing **Scout's Ring & Record Learning Phone™**! Dial up some fun as you explore numbers, the Alphabet Song, weather, greetings in French and Mandarin and more. You can also save a voice message on the device by using the Record Button. Then, play it back by pressing the Message button or activate the Silly Slider to hear your message added to songs or played in funny voices!

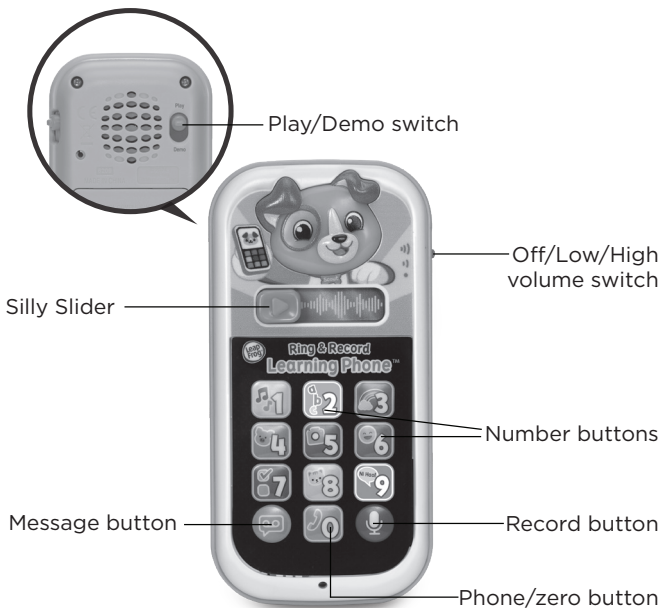

INCLUDED IN THE PACKAGE

- Scout's Ring & Record Learning Phone™
- Quick Start Guide

WARNING:

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.




Unlock the Packaging Locks:

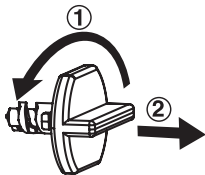- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.



Activate Standard Play Mode

This product is in Demo mode in the packaging. To activate standard Play mode, please complete the following steps:

 
1. Locate the Play/Demo switch  on the back of the toy.
2. Slide the switch from Demo  to Play .

The recorded message will now be saved when the toy is powered off.

GETTING STARTED

Battery Removal and Installation

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

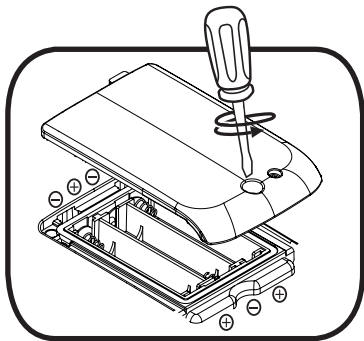

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

 
www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Off/Low/High Volume Switch

Slide the switch to **Low**)) or **High**))) to turn the device on and select the desired volume. To turn the unit off, slide the switch to the **Off** ● position.

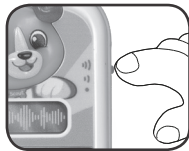


2. Number Buttons

Each button has three types of audio. Press a button multiple times to go through number names, learning phrases and silly sounds.




3. Message Button

 If no user messages have been recorded, press to hear fun messages from Scout. If a user has recorded a message, press this button to hear it.

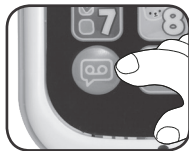

4. Phone/Zero Button

 Press to call Scout and his friends. Sometimes Scout and his friends will even call you! The phone will ring and this button will flash. Press it to answer the call.

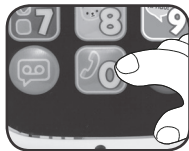

5. Record Button

Press to record a message. When you are finished, press again to end the message. The maximum message length is 10 seconds. After a message has been saved, press the Message Button to hear it or move the Silly Slider to the right to listen to it added to in a song or played in a funny voice.



 
6. Silly Slider

Slide to the left to hear silly sounds. If a message has been recorded, slide to the right to hear the message made into a song or listen to it transformed into a funny voice.



7. Play/Demo switch

When this slider is in **Demo** the recorded message will not be saved after the device is powered off. Slide to **Play** to save a recorded message even when the device is powered off.

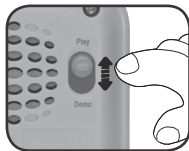

Songs

Ring and Record

Ring and record!

I love to sing and record.

Pick up the phone and leave a message at the beep.

Woof woof woof!

Alphabet Song

A-B-C-D-E-F-G,

H-I-J-K-L-M-N-O-P

Q-R-S-T-U-V

W-X-Y and Z!

Rainbow Song

We stick together in sunny weather.

Rain go away, come again some other day.

Ooh, there's a rainbow!

Lovely colours too!

Red, orange, yellow, purple, green and blue!

Can you Find It Song

Can you find it? Can you find it?

Touch your nose (or "belly" or "toes")!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Try to change the batteries for new ones if the toy is not working properly.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to play with again.
5. If the unit still does not work, install a brand new set of batteries.

Environmental phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
TM & © 2024 LeapFrog Enterprises, Inc.
All rights reserved.
IM-620900-002
Version:0