



Twinkle Lights Learning Piano™



Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing **Twinkle Lights Learning Piano™**! Explore music, colours and instruments with engaging light up play on this colourful two-octave piano. Music games introduce a variety of instruments and musical styles. Children can play along to popular tunes and make their own music to foster creativity and music skills.



INCLUDED IN THE PACKAGE



Twinkle Lights Learning Piano™



4 Feet

- Quick Start Guide

WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

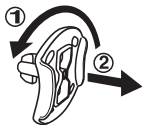

GETTING STARTED

 
ACTIVATE NORMAL PLAY MODE

This product is in Try-Me mode in the package. To activate normal play mode, please remove the unit from the package. Then, turn the toy Off and then back On.

ASSEMBLY


Adult assembly is required.

Plug the removable feet into the holes on the underside of the toy in the correct orientation as shown below.

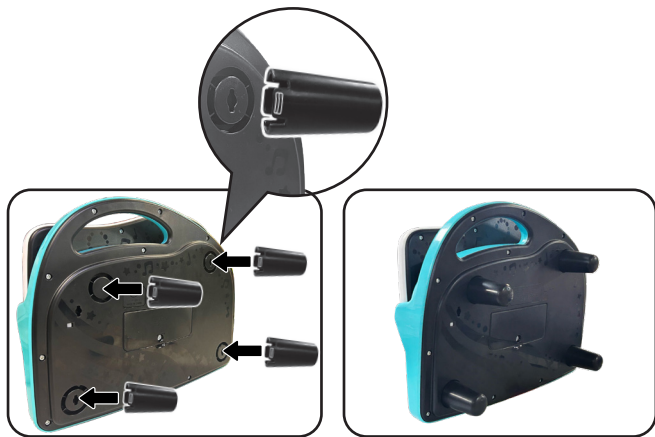

BATTERY REMOVAL AND INSTALLATION

 1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new 1.5V AA (LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

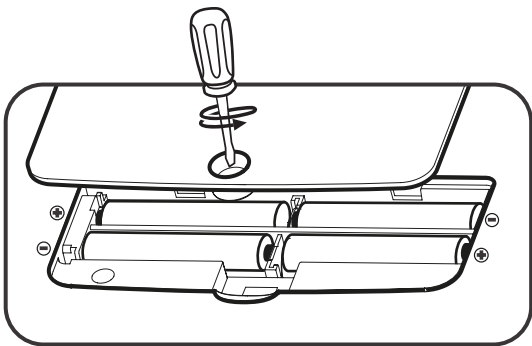

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

 
www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. Power On/Off Button

To turn the unit on, press the **Power On/Off Button**. To turn the unit off, press the **Power On/Off Button** one more time.

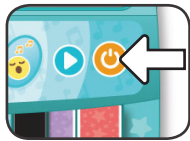


2. Activity Slider

Slide the switch to select 3 different modes:


🎵 Play Music

 Play your own melodies on the piano and explore 10 instruments and sounds.

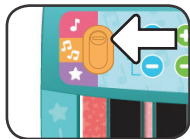

🎵 Duet Time

 Press a piano key to select from 15 tunes. Then, press the keys to play along.

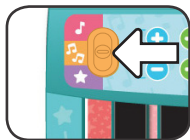


★ Music Games

The **Star Lights Panel** position selects the game. Lift up the panel for **Follow the Lights** or lower the panel for **Jam Session**.

Follow the Lights - First, press a key to select from 15 tunes. Follow the light up stars to learn to play the tunes.

 Jam Session - Press the piano keys to play fun music in three different styles of *Rock & Roll*, *Classical*, and *Jazz*.

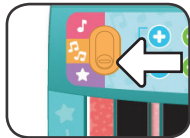

3. Star Lights Panel & Panel Hinge Switch

Lift up the panel to turn on the 60 star lights or lower the panel to turn the lights off. In Music Games mode, the panel position changes the play activity.



 
4. 25 Piano Keys

Play music by pressing any of the 15 rainbow coloured and 10 black piano keys.




5. Metronome Buttons

Press the **Metronome Buttons** to turn on the metronome and select from five tempo settings. Press the Metronome Up Button to increase the tempo. Press the Metronome Down Button to decrease the tempo. Press the Down Button multiple times to turn the metronome off.

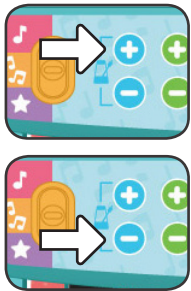

6. Volume Buttons

 Press the **Volume Buttons** to adjust the volume and select from five volume levels.

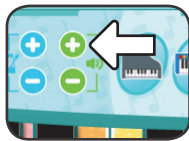


7. 10 Instrument & Sounds Buttons

Choose from 6 traditional instruments of piano, electric keyboard, guitar, trumpet, xylophone, flute and 4 fun sounds of star chimes, animal sounds, colours/saxophone and singing.



8. Music Button

 In Play Music mode, press to cycle through 33 tunes & songs. In Duet Time and Music Games, press to change to the next tune.

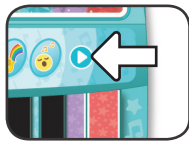

9. Automatic Shut-Off

To preserve battery life, the unit will automatically shut off after approximately 120 seconds without input. The unit can be turned on again by pressing the Power On/Off Button.

SONG LYRICS

1. Rainbow Melody Song

Jam along to a rainbow melody.
Make the stars shine so brightly.
Hit the keys! Come on, make some sounds.
It's time to get down and dance around!

2. Colour Party Song

Tune in to the colour party!
We're dancing in the rainbow light.
Make the stars twinkle and shine!
Rockin' tunes day or night!

3. Make-A-Song Song

Make, make, make a song.
Tap, tap, tap along.
Play it fast, or play it slow.
Put your fingers on the keys,
And give it a go!

MELODIES & SONGS

In Duet Time mode, below are the melodies & songs assigned to the rainbow colour piano keys from left to right:

1. Rockin' Robin
2. The Entertainer
3. Puttin' on the Ritz
4. Be My Little Baby Bumble Bee
5. Rhapsody in Blue
6. Mozart: Rondo alla Turca
7. Clair de Lune
8. Funiculì, Funiculà
9. Bach: Brandenburg Concerto 4
10. Bach: Minuet
11. If You're Happy and You Know It
12. Old MacDonald
13. Rainbow Melody Song
14. Colour Party Song
15. Make-A-Song Song

In "Follow the Lights" under the Music Games mode, below are the melodies assigned to the rainbow colour piano keys from left to right, in order from easy to difficult:

1. Mary Had a Little Lamb
2. Twinkle, Twinkle, Little Star
3. London Bridge
4. Bingo
5. Ode to Joy
6. Muffin Man
7. Frère Jacques
8. A-Tisket, A-Tasket
9. Row, Row, Row Your Boat
10. Vivaldi: Spring
11. Farmer in the Dell

12. William Tell Overture
13. Singin' in the Rain
14. Étude 1
15. Chopsticks

In “Jam Session” under the Music Games mode, below are the melodies:

1. Classical Melody
2. Jazz Melody
3. Rock & Roll Melody

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

IMPORTANT NOTE:

If the problem persists, please call our Consumer Services Department at **01702 200244** in the U.K. or email support@leapfrog.co.uk. Creating and developing **LeapFrog®** products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/en-gb/legal

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

www.leapfrog.com

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
© 2026 LeapFrog Enterprises, Inc.
All rights reserved.
IM-621000-001
Version:0