



# My First STEAM Laptop™

 


## Instruction Manual

This Manual contains important information. Please save it for future reference.

# INTRODUCTION

Thank you for purchasing the **My First STEAM Laptop™**. Steam ahead into a world of learning as you investigate science concepts with Dr. Frankensteam and his buddy Steam-Bot! Along the way, explore technology, engineering, letter names, letter sounds, numbers, counting and more!

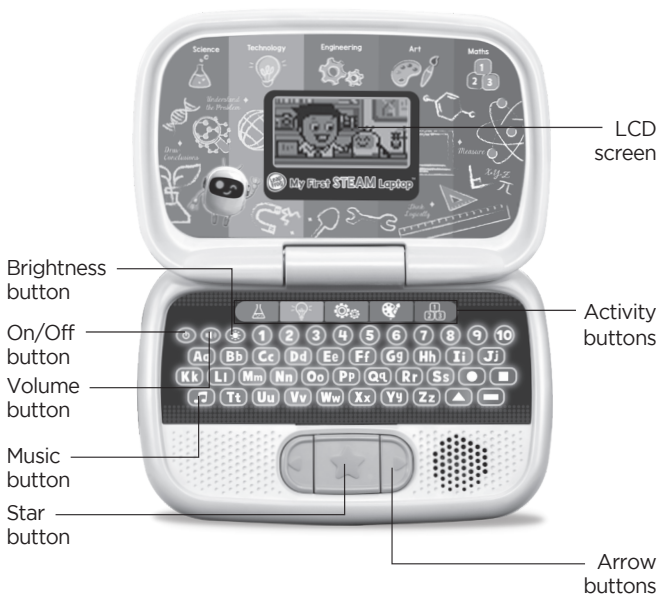

# INCLUDED IN THE PACKAGE

- My First STEAM Laptop™
- Quick Start Guide

## WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## Unlock the Packaging Locks

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

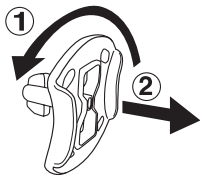


# INSTRUCTIONS

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned **OFF**.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

### **WARNING:**

 Adult assembly required for battery installation.  
Keep batteries out of reach of children.

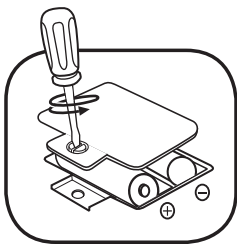

## **IMPORTANT: BATTERY INFORMATION**

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## **RECHARGEABLE BATTERIES**

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.leapfrog.co.uk/recycle](http://www.leapfrog.co.uk/recycle)

[www.leapfrog.com.au/recycle](http://www.leapfrog.com.au/recycle)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

# PRODUCT FEATURES

## 1. On/Off Button

Press the **On/Off Button** to turn the toy on and off.



## 2. Brightness Button

Press to access the screen's brightness settings.



 
## 3. Volume Button

Press to access the volume settings.



## 4. Activity Buttons

Press to choose a fun learning activity.

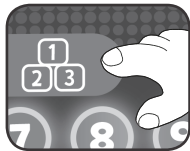


## 5. LCD Screen

The **LCD Screen** displays the toy's animations.



## 6. Shape Buttons

 Press the **Shape Buttons** to see shape animations and hear silly phrases.

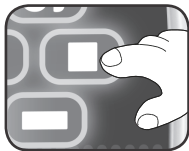

## 7. Number Buttons

Press the **Number Buttons** to see number animations and hear funny phrases.



## 8. Letter Buttons

Press the **Letter Buttons** to see letter animations and hear humorous phrases.



 
## 9. Music Button

Press the **Music Button** to jam along to learning songs.



## 10. Star Button

The **Star Button** is used as an action button in certain activities. When no activity is in progress, it triggers fun letter and number animations.

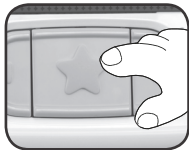



## 11. Arrow Buttons

The **Arrow Buttons** are used to choose items in certain activities. When no activity is in progress, they also trigger fun letter and number animations.



## 12. Automatic Shut-Off

To preserve battery life, the **My First STEAM Laptop™** will automatically shut off after approximately 45 seconds without input. The unit can be turned on again by pressing the **On/Off Button**.

# ACTIVITIES

 
### 1. Science

Plant a seed, dig a hole, water it, add sun and watch it grow. Practise your counting along the way!




### 2. Technology

Help Dr. Frankensteam find his missing lab equipment by identifying 16 different machines and devices. Two different devices will be shown at a time and he will describe the device he is looking for. Press the **Arrow button** to highlight one and then press the **Star button** to select it. When you select the correct answer, a silly animation will show the device in action.

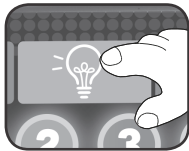


### 3. Engineering

 Use shapes to rebuild machines with missing parts. Press the **Shape buttons** to fill in the missing pieces. Finding three shapes completes the animation and triggers a fun animation.

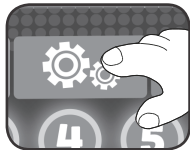


### 4. Art

 Get creative and use shapes to make unique pictures. Press a **Shape button** and watch them pop into the images. Keep adding shapes until the picture mosaic is complete.

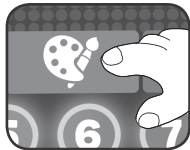

### 5. Maths

 Help recycle cans, dig for dinosaur bones, repair a robot and fill test tubes. Press the **Star button** to perform each of the actions as Dr. Frankensteam counts. Then, complete the activity by pressing the **Number button** that matches the correct amount of items on the screen.

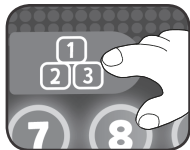

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

# CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)  
Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155  
Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## **NZ Customers:**

Phone: 0800 400 785  
Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [leapfrog.com/en-au/legal/warranty](http://leapfrog.com/en-au/legal/warranty) for further information.



**Visit our website for more  
information about our products,  
downloads, resources and more.**

***leapfrog.com***

LeapFrog Enterprises, Inc.  
A subsidiary of VTech Holdings Limited.  
© 2025 LeapFrog Enterprises, Inc.  
All rights reserved.  
IM-621400-000  
Version:0