



Clever Heroes Walkie-Talkies™



6217



4521

Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Clever Heroes Walkie-Talkies™**. Practice listening and speaking, talk with heroes to learn about their helpful professions, and chat with friends up to 300 metres* away!

*The communication range quoted is calculated based on an unobstructed line of sight test under optimum conditions. Actual range will vary depending on terrain and conditions, and is often less than the maximum possible. Your actual range will be limited by several factors including, but not limited to: terrain, weather conditions, electromagnetic interference, and obstructions.



Green handset



Blue handset

INCLUDED IN THE PACKAGE

- 1 Clever Heroes Walkie-Talkies™ green handset
- 1 Clever Heroes Walkie-Talkies™ blue handset
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION

 
Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'instructions car il comporte des informations importantes.

Unlock the Packaging Locks:

- ① Turn the packaging lock counterclockwise several times.
- ② Pull out and discard the packaging lock.

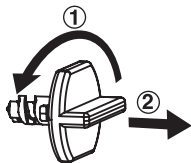

GETTING STARTED

ACTIVATE STANDARD PLAY MODE

This product is in Demo mode in the packaging. To activate standard Play mode, please complete the following steps:

 
1. Locate the Demo/Play Switch  on the back of the Green handset.
2. Slide the Switch from Demo  to Play .

PAIRING

No need to pair walkie talkies, as the green handset and blue handset are already paired.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the units are turned **OFF**.
2. Find the battery covers located on the bottom. Use a screwdriver to loosen the screws, and then open the battery covers.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries in each unit following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery covers and tighten the screws to secure.

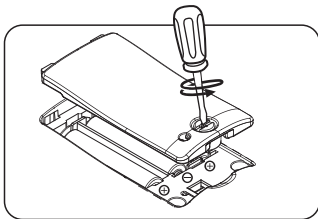



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte. Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

RF Exposure Information and Statement:

 
These requirements set a SAR limit of 4.0 W/kg averaged over 10 gram of tissue. The highest SAR value for this model 6217 and this model 4521 when worn on the body are less than 0.05W/Kg. This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

Ces exigences fixent une limite de das de 4.0 W/kg en moyenne sur 10 grammes de tissu. Les valeurs de das les plus élevées pour ce modèle 6217 et ce modèle 4521 lorsqu'ils sont portés sur le corps sont inférieures à 0.05W/Kg. Pour se conformer aux exigences d'exposition aux radiofréquences, une distance minimale de 0mm doit être maintenue entre le corps de l'utilisateur et le combiné, y compris l'antenne. Les pinces de ceinture, les étuis et autres accessoires similaires utilisés par cet appareil ne doivent pas contenir de composants métalliques. Les accessoires portatifs qui ne répondent pas à ces exigences peuvent ne pas se conformer aux exigences d'exposition RF et doit être évitée. Utilisez uniquement l'antenne fournie ou une antenne approuvée

PRODUCT FEATURES


1. Off/Low/High Volume Switch

To turn the unit On, slide the Off/Low/High Volume Switch to the Low » or High » position. To turn the unit Off, slide the Off/Low/High Volume Switch to the Off ○ position.

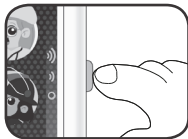

2. Talk Button

 Press and hold the orange Talk Button and then speak into the handset to transmit a message in Walkie-Talkie mode. Release the orange Talk Button when you are finished speaking. In Hero mode, press and hold the orange Talk button on the green handset to pretend to talk to hero helpers and explore how to be a hero in the community.

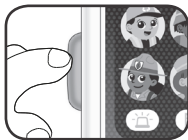


3. Walkie-Talkie Mode Button

Switch to Play mode and press the Walkie-Talkie Mode Button to enter walkie-talkie mode. By pressing the orange Talk Button, the green handset and blue handset will be able to communicate with each other.




4. Hero Mode Button

 Press the Hero Mode Button to enter Hero mode and interact with any of the Hero buttons, the Missions Button, News Around Town Button, and Be A Hero Button. The green handset and the blue handset will not be able to communicate with each other while in this mode.

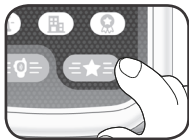

5. Missions Button

 Help solve problems that arise in the community by answering different questions.

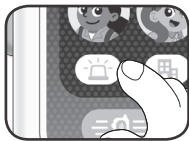


6. News Around Town Button

Hear how heroes were helpful in the community.




7. Be A Hero Button

 Explore and learn about what it means to create a community and how everyone can make our communities better.

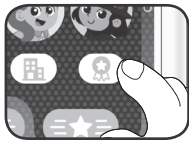

8. Recycling Truck Driver Button

 Press the Recycling Truck Driver Button to learn more about this hero or to select the Recycling Truck Driver as an answer while in Missions mode.

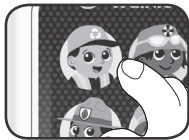

9. Beach Patrol Button

Press the Beach Patrol Button to learn more about this hero or to select Beach Patrol as an answer while in Missions mode.



10. Veterinarian Button

Press the Veterinarian Button to learn more about this hero or to select the Veterinarian as an answer while in Missions mode.



11. Park Ranger Button

Press the Park Ranger Button to learn more about this hero or to select the Park Ranger as an answer while in Missions mode.



12. Train Conductor Button

Press the Train Conductor Button to learn more about this hero or to select the Train Conductor as an answer while in Missions mode.



13. Firefighter Button

Press the Firefighter Button to learn more about this hero or to select the Firefighter as an answer while in Missions mode.



14. Automatic Shut-Off

To preserve battery life, the Clever Heroes Walkie-Talkies™ will automatically shut off after approximately 10 minutes without input in Play mode. The units can be turned on again by pressing the Talk Button, sliding the Off/Low/High Volume Switch, or by pressing any of the buttons on the front of the device (green handset only). If the green handset is in Hero mode, the blue handset will automatically shut off after approximately 1 minute without input. In Demo mode, the green handset will go to sleep after 15 seconds without input; the blue handset will go to sleep after 6 seconds without input.

The Clever Heroes Walkie-Talkies™ will automatically shut off if the Talk Button is held down continuously for approximately 10 minutes in any mode. This is to preserve battery life if the Talk Button is unintentionally held down while being stored or carried.

CARE & MAINTENANCE

1. Keep the units clean by wiping them with a slightly damp cloth.
2. Keep the units out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the units will not be in use for an extended period of time.
4. Do not drop the units on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason a unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
- (2) This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

- 1) L'appareil ne doit pas produire de brouillage;
- 2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Carrier Frequency: 2402MHz - 2480MHz

Max RF output power: 10mW(10dBm)

Fréquence porteuse: 2402MHz - 2480MHz

Puissance RF maximale : 10mW(10dBm)



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com
leapfrog.ca

**Read our complete warranty policy online at
*leapfrog.com/legal***

LeapFrog Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
© 2025 LeapFrog Enterprises, Inc.
All rights reserved.
IM-621700-000
Version:1