



Clever Heroes Walkie-Talkies™



6217



4521

Instruction Manual

This Manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Clever Heroes Walkie-Talkies™**. Practise listening and speaking, talk with heroes to learn about their helpful professions, and chat with friends up to 1000 feet* away!

*The communication range quoted is calculated based on an unobstructed line of sight test under optimum conditions. Actual range will vary depending on terrain and conditions, and is often less than the maximum possible. Your actual range will be limited by several factors including, but not limited to: terrain, weather conditions, electromagnetic interference, and obstructions.



Green handset



Blue handset

INCLUDED IN THE PACKAGE

- 1 Clever Heroes Walkie-Talkies™ green handset
- 1 Clever Heroes Walkie-Talkies™ blue handset
- Quick Start Guide

WARNING

 
All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

Unlock the Packaging Locks:

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

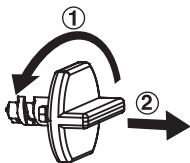

GETTING STARTED

ACTIVATE STANDARD PLAY MODE

This product is in Demo mode in the packaging. To activate standard Play mode, please complete the following steps:

1. Locate the Demo/Play Switch  on the back of the Green handset.
2. Slide the Switch from Demo  to Play .

PAIRING

 
No need to pair walkie-talkies, as the green handset and blue handset are already paired.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the units are turned **OFF**.
2. Find the battery covers located on the bottom. Use a screwdriver to loosen the screws, and then open the battery covers.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 3 new AAA (AM-4/LR03) batteries in each unit following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery covers and tighten the screws to secure.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

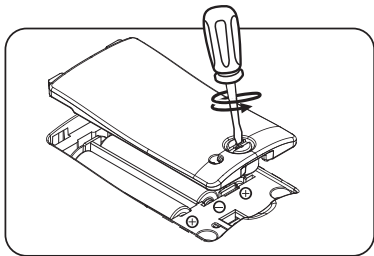

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

 
RF Exposure Information and Statement:

These requirements set a SAR limit of 4.0 W/kg averaged over 10 gram of tissue. The highest SAR value for this model 6217 when worn on the body is 0.031W/Kg. The highest SAR value for this model 4521 when worn on the body is 0.012W/Kg. This device was tested for typical body-worn operations. To comply with RF exposure requirements, a minimum separation distance of 0mm must be maintained between the user's body and the handset, including the antenna. Third-party belt-clips, holsters, and similar accessories used by this device should not contain any metallic components. Body-worn accessories that do not meet these requirements may not comply with RF exposure requirements and should be avoided. Use only the supplied or an approved antenna.

PRODUCT FEATURES


1. Off/Low/High Volume Switch

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the **Low »** or **High »** position. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off o** position.

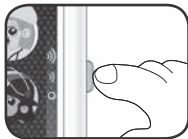

2. Talk Button

 Press and hold the orange **Talk Button** and then speak into the handset to transmit a message in Walkie-Talkie mode. Release the orange **Talk Button** when you are finished speaking. In Hero mode, press and hold the orange **Talk Button** on the green handset to pretend to talk to hero helpers and explore how to be a hero in the community.

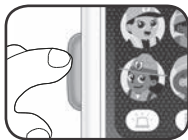


3. Walkie-Talkie Mode Button

Switch to Play mode and press the **Walkie-Talkie Mode Button** to enter Walkie-Talkie mode. By pressing the orange **Talk Button**, the green handset and blue handset will be able to communicate with each other.



4. Hero Mode Button

 Press the **Hero Mode Button** to enter Hero Mode and interact with any of the **Hero Buttons**, the **Missions Button**, **News Around Town Button**, and **Be A Hero Button**. The green handset and the blue handset will not be able to communicate with each other while in this mode.

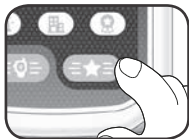

5. Missions Button

Help solve problems that arise in the community by answering different questions.



 
6. News Around Town Button

Hear how heroes were helpful in the community.




7. Be A Hero Button

Explore and learn about how you can be a hero in your community and how everyone can make our communities better.

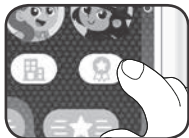

8. Recycling Truck Driver Button

 Press the **Recycling Truck Driver Button** to learn more about this hero or to select the Recycling Truck Driver as an answer while in Missions mode.

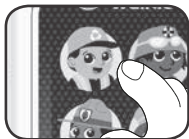

9. Beach Patrol Button

Press the **Beach Patrol Button** to learn more about this hero or to select Beach Patrol as an answer while in Missions mode.



10. Veterinarian Button

Press the **Veterinarian Button** to learn more about this hero or to select the Veterinarian as an answer while in Missions mode.



11. Park Ranger Button

Press the **Park Ranger Button** to learn more about this hero or to select the Park Ranger as an answer while in Missions mode.



12. Train Conductor Button

Press the **Train Conductor Button** to learn more about this hero or to select the Train Conductor as an answer while in Missions mode.



13. Firefighter Button

Press the **Firefighter Button** to learn more about this hero or to select the Firefighter as an answer while in Missions mode.



14. Automatic Shut-Off

To preserve battery life, the **Clever Heroes Walkie-Talkies™** will automatically shut off after approximately 10 minutes without input in Play mode. The units can be turned on again by pressing the **Talk Button**, sliding the **Off/Low/High Volume Switch**, or by pressing any of the buttons on the front of the device (green handset only). If the green handset is in Hero mode, the blue handset will automatically shut off after approximately 1 minute without input. In Demo mode, the green handset will go to sleep after 15 seconds without input; the blue handset will go to sleep after 6 seconds without input.

The **Clever Heroes Walkie-Talkies™** will automatically shut off if the **Talk Button** is held down continuously for approximately 10 minutes in any mode. This is to preserve battery life if the **Talk Button** is unintentionally held down while being stored or carried.

CARE & MAINTENANCE

1. Keep the units clean by wiping them with a slightly damp cloth.
2. Keep the units out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the units will not be in use for an extended period of time.
4. Do not drop the units on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason a unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **OFF** and back **ON**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

DECLARATION OF CONFORMITY

Hereby, **LeapFrog®**, a division of VTech Electronics Europe BV, declares that the radio equipment type 6217 is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address :

www.leapfrog.com/en-gb/legal/eudoc

Frequency Band: 2402MHz - 2480MHz

Maximum RF power: 0.01 W(10dbm)

DECLARATION OF CONFORMITY

Hereby, **LeapFrog®**, a division of VTech Electronics Europe Plc, declares that the radio equipment type 6217 is in compliance with The Radio Equipment Regulations 2017 (2017 No.1206). The full text of the Declaration of conformity is available at the following internet address:

www.leapfrog.com/en-gb/legal/eudoc

Frequency Band: 2402MHz - 2480MHz

Maximum RF power: 0.01 W(10dbm)

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



**Visit our website for more
information about our products,
downloads, resources and more.**

leapfrog.com

LeapFrog® Enterprises, Inc.,
A subsidiary of VTech Holdings Limited.
© 2025 LeapFrog Enterprises, Inc.
All rights reserved.
IM-621700-001
Version:0