



Let's Record! Learning Karaoke™





Instruction Manual

This manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Let's Record! Learning Karaoke™**. Sing, boogie and make funny voices as you explore letters, numbers, favorite kid songs and more!

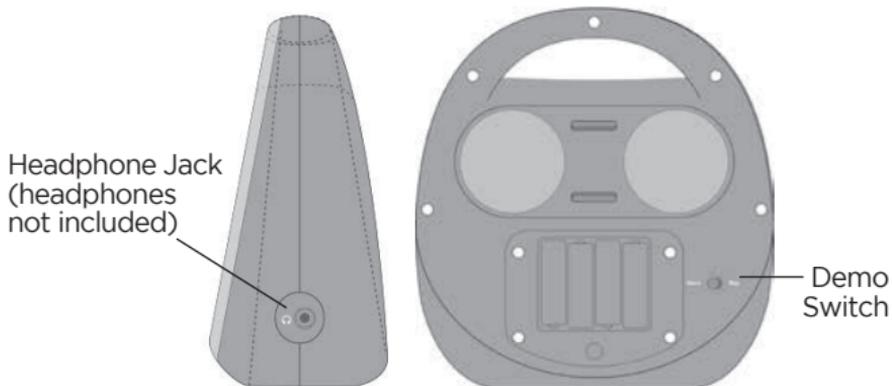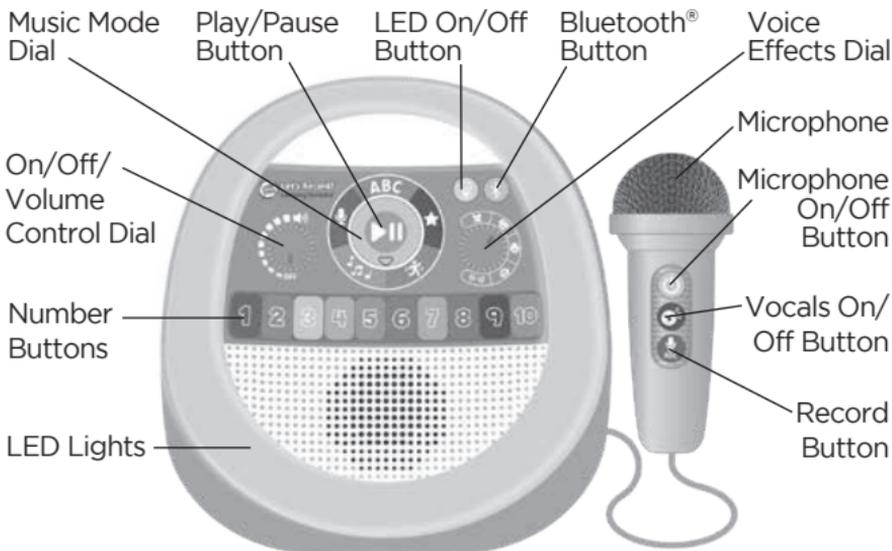

INCLUDED IN THE PACKAGE

- One **Let's Record! Learning Karaoke™**
- Quick Start Guide

WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE

Please save this Instruction Manual as it contains important information.

ATTENTION


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.


Unlock the Packaging Locks

- ① Rotate the packaging lock 90 degrees counterclockwise.
- ② Pull out the packaging lock and discard.

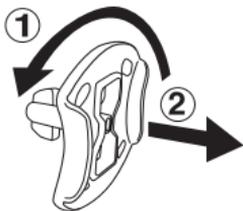

Unlock the Packaging Locks

- ① Turn the packaging locks counterclockwise several times.
- ② Pull out and discard the packaging locks.

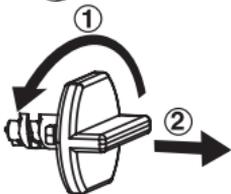

ACTIVATE NORMAL PLAY MODE

This product is in Demo mode in the packaging. To activate normal play mode, please complete the following steps:

1. Look on the back of the toy.
2. Slide the orange switch from Demo to Play.

Note:


Place the microphone in the storage at the rear of the machine, with the buttons facing outward.



INSTRUCTIONS

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old battery by pulling up on one end of the battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

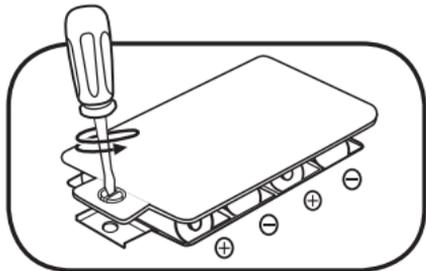

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.



ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

PRODUCT FEATURES


1. On/Off Volume Dial

Turn the **On/Off/Volume Control Dial** to turn the toy on, off and to adjust the music volume. The volume of the microphone cannot be changed.



2. Music Mode Dial

Turn the **Music Mode Dial** to choose a mode. After selecting a mode, press a **Number Button** to play a song, melody or voice recording, or press the **Play/Pause Button** to randomly play a song, melody or voice recording.

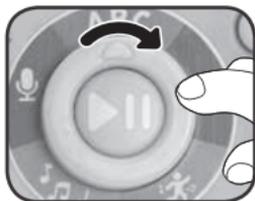

3. Microphone On/Off Button


Press this button to turn the **Microphone** on and off.



4. Vocals On/Off Button

Press this button to turn the vocals on and off for a song.

Note: The music in Magical Melodies mode has no vocals and thus there are no vocals to activate in this mode.

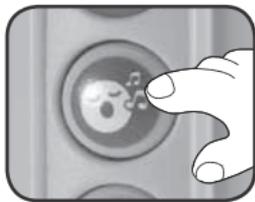


5. Record Button

Press the **Record Button** and then listen to the instructions to record your own audio. Each numbered button can save a two-minute piece of audio.



6. Voice Effects Dial

Turn this dial to choose a voice effect, then speak into the **Microphone** to hear the chosen effect.

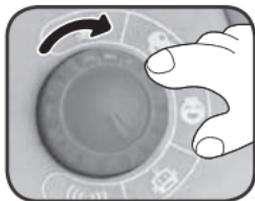


7. Number Buttons

Press to play a song, melody or voice recording in the different modes.




8. Play/Pause Button

Press to hear a song, melody or recording in the selected mode. Press again to pause.

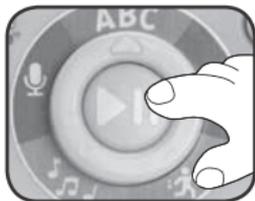


9. LED On/Off Button

Press to turn the **LED lights** on and off.

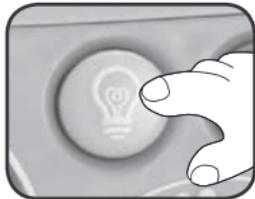

10. Bluetooth Button


Press and hold for three seconds to activate **Bluetooth®** wireless technology. Open your personal Bluetooth-enabled device to initiate pairing. When asked, press the **Play/Pause button** on the **Let's Record!**

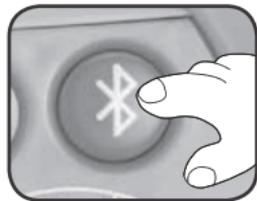

Learning Karaoke™ toy to authorize the connection. After successfully connecting your device via Bluetooth®, you can stream and enjoy your music. To clear any previous device connections, press and hold the **Play/Pause Button** for five seconds. When in Bluetooth® mode, adjust the volume of the music using the phone's volume controls and the toy's **On/Off/Volume Control Dial**.

11. Headphone Jack

Plug headphones into the jack to listen to audio with them.

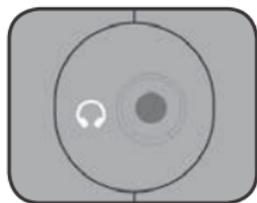

12. Demo Switch

The toy is shipped in Demo mode. In Demo mode, all recordings are deleted when the toy is turned off. Switch the toy to Play mode when it is removed from the box.



13. Automatic Shut-Off

To preserve battery life, the toy will automatically power down after 60 seconds of inactivity. If the microphone is on, the toy will power down if a button or dial isn't touched in 5 minutes.

NOTE:

If the unit powers down or if the light fades out during play, please install a new set of batteries.

Activities

1. Learning Songs

Turn the **Music Mode Dial** to Learning Songs and press a **Number Button** to select from ten educational songs.

2. All-Star Favorites

Turn the **Music Mode Dial** to All-Star Favorites and press a **Number Button** to select from ten favorite children's songs.

3. Active Songs

Turn the **Music Mode Dial** to Active Songs and press a **Number Button** to select from ten voice-changing or movement songs. The first two songs, "Funky Robot" and "Silly Voices," are voice-changing songs. At certain points in these songs, the toy will automatically apply silly voice effects if the user is singing into the microphone.

4. Magical Melodies

Turn the **Music Mode Dial** to Magical Melodies and press a **Number Button** to select from ten well-loved musical pieces.

5. Voice Vault

Turn the **Music Mode Dial** to Voice Vault and press a **Number Button** to select from your recorded audio. To delete a recording, press and hold its **Number Button** for 1.5 seconds.

SONGS AND MELODIES

Learning Songs

1. The Alphabet Song
2. Counting 1 to 10
3. The Seven Days of the Week
4. Scrub-a-Dub-Dub
5. Colors
6. Animal Sounds
7. Let's Grow a Plant
8. What Is the Weather Like Outside Today?
9. I Can Boogie Woogie All Around
10. Can You Hear the Little Donkey?

All-Star Favorites

1. Old MacDonald Had a Farm
2. Twinkle, Twinkle, Little Star
3. Mary Had a Little Lamb
4. The Wheels on the Bus
5. I'm a Little Teapot
6. The Muffin Man
7. The Itsy Bitsy Spider
8. Row, Row, Row Your Boat
9. Down by the Bay
10. Five Little Speckled Frogs

Active Songs

1. Funky Robot
2. Silly Voices
3. Animals Rule
4. Dance It Out
5. Animal Jive
6. If You're Happy and You Know It
7. Give Me a Hug
8. Head, Shoulders, Knees and Toes
9. Funky Bear
10. Dance and Wiggle

Magical Melodies

1. London Bridge
2. Make New Friends
3. John Jacob Jingleheimer Schmidt
4. The More We Get Together
5. Take Me Out to the Ball Game
6. Bingo
7. Are You Sleeping?
8. The Farmer in the Dell
9. Pop Goes the Weasel
10. On Top of Old Smokey

Lyrics to Voice-Changing Songs

Funky Robot

Woke up in the middle of the night,
Outside, I saw bright blue lights.
There was a spaceship, door open wide.
Then a funky robot stepped outside.

He said:

I've come from outer space to your hometown
To show the Earthlings how to get down.
I'm the dancing robot from outer space,
So move your body and kick up the bass.

Next day, it was time for a snack.
I went to my cubby and got my backpack.
It's almost summer so the room is hot.
Teacher opened up the door and in danced the robot.

I've come from outer space to your hometown
To show the Earthlings how to get down.
I'm the dancing robot from outer space,
So move your body and kick up the bass.

Later, I was drawing with chalk at recess
Finishing a picture of a dog in a blue dress.
Feet stepped through my chalk, I had to stop.
I looked up, everybody was dancing with the robot.

I've come from outer space to your hometown
To show the Earthlings how to get down.
I'm the dancing robot from outer space,
So move your body and kick up the bass.

Silly Voices

It's time to get tiny,
And find some cheese in the house!
It's time to grab the mic and sing like...
A mouse!
A mouse!
I'm a mouse!
Squeak! Squeak! Squeak, squeak, squeak! Oh yeah!

It's time to get funky. Little arms like to flex!
It's time to grab the mic and sing like...
T-Rex!
I'm a dinosaur - roar! Roar!
I'm a dinosaur - roar! Roar! ROAR!

Let's climb in a cave. Get a rope and let's go!
It's time to rock the mic and sing with...echo.
Echo! Echo! Echo!

We are all so goofy and having fun with our choices - making silly voices!
Squeak, squeak like a mouse
Roar, roar like a dinosaur
And don't forget echo.
We're having fun making silly voices.
We're having fun making silly voices.
Yeah!

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles. Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Supplier's Declaration of Conformity

47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6218
Product Name: Let's Record! Learning Karaoke™
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500
Emeryville, CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRE OPERATION.

Bluetooth Statement

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by VTech is under license. Other trademarks and trade names are those of their respective owners.

RF Warning Statement

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

- (1) This device may not cause interference.
 - (2) This device must accept any interference, including interference that may cause undesired operation of the device.
- L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :
- (1) L'appareil ne doit pas produire de brouillage;
 - (2) L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.



***Visit our website for more
information about our products,
downloads, resources and more.***

***leapfrog.com
leapfrog.ca***

Read our complete warranty policy online at
leapfrog.com/warranty
leapfrog.ca/warranty

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
© 2025 LeapFrog Enterprises, Inc.
All rights reserved.
IM-621800-000
Version:0