



# Scoop & Learn Ice Cream Pop-Up Shop



## Instruction Manual

This manual contains important information. Please keep it for future reference.

# INTRODUCTION

Thank you for purchasing the **Scoop & Learn Ice Cream Pop-Up Shop**! Colours, counting and sweet pretend play are always on the menu. Four flavours of ice cream, three toppings and four baked treats combine for 100s of tasty creations and hours of fun and learning.

2 Lollipops

2 Double-sided Menus

4 Baked Treats

2 Ice Cream Cones

Bell

8 Double-sided Signs

Magic Scooper

8 Ice Cream Scoops

3 Toppings

Ice Cream Cart  
Assembly required

10 Paper Notes

10 Plastic Coins



# Magic Scooper

Light-Up Star Button

Off/Low/High Volume  
Switch

Release Trigger



## INCLUDED IN THE PACKAGE

- Scoop & Learn Ice Cream Pop-Up Shop
- Quick Start Guide



1 Magic Scooper



2 Brown Chocolate  
Ice Cream Scoops



2 Yellow Vanilla Ice  
Cream Scoops



2 Pink Strawberry  
Ice Cream Scoops



2 Green Mint  
Ice Cream Scoops



1 Red Cherry Sauce  
Topping



1 Orange Sprinkles  
Topping



1 White Whipped  
Cream Topping



2 Ice Cream  
Cones



2 Circle Cookies



1 Square Cake



1 Triangle Pie



2 Lollipops



2 Double-sided  
Menus



8 Double-sided  
Signs



10 Coins




10 Notes

# Ice Cream Cart Parts


Illustrations show one colourway for clarity. Your product may include different coloured parts.



1 Cart Front Panel

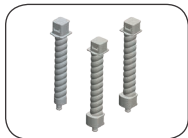

3 Cart Legs

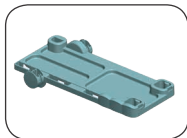


1 Cart Lower Shelf



2 Cart Feet




2 Cart Wheels

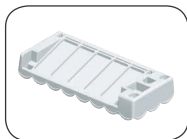

1 Ice Cream Tray




1 Cart Handle

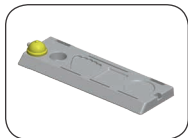

1 Upper Shelf




1 Upper Shelf Back

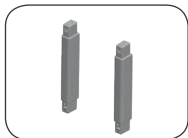

2 Upper Shelf Rear Legs




2 Upper Shelf Front Legs

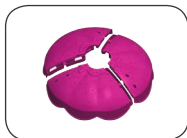

3 Umbrella Panels




1 Umbrella Cap

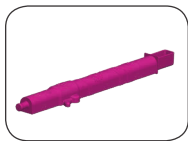

1 Umbrella Pole



Ice Cream Tray  
Stickers

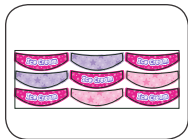

Umbrella Stickers

## WARNING

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

## NOTE

Please save this Instruction Manual as it contains important information.

## NOTE

After removing from packaging, wipe all the included plastic pieces using a slightly damp cloth. Wash the plastic play accessories thoroughly before and after use. To avoid damaging the electronics, do not submerge the **Magic Scooper** in water or expose it to excessive moisture.

# ADULT ASSEMBLY REQUIRED


Illustrations show one colourway for clarity. Your product may include different coloured parts; assembly steps remain the same.

No tools needed. Press pieces firmly together until they snap or click.

**NOTE:** Cart pieces fit together one way only. Do not force pieces together. Once assembled, pieces cannot be removed.


## APPLY STICKERS

Before assembly, apply the **Tray Stickers** to the **Ice Cream Tray** and leave a blank slot for the **Toppings**. Apply the **Umbrella Stickers** to the **Umbrella Panels**.

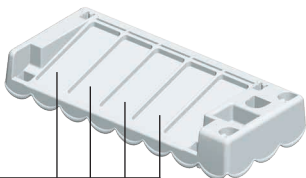


## ASSEMBLE THE CART BASE


1. Place a green **Cart Wheel** on a firm stable surface with the flat side facing up. Line up the axle on the blue **Cart Lower Shelf** with the **Wheel** hub and press down to attach. Repeat for the second **Wheel**.

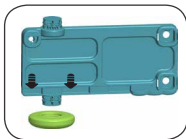

2. Insert the white **Cart Feet** into the underside of the **Cart Lower Shelf** and press firmly until they snap in place.

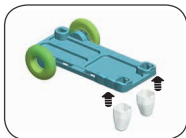

3. Attach the silver **Cart Legs** to the **Cart Lower Shelf**. Insert the round pegs into the holes on the **Cart Lower Shelf**.

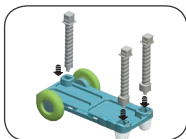

4. Insert the tabs on the bottom of the blue **Cart Front Panel** into the slots on the **Cart Lower Shelf**.



5. Locate the slots on the underside of the white **Ice Cream Tray**. Line up the slots with the tops of the **Cart Legs** and the tabs on the top of the **Cart Front Panel**. Press carefully to attach all pieces at the same time.




## ASSEMBLE THE UPPER SHELF

1. Turn the silver **Upper Shelf** upside down and snap the silver **Upper Shelf Legs** in place. The curved **Legs** are in front, the straight **Legs** are at the back. **Legs** will only fit into the slots one way.
2. Line up the bottom tabs of the **Upper Shelf Legs** with the slots in the **Ice Cream Tray** and press down firmly to snap together.
3. Attach the silver **Upper Shelf Back** to the **Upper Shelf**.




## ASSEMBLE THE UMBRELLA


1. Fit the edges of the 3 pink **Umbrella Panels** together and snap in place.
2. Push the pink **Umbrella Cap** up through the opening in the **Umbrella** from underneath.

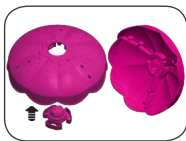

3. Slide the top tab of the pink **Umbrella Pole** into the slot in the **Umbrella Cap**.

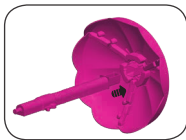

4. Align the bottom peg of the **Umbrella Pole** with the hole on the **Ice Cream Tray**, and align the tab on the side of the **Pole** with the slot on the end of the **Upper Shelf**. Press carefully to attach both at the same time.

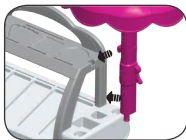

5. Attach the green **Cart Handle** to the **Ice Cream Tray**.



Double check all attachments to make sure they are securely snapped in place.


# GETTING STARTED

## BATTERY REMOVAL AND INSTALLATION

1. Make sure the **Magic Scooper** is turned Off.
2. Find the battery cover located on the back of the **Magic Scooper**. Use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new 1.5V AAA (LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

### WARNING:

Adult assembly required for battery installation.  
Keep batteries out of reach of children.

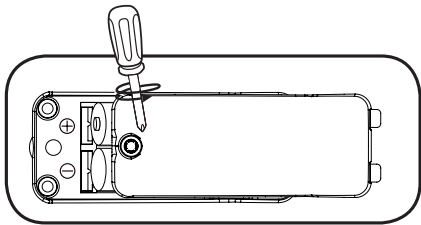

# ACTIVATE STANDARD PLAY MODE

This product starts in Demo mode when it is turned On. To activate standard Play mode, please complete the following steps:

1. Remove the unit from the packaging.
2. Turn the **Magic Scooper On** by sliding the switch to either **Low Volume**  or **High Volume**  position. Pick up one of the **Ice Cream Scoops** with the **Magic Scooper** to activate standard Play mode.



## IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

## RECHARGEABLE BATTERIES

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

## Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.



The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.

The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point\* so all of its materials can be recycled.

Learn more at:

[www.leapfrog.co.uk/recycle](http://www.leapfrog.co.uk/recycle)

[www.leapfrog.com.au/recycle](http://www.leapfrog.com.au/recycle)

\* Visit [www.recyclenow.com](http://www.recyclenow.com) to see a list of collection points near you.

# PRODUCT FEATURES

## 1. Magic Scooper

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the **Low Volume**  or **High Volume**  position. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off**  position.



## 2. Release Trigger

Place the **Magic Scooper** on top of an **Ice Cream Scoop** or **Topping** to pick up and hear the colour or flavour name. To release the **Ice Cream Scoop** or **Topping**, press the **Release Trigger** on the side of the **Magic Scooper**.

Quickly pressing the **Release Trigger** twice in a row during an activity will exit the activity.



## 3. Light-Up Star Button

Press the **Light-Up Star Button** to hear customer orders with step-by-step instructions and play games about counting and stacking.



#### 4. 8 Ice Cream Scoops, 3 Toppings, 2 Cones, 4 Baked Treats

Mix, make and serve 100s of pretend frozen treats. Hear the colour or flavour name of the **Ice Cream Scoop** or **Topping** as it's picked up and released by the **Magic Scooper**.



#### 5. Paper Notes and Plastic Coins

Play **Notes** and **Coins** enhance pretend play and reinforce counting from 1 to 10.



#### 6. Double-sided Signs and Menus

Set up shop your way! **Eight Double-sided Signs** let kids advertise flavours and specials. **Two Double-sided Menus** reinforce colours and inspire rich pretend-play experiences.



#### 7. Automatic Shut-Off

To preserve battery life, the **Scoop & Learn Ice Cream Pop-Up Shop** will automatically shut off after approximately 80 seconds without input. The **Magic Scooper** can be turned on again by pressing the **Light-Up Star button**, picking up an **Ice Cream Scoop** or **Topping** with the **Magic Scooper**, or pressing the **Release Trigger**.

# SONG LYRICS

## Open Shop

Flip the sign, the shop's awake  
Scoops of ice cream and treats are great.  
Colours and shapes, so nice and neat  
Today's special tastes so sweet!

## Open Shop Reprise

Flip the sign, the shop's awake  
Scoops of ice cream and treats are great.

## Sweet Shapes

Put it on a circle cookie, yum  
On a square cake, here it comes  
Triangle pie with a scoop on top  
Ice cream don't let it drop

## Order Up

Order up, a treat to go  
Stack it fast, or stack it slow  
Scoop by scoop it's a such blast  
Eat it up quickly, yeah  
It melts so fast.

## CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

## TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

## Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **off** and back **on**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

# CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

## **UK Customers:**

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: [www.leapfrog.co.uk/support](http://www.leapfrog.co.uk/support)

## **Australian Customers:**

Phone: 1800 862 155

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

## **NZ Customers:**

Phone: 0800 400 785

Website: [support.leapfrog.com.au](http://support.leapfrog.com.au)

# PRODUCT WARRANTY/ CONSUMER GUARANTEES

## **UK Customers:**

Read our complete warranty policy online at [leapfrog.com/warranty](http://leapfrog.com/warranty).

## **Australian Customers:**

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED –  
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to [leapfrog.com/en-au/legal/warranty](http://leapfrog.com/en-au/legal/warranty) for further information.



***Visit our website for more  
information about our products,  
downloads, resources and more.***

***leapfrog.com***

LeapFrog Enterprises, Inc.,  
A subsidiary of VTech Holdings Limited.  
© 2026 LeapFrog Enterprises, Inc.  
All rights reserved.

**Printed in China**  
IM-621600-001  
Version:0