



Scoop & Learn Ice Cream Shop




Instruction Manual

This Manual contains important information. Please save it for future reference.

INTRODUCTION

Thank you for purchasing the **Scoop & Learn Ice Cream Shop!** Serve up sweet pretend play with four flavours of ice cream, three toppings and more to create tons of delicious and imaginative combinations! Press the **Light Up Star Button** on the **Magic Scooper** to create customer orders, play games or hear songs. Follow the **Order Cards**, then pay and practise counting with **Money**.

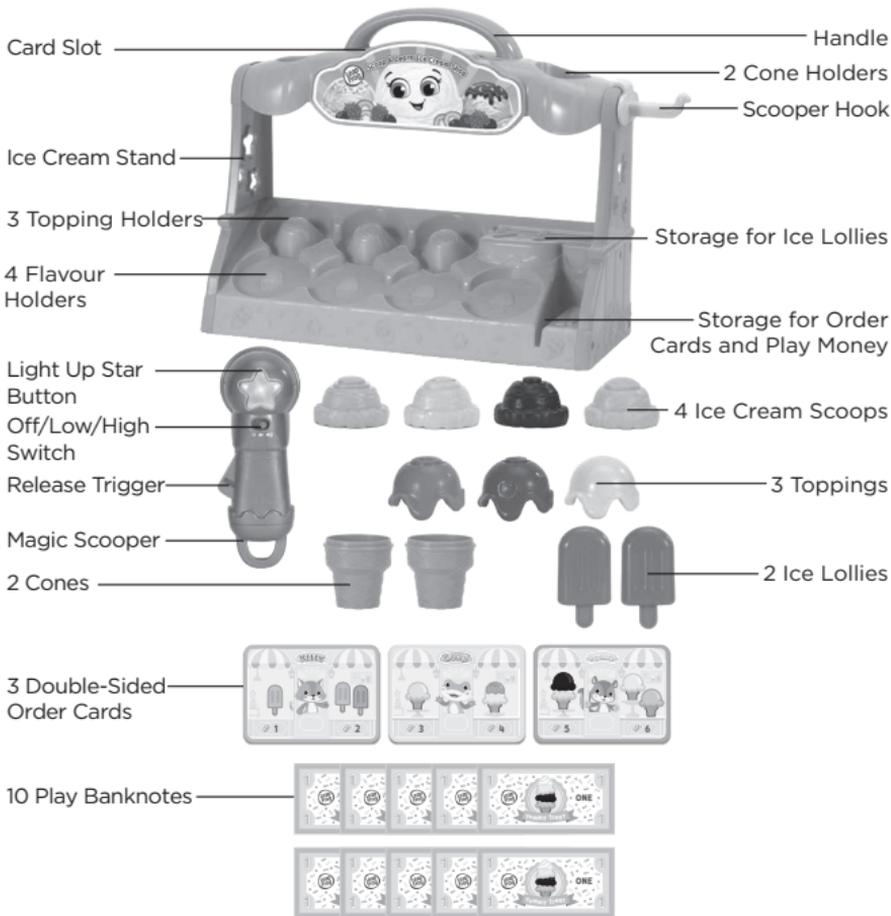

INCLUDED IN THE PACKAGE



1 ice cream stand



1 brown chocolate ice cream scoop



1 yellow vanilla ice cream scoop



1 pink strawberry ice cream scoop



1 green mint ice cream scoop



1 red cherry sauce topping



1 orange sprinkles topping




1 white whipped cream topping



2 cones



3 double-sided order cards

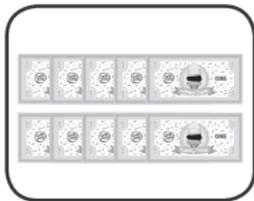

10 play banknotes



1 purple ice lolly



1 blue ice lolly



1 Magic Scooper



1 Scooper hook



Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:


Please save this Instruction Manual as it contains important information.

NOTE:


After removing from packaging, wipe all the included plastic pieces using a slightly damp cloth. Wash the plastic play accessories thoroughly before and after use. To avoid damaging the electronics, do not submerge the **Magic Scooper** in water or expose it to excessive moisture.

Unlock the Packaging Locks

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

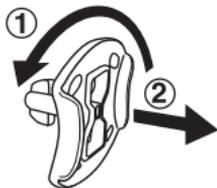

- ① Turn the packaging lock anticlockwise several times.
- ② Pull out and discard the packaging lock.

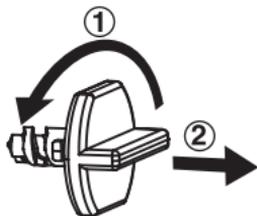


INSTRUCTIONS

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the **Magic Scooper** is turned Off. Find the battery cover located on the back of the **Magic Scooper**. Use a screwdriver to loosen the screw and then open the battery cover.
2. Remove old batteries by pulling up on one end of each battery.
3. Install 2 new AAA (AM-4/LR03) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
4. Replace the battery cover and tighten the screw to secure.

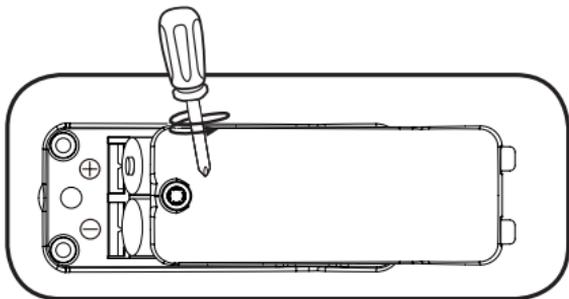

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheeled bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle

www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

ACTIVATE STANDARD PLAY MODE

This product is in Demo mode in the packaging. To activate standard Play mode, please complete the following steps:

1. Remove the unit from the packaging.
2. Turn the **Magic Scooper** ON by sliding the switch to either low volume (🔊) or high volume (🔊🔊) settings. Then, place the **Magic Scooper** over one of the ice cream scoops or toppings to pick up and hear its flavour name. Press the **Release Trigger** to release the scoop or topping to activate standard Play mode.



PRODUCT FEATURES


1. Magic Scooper

To turn the unit **On**, slide the **Off/Low/High Volume Switch** to the Low (🔊) or High (🔊🔊) position. To turn the unit **Off**, slide the **Off/Low/High Volume Switch** to the **Off** (🔇) position.



2. Release Trigger

Place the **Magic Scooper** on top of an **Ice Cream Scoop** or **Topping** to pick up and hear the colour or flavour name. To release the **Ice Cream Scoop** or **Topping**, press the **Release Trigger** on the side of the **Magic Scooper**.

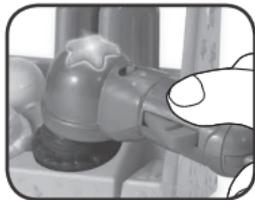

3. Light Up Star Button

Press the **Light Up Star Button** to hear fun learning songs, complete customer orders with step-by-step instructions, and play games about counting and stacking.



4. Double-Sided Order Cards

Double-Sided Order Cards show the 10 customer orders from one of the Star Button games. Place one of the **Order Cards** in the slot near the handle for easy reference.



5. 4 Ice Cream Scoops, 3 Toppings, 2 Cones & 2 Ice Lollies

All the pieces needed to mix and match to make and serve pretend frozen treats. Hear the colour or flavour name of the **ice cream scoop** or **topping** as it's picked up and released by the **Magic Scooper**.




6. Cone Holders

Place a cone in the **Cone Holder** as you make an ice cream treat, or place a finished treat in one of the two **Cone Holders** to serve customers.




7. Play Money

Practise counting from 1 to 10 with the **Play Money**.

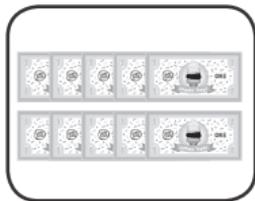

8. Automatic Shut-Off

To preserve battery life, the **Scoop & Learn Ice Cream Shop** will automatically shut off after approximately 80 seconds without input. The **Magic Scooper** can be turned on again by pressing the **Light Up Star Button**, pick up a scoop or topping with the **Magic Scooper**, or press the **Release Trigger**.

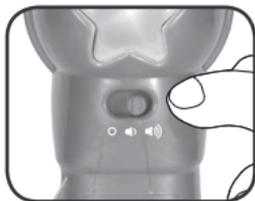

SONG LYRICS

Ice Cream Song

Ice cream make it your own way.
Share a treat that you create.
Scoop a colour,
That's your flavour.
Add a topping,
Pay with notes.
How will you treat yourself today?

Colour Song

Pink, brown or green,
Yellow too.
Is it purple you will choose?
Red or white,
Maybe orange or blue!

Counting Scoops Song

One scoop, two scoops,
For me and you.
Scoop three and four,
Do you want more?

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Please turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back **On**. The unit should now be ready to use again.
5. If the unit is still not working properly, install a brand new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/en-gb/legal

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

www.leapfrog.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
© 2025 LeapFrog Enterprises, Inc.
All rights reserved.
IM-622700-001
Version:0