



123 Bounce with Me Penguin





Instruction Manual

This Manual contains important information. Please save it for future reference.

INTRODUCTION

Say hello to the **123 Bounce with Me Penguin**, an irresistibly cuddly toy that's bursting with fun! This lovable penguin bounces to upbeat music, setting the stage for endless giggles. Record your voice and play it back with a quirky voice-changer effect for hilarious moments. Soft, huggable, and packed with interactive features, the **123 Bounce with Me Penguin** is your ultimate companion for music, laughter, and colourful fun!

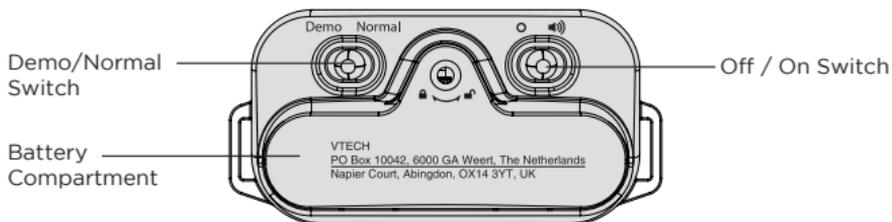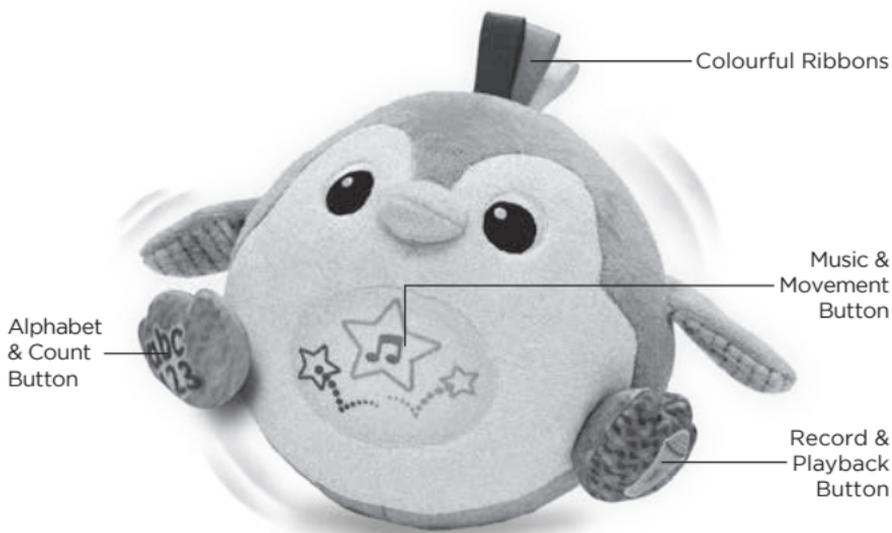

INCLUDED IN THE PACKAGE

- One **123 Bounce with Me Penguin**
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

ACTIVATE STANDARD PLAY MODE

This product is in Demo mode in the packaging. To activate standard Play mode, please complete the following steps:

1. Locate the Demo/Normal Switch  on the bottom of the toy.
2. Slide the Switch from Demo  to Normal .


GETTING STARTED

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
4. Install 4 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended).
5. Replace the battery cover and tighten the screw to secure.

WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.

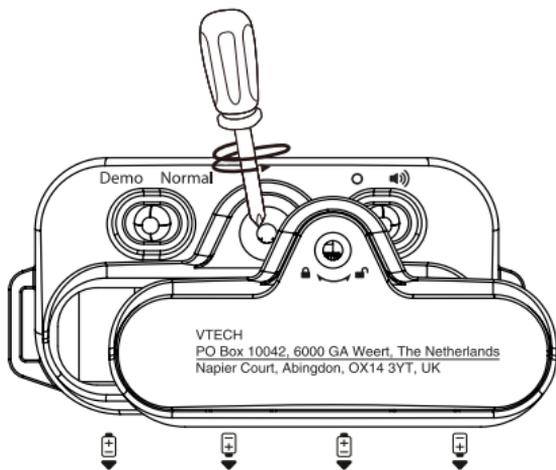

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES

- Remove rechargeable batteries (if removable) from the toy before charging.
- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

Disposal of batteries and product



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.



Please dispose of your product and batteries responsibly.

In the UK, give this toy a second life by disposing of it at a small electricals collection point* so all of its materials can be recycled.

Learn more at:

www.leapfrog.co.uk/recycle


www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES


1. Off/On Switch

To turn the unit **On**, slide the **Off/On Switch** to the **On**  position. To turn the unit **Off**, slide the **Off/On Switch** to the **Off**  position.

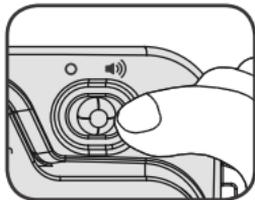


2. Record & Playback Button

Capture your voice and hear it back in hilarious, silly effects to encourage language development.

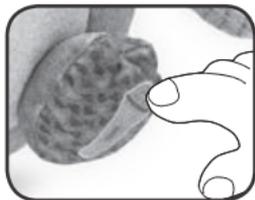


3. Alphabet & Count Button

Dance and sing the ABCs and count from 1 to 5.

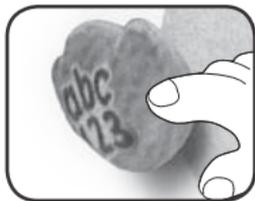

4. Music & Movement Button

Clap your hands or make some noise to see Penguin groove to music. to activate a variety of music that will keep you entertained and grooving.

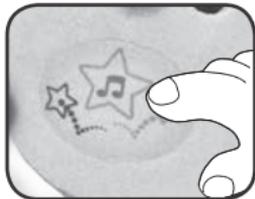

5. Automatic Shut Off

To preserve battery life, the **123 Bounce with Me Penguin** will automatically shut off after approximately 50 seconds without input. The unit can be turned on again by pressing any of the buttons.

SONG LYRICS

Introduction Song

My name is Penguin and I'm here to say.
That I love to talk and bounce and play.

Wiggle Waddle Song

Here we go!
Wiggle, waddle, wiggle
wiggle, waddle, wiggle
Move some more!
The whole world is our dance floor!

Countine Song

1, 2, 3.
3, 2, 1.
Counting with you is so much fun!

ABC Song

ABCDEFGH
HIJKLMN
OP
QRSTU
V
WXY and Z.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. **123 Bounce with Me Penguin** is surface washable only.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit **Off**.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit **On**. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

Environmental Phenomena

The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power **Off** and back **On**, or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)

Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155

Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785

Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/warranty.

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

leapfrog.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
© 2025 LeapFrog Enterprises, Inc.
All rights reserved.
IM-623100-000
Version:0