



EXPLORE & LEARN LILYPAD



Instruction Manual

This manual contains important information. Please save it for future reference.
Ce manuel contient des informations importantes. Veuillez le conserver pour toute référence future.

INTRODUCTION

Thank you for purchasing the **Toy Story 5 Explore & Learn Lilypad**.



INCLUDED IN THE PACKAGE

- **Toy Story 5 Explore & Learn Lilypad**
- Quick Start Guide

WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy, and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information.

ATTENTION :


Pour la sécurité de votre enfant, débarrassez-vous de tous les produits d'emballage tels que rubans adhésifs, feuilles de plastique, attaches, étiquettes, cordons et vis d'emballage. Ils ne font pas partie du jouet.

NOTE :

Il est conseillé de sauvegarder ce manuel d'utilisation car il comporte des informations importantes.

Unlock the Packaging Locks

- ① Rotate the packaging locks 90 degrees counterclockwise.
- ② Pull out the packaging locks and discard.

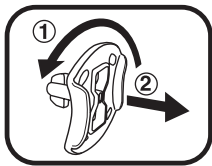

INSTRUCTIONS



WARNING:

Adult assembly required for battery installation.
Keep batteries out of reach of children.




ATTENTION :

Les piles ou accumulateurs doivent être installés par un adulte.
Tenir les piles ou accumulateurs hors de portée des enfants.

Battery Removal and Installation

1. Make sure the unit is turned **Off**.
2. Find the battery cover located on the back of the unit, use a screwdriver to loosen the screw and then open the battery cover.
3. Remove old batteries by pulling up on one end of each battery.
4. Install 2 new AA (AM-3/LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

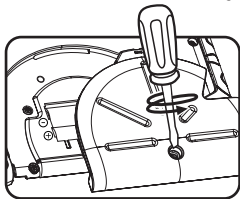

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.

- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children.
Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.
- Call a local poison control center for treatment information.
- Do not force discharge, recharge, disassemble, heat above 60°C (140°F) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

IMPORTANT : INFORMATIONS CONCERNANT LES PILES

- Mettre en place les piles ou les accumulateurs en respectant les polarités + et -.
- Ne pas mélanger des piles ou des accumulateurs neufs avec des usagés.
- Ne pas mélanger différents types de piles : alcalines, zinc-carbone et rechargeables.

- Seules des piles du type recommandé doivent être utilisées.
- Ne pas mettre les bornes d'une pile ou d'un accumulateur en court-circuit (en reliant directement le + et le -).
- Retirer les piles ou les accumulateurs en cas de non-utilisation prolongée.
- Enlever les piles ou les accumulateurs usagés du jouet.
- Ne les jeter ni au feu ni dans la nature.
- Retirez et recyclez ou éliminez immédiatement les piles des appareils qui ne sont pas utilisés pendant une période prolongée, conformément à la réglementation locale.
- Retirer les piles usagées et les recycler ou s'en débarrasser immédiatement conformément aux réglementations locales et les tenir hors de portée des enfants. Ne PAS jetez les piles dans les ordures ménagères et ne pas les incinérer.
- Des piles usagées peuvent aussi provoquer des blessures graves ou mortelles.
- Appeler un centre antipoison local pour obtenir des informations sur le traitement à suivre en cas d'ingestion de piles.
- Ne pas forcer la décharge, ne pas recharger, démonter, chauffer à plus de 60 °C (140°F) ni incinérer. Une telle manipulation peut provoquer des blessures dues à un dégazage, une fuite ou une explosion entraînant des brûlures chimiques.
- Le compartiment à piles doit toujours être complètement fermé. Si le compartiment à piles ne ferme pas correctement, arrêter d'utiliser le produit, retirer les piles et les tenir hors de portée des enfants.

PILES RECHARGEABLES :

- Les accumulateurs ne doivent être chargés que sous la surveillance d'un adulte.
- Ne pas tenter de recharger des piles non rechargeables.

PRODUCT FEATURES

1. QWERTY Keyboard

Press letter buttons to explore letters and words. Press emoji buttons for fun animations and sounds.



2. ABC Photo Album

Watch a picture gradually reveal and press a letter button to make a guess.

3. Froggy Counting

Press the left and right arrows to move the frog and practice counting from 1 to 100.

4. Music Time

Press letter and emoji buttons to jam along to Lilypad playing music.

5. Buzz's Vacuum Zoom

Press the left and right arrows to guide Buzz and the vacuum through Bonnie's house.

6. Character Texting with Woody, Buzz, Tech Trio, Jessie



Receive and hear text messages from Woody, Buzz, Jessie and the Tech Trio. Press a letter or emoji button to send a pretend reply.

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.

TROUBLESHOOTING

If for some reason the unit stops working or malfunctions, please follow these steps:

1. Turn the unit Off.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit On. The unit should now be ready to use again.
5. If the unit still does not work, install a new set of batteries.

IMPORTANT NOTE:

If the problem persists, please call our **Consumer Services Department** at **1-800-701-5327** in the U.S. and Canada, or email **support@leapfrog.com**. Creating and developing LeapFrog products is accompanied by a responsibility that we take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to contact us with any problems and/or suggestions you might have. A service representative will be happy to help you.

Supplier's Declaration of Conformity
47 CFR § 2.1077 Compliance Information

Trade Name: LeapFrog®
Model: 6235
Product name: Toy Story 5 Explore & Learn LilyPad
Responsible Party: LeapFrog Enterprises, Inc.
Address: 2200 Powell Street, Suite 500, Emeryville,
CA 94608
Website: leapfrog.com

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRED OPERATION.

CAN ICES(B)/NMB(B)

Note:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna
- Increase the separation between the equipment and receiver
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected
- Consult the dealer or an experienced radio/TV technician for help

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.



***Visit our website for more
information about our products,
downloads, resources and more.***

***leapfrog.com
leapfrog.ca***

**Read our complete warranty and legal
policies online at leapfrog.com/legal**

©Disney/Pixar
www.disney.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.
© 2026 LeapFrog Enterprises, Inc.
All rights reserved.
IM-623500-000
Version:0