



My First Gamer™



Instruction Manual

This manual contains important information. Please save it for future reference

INTRODUCTION

Thank you for purchasing the **LeapFrog® My First Gamer™**. **My First Gamer™** is designed to introduce kids to the fun of educational games. Playful exploration of letters, numbers, shapes, colours, and patterns helps reinforce key concepts through simple controls and joyful challenges.

Low/High
Volume Switch



Back of Device

LCD
Screen

Learning
Buttons

On/Off
Button

Triangle
Button



Arrow
Buttons

Alphabet
Keypad

Mystery Letter
Button

Star
Button

INCLUDED IN THE PACKAGE

- One LeapFrog® My First Gamer™
- One Quick Start Guide

 
WARNING:

All packing materials such as tape, plastic sheets, packaging locks, removable tags, cable ties, cords and packaging screws are not part of this toy and should be discarded for your child's safety.

NOTE:

Please save this Instruction Manual as it contains important information

Unlock the Packaging Locks:

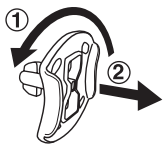

- ① Rotate the packaging locks 90 degrees anticlockwise.
- ② Pull out the packaging locks and discard.

Activating Normal Play Mode

This product is in **Try-Me Mode** in the packaging. When the packaging is removed, it will be ready for Normal Play!

If the product is still in **Try-Me Mode** after the packaging has been removed:

- If the power is **On**, move the Volume Switch located on the back of the device to Low volume . The program will exit the **Try-Me Mode** and restart the device.
- If the power is **Off**, move the Volume Switch located on the back of the device to Low volume , and press the **On/Off Button** to turn on the device. It will now be in **Normal Play Mode**.

GETTING STARTED

 
WARNING:

Adult assembly required for battery installation.

Keep batteries out of reach of children.

BATTERY REMOVAL AND INSTALLATION

1. Make sure the unit is turned OFF.
2. Locate the battery cover on the back of the unit. Use a screwdriver to loosen the screw and then open the battery cover.
3. If used batteries are present, remove these batteries from the unit by pulling up on one end of each battery.

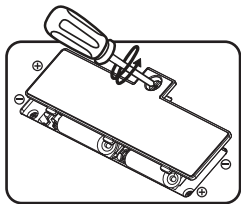

4. Install 4 new 1.5V AA(LR6) batteries following the diagram inside the battery box. (For best performance, alkaline batteries or fully charged Ni-MH rechargeable batteries are recommended.)
5. Replace the battery cover and tighten the screw to secure.

IMPORTANT: BATTERY INFORMATION

- Insert batteries with the correct polarity (+ and -).
- Do not mix old and new batteries.
- Do not mix alkaline, standard (carbon-zinc) or rechargeable batteries.
- Only batteries of the same or equivalent type as recommended are to be used.
- Do not short-circuit the supply terminals.
- Remove batteries during long periods of non-use.
- Remove exhausted batteries from the toy.
- Dispose of batteries safely. Do not dispose of batteries in fire.

RECHARGEABLE BATTERIES:

- Rechargeable batteries are only to be charged under adult supervision.
- Do not charge non-rechargeable batteries.

DISPOSAL OF BATTERIES AND PRODUCT



The crossed-out wheellie bin symbols on products and batteries, or on their respective packaging, indicates they must not be disposed of in domestic waste as they contain substances that can be damaging to the environment and human health.

The chemical symbols Hg, Cd or Pb, where marked, indicate that the battery contains more than the specified value of mercury (Hg), cadmium (Cd) or lead (Pb) set out in the Batteries and Accumulators Regulation.



The solid bar indicates that the product was placed on the market after 13th August, 2005.

Please dispose of your product and batteries responsibly.

In the UK, dispose of this toy at a small electricals collection point* so its materials can be processed for recycling.

Learn more at:

www.leapfrog.co.uk/recycle

www.leapfrog.com.au/recycle

* Visit www.recyclenow.com to see a list of collection points near you.

PRODUCT FEATURES

1. On/Off Button

To turn the unit on, press the **On/Off Button**.

 
Press the **On/Off Button** again to turn the unit off.

2. Learning Buttons



Press to choose one of 6 preschool learning skills: Letters, Numbers, Shapes, Music, Colours and Logic.

3. Alphabet Keypad

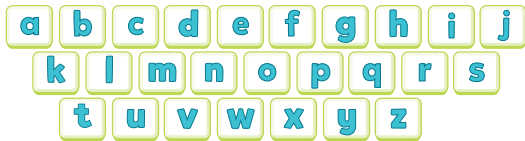

Press to hear letter names, sounds, and related animations or press during gameplay when prompted.

4. Arrow Buttons

Use the **Arrow Buttons** in the games to control Ziggy and make selections.

5. Star Button

Press to confirm a selection or to make Ziggy jump and dance.

6. Triangle Button

Press to repeat the instructions.

7. Mystery Letter Button

See the **Mystery Letter**, then find and press the matching **Letter Button**.

8. Volume Switch

Slide the switch left  to lower the volume and right  to increase it.

9. AUTOMATIC SHUT-OFF

To preserve battery life, the **LeapFrog® My First Gamer™** will automatically turn off after 45 seconds of inactivity. The unit can be turned on again by pressing the **On/Off Button**. The unit will also automatically turn off when the batteries are very low. A warning will be displayed on the screen as a reminder to change the batteries.

NOTE:

If the unit powers down while playing, please install a new set of batteries.

 
ACTIVITIES

The **LeapFrog® My First Gamer™** includes the following activities:

LETTER GAMES

1. Letter Surprise

Press a **Letter Button** on the **Alphabet Keypad** to guess the letter Ziggy is hiding.

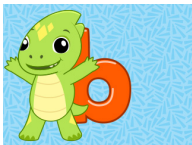


2. Speedboat Racer

Use the **Arrow Buttons** to steer Ziggy's boat as you collect letters in alphabetical order. Avoid obstacles and numbers.




3. Amazing Letters

 Use the **Arrow Buttons** to help Ziggy navigate the maze, collecting letters and related objects along the way.

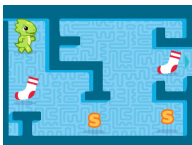

4. Letter Playground

 Collect letters and objects as you run through the playground with Ziggy. Use the **Arrow Buttons** to move and the **Star Button** to jump. At the end, review the letters you collected by finding them on the **Alphabet Keypad**.

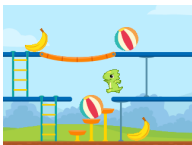

NUMBER GAMES

 
1. Bird Feeder

Help Ziggy feed the birds. Use the **Arrow Buttons** to choose a bird, then press the **Star Button** to feed it. Feed each bird the number of berries shown on its chest.




2. Amazing Numbers

Help Ziggy get out of the maze by using the **Arrow Buttons** to collect numbers in the correct order. Avoid numbers that are not in sequence.

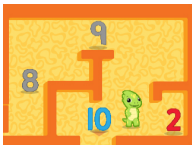

3. Number Match

 Play cards with Ziggy! Use the **Arrow Buttons** to choose a card, then press the **Star Button** to turn it over. Find two cards with the same number of items to make a match.

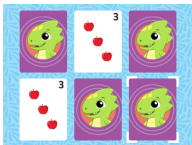

SHAPE GAMES

1. Shape Snacks

Pick the matching fruit shapes to make a snack for Ziggy! Use the **Arrow Buttons** to choose a fruit shape and press the **Star Button** to put it on the stick.



2. Shape Match

Play cards with Ziggy! Use the **Arrow Buttons** to choose a card, then press the **Star Button** to turn it over. Find two cards with the same shape to make a match.



3. Go-Kart Racer

Collect the correct shapes as you race to the finish line with Ziggy! Avoid obstacles and other shapes by using the **Arrow Buttons**.



COLOUR GAMES

1. Rainbow Garden

Match the colour of the water to the colour of the flower to make it grow. Use the **Arrow Buttons** to move the hose from side to side.



 
2. Gumballs Galore

Catch all the gumballs! Then, choose 2 gumballs for Ziggy to chew. What colour will they make? Use the **Arrow Buttons** to choose, and the **Star Button** to confirm. Watch as Ziggy blows a bubble to mix the colours.



3. Colour Climber

Help Ziggy climb to the top by following the correct colour path. Use the **Arrow Buttons** to move side to side and press the **Up Arrow** or **Star Button** to climb up.

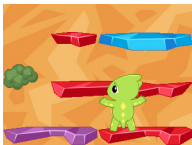

MUSIC GAMES

1. Dance Moves

Make Ziggy dance! When the Arrow Icons turn green, press the matching **Arrow Button**.



2. Dance Party

It's time to freestyle! Explore pressing the **Star Button**, **Triangle Button**, **Arrow Buttons**, and **Letter Buttons** to see Ziggy dance!



3. Jam Session

 
Use the **Arrow Buttons** to choose an instrument, then press the **Star Button** to watch Ziggy play it.



LOGIC GAMES


1. Creature Collector

Help Ziggy collect the creatures to complete the pattern. Press the **Arrow Buttons** to move and the **Star Button** to collect the creatures.

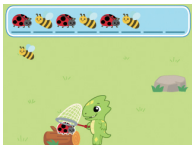


2. Strike A Pose

 Use the **Arrow Buttons** to move Ziggy to the diving board with the matching pose. Press the **Star Button** to confirm. If it's a match, he does the dive. If not, he bellyflops!

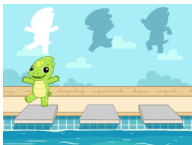

3. Picture Match

 Play cards with Ziggy! Use the **Arrow Buttons** to choose a card, then press the **Star Button** to turn it over. Find two cards with the same picture to make a match.

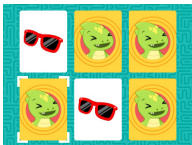

CARE & MAINTENANCE

1. Keep the unit clean by wiping it with a slightly damp cloth.
2. Keep the unit out of direct sunlight and away from any direct heat sources.
3. Remove the batteries if the unit will not be in use for an extended period of time.
4. Do not drop the unit on hard surfaces and do not expose the unit to moisture or water.
5. Do not insert sharp objects into the speaker holes.

TROUBLESHOOTING

If for some reason the program/activity stops working or the unit can't be turned on again, then please follow these steps:

1. Turn the unit OFF.
2. Interrupt the power supply by removing the batteries.
3. Let the unit stand for a few minutes, then replace the batteries.
4. Turn the unit back ON. The unit will now be ready to play again.
5. If the unit still does not work, replace with an entire set of new batteries.

Environmental Phenomena

Static electricity may cause the unit to malfunction. In cases where unit is malfunctioning due to static electricity, reset the system by pressing and holding the On/Off Button for 50 seconds. Or remove and reinstall the batteries. In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

CONSUMER SERVICES

Creating and developing **LeapFrog®** products is accompanied by a responsibility that we at **LeapFrog®** take very seriously. We make every effort to ensure the accuracy of the information, which forms the value of our products. However, errors sometimes can occur. It is important for you to know that we stand behind our products and encourage you to call our Consumer Services Department with any problems and/or suggestions that you might have. A service representative will be happy to help you.

UK Customers:

Phone: 01702 200244 (from UK) or +44 1702 200244 (outside UK)
Website: www.leapfrog.co.uk/support

Australian Customers:

Phone: 1800 862 155
Website: support.leapfrog.com.au

NZ Customers:

Phone: 0800 400 785
Website: support.leapfrog.com.au

PRODUCT WARRANTY/ CONSUMER GUARANTEES

UK Customers:

Read our complete warranty policy online at leapfrog.com/en-gb/legal

Australian Customers:

VTECH ELECTRONICS (AUSTRALIA) PTY LIMITED -
CONSUMER GUARANTEES

Under the Australian Consumer Law, a number of consumer guarantees apply to goods and services supplied by VTech Electronics (Australia) Pty Limited. Please refer to leapfrog.com/en-au/legal/warranty for further information.



***Visit our website for more
information about our products,
downloads, resources and more.***

www.leapfrog.com

LeapFrog Enterprises, Inc.
A subsidiary of VTech Holdings Limited.

© 2026 LeapFrog Enterprises, Inc.

All rights reserved.

IM-623600-001

Version:1