



AlphaPet Explorer



Dig into phonics fun!

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Fun next steps on your child's path to learning!

From phonics...



AlphaPet Explorer*
2+ years

To Be There Every Step Of The Way.

It's a hope you have for your child and one that LeapFrog shares. As children get ready to read, toys like the AlphaPet Explorer can bring phonics to life in a fun way, laying the foundation for a lifetime of loving reading.



Fridge Phonics™
Magnetic Alphabet*
2+ years



Tag™ Junior
Book Pal*
2-4 years



Tag™
Reading System*
4-8 years

...to reading

Get more ideas to support your child's learning at:
leapfrog.com/learningpath

*Products sold separately. All products may not be available in all countries. Actual products may vary.



See the Learning.™

Learning experiences are never one-size-fits-all. That's why we created an online Learning Path that can be custom-tailored to shape and inspire each child's unique learning journey. Connect and see what they're learning, how they're growing and, most importantly, who they're becoming.

leapfrog.com/learningpath



The LeapFrog® Learning Path is not available in all countries.

Register your product online!

You can also sign up to receive learning progress updates, articles, product news and special offers from LeapFrog.

leapfrog.com

Learning Skills

Dig into letter learning with Scout!

The Alphabet

Four learning modes encourage letter recognition skills and an understanding of alphabetic order.

Phonics Skills

Games help children associate letters with their sounds and give examples of words beginning with those sounds.

Fine Motor Skills

Pressing the buttons helps develop fine motor skills and hand-eye coordination.



Instructions for Play



Getting Started

To turn on AlphaPet Explorer, slide the Scout switch to one of the four modes.

To turn it off, slide the switch to OFF.

Note: AlphaPet Explorer will turn off automatically after a period of inactivity. You can wake it up again by sliding Scout to another mode or by pressing any button.

Learning Modes

AlphaPet Explorer offers four learning modes.

Letter Names
Press a letter to hear its name. Press the Paw button to hear Scout ask a question about letters.

Letter Sounds
Press a letter to hear its sound and a word beginning with that letter, along with a fun sound effect. Press the Paw button to hear Scout ask a question about letters and letter sounds.

Music
Play the tune of the *Alphabet Song* by pressing the letters in order. Press the Paw button to hear Scout sing the song and press the letters to play along as Scout sings!

Games

- Letter Biscuits: Help Scout dig up letter biscuits! When you hear a letter name, press the letter that matches the name.
- Listening for Letters: Listen with Scout to match letters to their sounds! When you hear a letter sound, press the letter that makes that sound.
- For both games, press the Paw button to hear a question again.

Instructions for Care

For indoor, dry-location use only. Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

CAUTION: Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

ATTENTION: Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

- Open the battery door with a screwdriver.
- If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
- Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
- Replace battery door securely.

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

DO NOT incinerate used batteries.

DO NOT dispose of batteries in fire, as batteries may explode or leak.

DO NOT mix old and new batteries or types of batteries (i.e., alkaline/standard).

DO NOT use rechargeable batteries.

DO NOT recharge non-rechargeable batteries.

DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

NE PAS incinérer les piles usagées.

NE PAS jeter les piles au feu car elles peuvent exploser ou fuir.

NE PAS mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).

NE PAS utiliser des piles rechargeables.

NE PAS recharger des piles non rechargeables.

NE PAS court-circuiter les terminaux d'alimentation.

Troubleshooting

Symptom

Toy does not turn on or does not respond

Try This

- Make sure the mode switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

FCC Notice

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Notice: Changes or modifications to this unit not expressly approved by LeapFrog could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CONSUMER SUPPORT

U.S. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.com/support 24 hours a day.

Canada Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.ca/support 24 hours a day.

U.K. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funstastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, SEE THE LEARNING, FRIDGE PHONICS, TAG, the Tag logo and the Tag Junior logo are trademarks or registered trademarks of LeapFrog Enterprises, Inc. © 2009 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 2 years and up. Convient aux enfants à partir de 2 ans.

Part number 605-11426-A