

Leap Frog[™] Alphabet Pal[™]



Twenty-six musical steps toward letter and color/colour learning!

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Fun next steps on your child's path to reading!

From phonics...



Alphabet Pal[™]
12+ months



Fridge Phonics[™]
magnetic alphabet*
2+ years

Get more ideas to support your child's learning at:
leapfrog.com/learningpath

To be there every step of the way.

It's a hope you have for your child and one that LeapFrog shares. Toys like Alphabet Pal help bring letters to life, encouraging children on their first steps toward reading.



Tag[™] Junior Book Pal*
2-4 years

...to reading!

*Products sold separately. All products may not be available in all countries. Actual products may vary.



Learning Path[™]

See the Learning.[™]

See your child's play and learning with the LeapFrog[®] Learning Path. With each LeapFrog toy on your child's path, you can see the skills your child is exploring during play, learn about what comes next and discover creative learning ideas that are tailored uniquely to your child.

leapfrog.com/learningpath



Register your product online!

You can also sign up to receive email updates with special offers, educational insights and the latest in learning from LeapFrog.

leapfrog.com

Learning Stones

The Alphabet

The Alphabet Song and the letter buttons encourage letter recognition and help children learn the names and sounds of all of the letters in the alphabet.

Colors/Colours

The repetitive association of colors/colours with their names helps children remember the name for each color/colour.


Motor Skills

Pulling ALPHABET PAL™ and pressing his legs encourage gross and fine motor skill development.

Music

Children can explore musical fun with 26 engaging tunes.

Instructions for Play

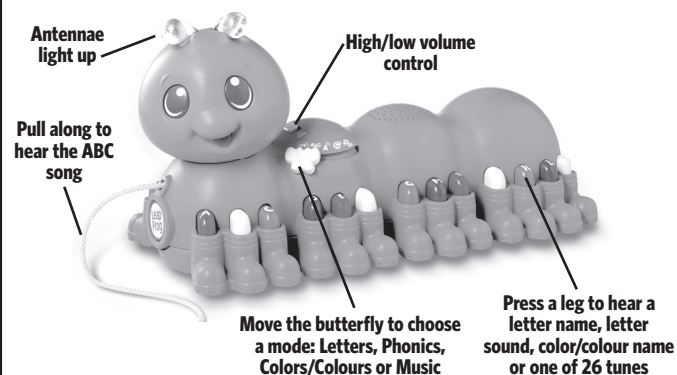

Getting Started

To turn on ALPHABET PAL™, slide the butterfly switch to the desired mode. To turn it off, slide the switch to OFF.

Note: ALPHABET PAL will automatically turn off after 15 seconds of inactivity. You can start playing again by pressing any leg button or selecting a different activity mode.

Play and Learn!

Pull ALPHABET PAL to hear the *Alphabet Song*, or slide the butterfly switch to select a learning mode.

- Letters Mode: Press a letter on any leg to hear the letter's name.
- Phonics Mode: Press a letter on any leg to hear a letter's phonetic sound.
- Colors/Colours Mode: Press a leg to hear its color/colour.
- Music Mode: Press any leg to hear a short melody. ALPHABET PAL plays 26 individual classic children's tunes:

A - <i>Are You Sleeping?</i>	J - <i>Jimmy Crack Corn</i>	S - <i>She'll Be Coming 'Round the Mountain</i>
B - <i>Billy Boy</i>	K - <i>Camptown Races</i>	T - <i>This Old Man</i>
C - <i>Clementine</i>	L - <i>London Bridge</i>	U - <i>Upside Down World</i>
D - <i>Did You Ever See a Lassie?</i>	M - <i>Mary Had a Little Lamb</i>	V - <i>Froggie Went A-Courtin'</i>
E - <i>East Side, West Side</i>	N - <i>The Man on the Flying Trapeze</i>	W - <i>Wheels on the Bus</i>
F - <i>The Farmer in the Dell</i>	O - <i>Old MacDonald Had a Farm</i>	X - <i>Yellow Rose of Texas</i>
G - <i>Greensleeves</i>	P - <i>Pop Goes the Weasel</i>	Y - <i>Yankee Doodle</i>
H - <i>Hey Diddle Diddle</i>	Q - <i>Chopsticks</i>	Z - <i>Wait for the Wagon</i>
I - <i>I've Been Working on the Railroad</i>	R - <i>Row, Row, Row Your Boat</i>	

Instructions For Care

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

CAUTION : Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

ATTENTION : Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AA (called LR6 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT** incinerate used batteries.
- DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- DO NOT** mix old and new batteries or types of batteries (i.e., alkaline/standard).
- DO NOT** use rechargeable batteries.
- DO NOT** recharge non-rechargeable batteries.
- DO NOT** short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- NE PAS** incinérer les piles usagées.
- NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.
- NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- NE PAS** utiliser des piles rechargeables.
- NE PAS** recharger des piles non rechargeables.
- NE PAS** court-circuiter les terminaux d'alimentation.

Troubleshooting

Symptom

Toy does not turn on or does not respond

Try This

- Make sure the OFF/LOW/HIGH switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Environmental Phenomena

- The unit may malfunction if subjected to radio-frequency interference. It should revert to normal operation when the interference stops. If not, it may become necessary to turn the power off and back on, or remove and reinstall the batteries.
- In the unlikely event of an electrostatic discharge, the unit may malfunction and lose memory, requiring the user to reset the device by removing and reinstalling the batteries.

Impact de l'environnement

- Une défaillance de fonctionnement de l'appareil peut survenir s'il est sujet à des interférences avec les fréquences radioélectriques. Le fonctionnement normal de l'appareil devrait reprendre avec l'arrêt des interférences. Si ce n'est pas le cas, il peut s'avérer nécessaire d'éteindre et rallumer l'appareil ou de retirer et réinstaller les piles.
- Dans l'éventualité peu probable d'une décharge électrostatique, un mauvais fonctionnement et une perte de mémoire de l'appareil peuvent se produire. L'utilisateur doit alors retirer et réinstaller les piles pour réinitialiser l'appareil.

CONSUMER SUPPORT

U.S. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.com/support 24 hours a day.
Canada Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.ca/support 24 hours a day.
U.K. Consumer Service Contact: Visit our Consumer Support website at www.leapfrog.co.uk/support 24 hours a day.
Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funstastic.com.au.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisent pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, ALPHABET PAL, SEE THE LEARNING, FRIDGE PHONICS, TAG and the Tag Junior logo are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2008-2010 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 12+ months.
Convient aux enfants à partir de 12 mois.

Item number: 19106
Part number: 605-11387-B