

Learning that Sticks!



Fridge Farm™
magnetic animal set
12+ months



Fridge Phonics™
magnetic alphabet
2+ years

Bilingual Musical Learning!



Learn & Groove™
Alphabet Drum
6+ months



Learn & Groove™
First Words Radio
12+ months



This take-along learning pal will captivate baby with activities, music and a rainbow of colors/colours!



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.
leapfrog.com

How to get the most out of your Baby Counting Pal™!

Bring meaning to numbers!

Early in life, babies can benefit from exposure to numbers and counting—it helps them learn the correct name of each number, and the sequence of counting.

- ★ Try saying the number names in order to your baby, as you point out each number.
- ★ Later, when your baby becomes familiar with each number, use Baby Counting Pal to introduce groups that represent numbers. Count the number of creatures on each tactile activity, and ask your baby questions. For example, “How many butterflies do you see?” Reinforce the learning by singing songs and taking advantage of everyday opportunities to count together!

Build a world of colors/colours!

Children discover colors/colours at a very early age, and use colors/colours to help them distinguish between objects.

- ★ Encourage your child to learn about and explore colors/colours by playing a fun call-and-response game! Offer your child a variety of brightly colored/coloured objects, and point to each object as you say its color/colour. Then say a color/colour and wait to see if your child points to the correct object before you do! Your child will soon begin noticing and recognizing different colors/colours, and will most likely start developing a preference for a “favorite/favourite” color/colour.

Learning can truly be a multisensory experience!


- ★ Babies explore and learn through sight, sound and touch.
- ★ Try squeaking the bird activity or tapping the butterfly rattle in different rhythms, and have your baby try to imitate you. Supplying your baby with handheld activities that he can easily grasp and use to make simple sounds will help him develop an appreciation for different rhythms, sounds and textures.
- ★ Trace over each of the numbers with your baby’s finger and let her get a feel for each of the numbers. The more she learns through all her senses, the more fulfilling and rewarding her learning experience will be.

It’s not just music!

- ★ Children love music, and it’s important to expose them to new sounds and musical styles.
- ★ Let your child explore and hear each of the 5 classical melodies by tapping each number button. Each melody will introduce your baby to a variety of instruments and tempos.
- ★ Sing along with the activities! Allowing your child to hear your voice and see your mouth movements will help reinforce language skill development.



INSTRUCTIONS FOR PLAY

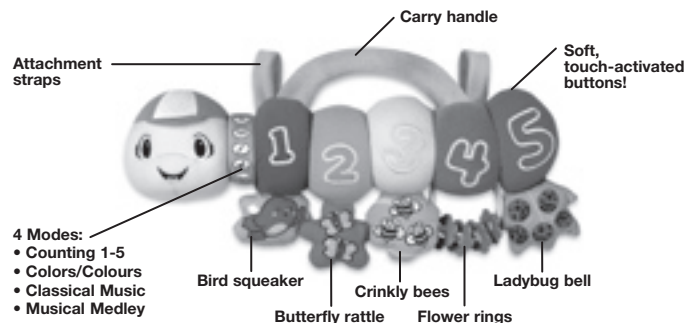

Getting Started:

Turn on Baby COUNTING PAL™ take-along learning toy by pushing the ON/OFF button or by pushing any of the four mode buttons. The product will automatically turn off after 2 minutes of inactivity.

How to Play with Baby COUNTING PAL take-along learning toy:

Counting Mode: 123

- Push the Counting mode selector button.
- Numbers: Press the buttons 1-5 to hear a short rhyming song that introduces numbers, counting 1-5 and garden creatures.
- Second Press: Press the number again to hear a counting song.

Colors/Colours Mode: 🎨

- Push the Colors/Colours mode selector button.
- Colors/Colours: Press any of the buttons to hear songs about colors/colours in 5 different musical styles (Opera, Country, Barbershop, Jazz and Reggae).
- Second Press: Press the color/colour again to hear a color/colour song.

Classical Music Mode: 🎵

- Press the Music mode selector button.
- Press any of the numbers to hear 5 classical tunes:
 - 1) Mozart – Piano Sonata in C, 2) Boccherini – String Quintet, 3) Bach – Brandenburg Suite,
 - 4) Vivaldi – the Rite of Spring, 5) Beethoven – Ode to Joy

Musical Medley Mode: 🎶


- Push the Musical Medley mode selector button.
- Press any button to hear continuous music.
Note: The number that is pressed first will determine which melody is played first.

Volume Control:

Move the volume switch, located on the battery box, to the LOW or HIGH position.

Instructions for Care:

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap, detergent or chemicals. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

 **CAUTION:** Routinely check this toy for proper and safe condition. If there is any damage or broken parts, remove toy from use.

 **ATTENTION :** Vérifier régulièrement l'état et le fonctionnement de ce jouet afin d'en garantir la sécurité. S'il est cassé ou endommagé, même partiellement, ranger ce jouet hors de portée de votre enfant.

Battery Information:

Batteries included are for in-store demonstration, and should be replaced for home use. Requires 3 AAA (called LR03 in some countries) alkaline batteries.

Battery Safety:

Batteries are small objects and may pose a choking hazard for small children. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy to avoid leaking. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT** incinerate used batteries.
- DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- DO NOT** mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT** use rechargeable batteries.
- DO NOT** recharge non-rechargeable batteries.
- DO NOT** short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille et peut constituer un risque d'étranglement pour les enfants en bas âge. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet pour éviter les fuites. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- NE PAS INCINÉRER** les piles usagées.
- NE PAS JETER** les piles au feu, car elles peuvent exploser ou fuir.
- NE PAS MÉLANGER** piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- NE PAS UTILISER** de piles rechargeables.
- NE PAS RECHARGER** des piles non rechargeables.
- NE PAS COURT-CIRCUITER** les terminaux d'alimentation.

Battery Removal and Installation Instructions:

1. Open the battery door (located inside the product) with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none">• Make sure batteries are correctly installed• Make sure battery cover is securely attached• Remove batteries and put them back in• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth• Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none">• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth• Install new batteries
Toy makes improper responses	<ul style="list-style-type: none">• Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth• Install new batteries

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment.

This Class B digital apparatus complies with Canadian ICES-003.

Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at <http://www.leapfrog.com/support> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at <http://lfcanada.custhelp.com> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

U.K. Consumer Service Contact: Visit our U.K. Consumer Support website at <http://leapfroguk.custhelp.com> 24 hours a day, or call 0800 169 5435, or Eire +44 1702 200244, during normal business hours.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au or free-call 1800 244 543 during normal business hours.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Ce produit est soumis à une garantie limitée de trois (3) mois. Veuillez consulter notre site Web à l'adresse www.leapfrog.com pour obtenir l'intégralité des informations de garantie fournies dans votre pays. LeapFrog ne sera pas tenu responsable des dommages consécutifs ou indirects induits par la violation de toute garantie sur ce produit. Certaines juridictions n'autorisant pas l'exclusion ou la limitation des dommages consécutifs ou indirects, ni même la limitation de la durée des garanties implicites, il est donc possible que les limitations ou exclusions ci-dessus ne s'appliquent pas à votre cas.

Product Registration

Register your product online at leapfrog.com or mail us the following information:

- First and last name
- Street address, city, state, zip code
- Age of purchaser
- Email address
- Child's birth date (optional)
- The LeapFrog product that you purchased
- Yes, I would like to receive learning progress updates, articles, product news and special offers from LeapFrog (optional)

Your privacy is important to LeapFrog. To learn more about how we use and protect your information, please review our Privacy Policy at www.leapfrog.com/en/corplinks/privacy.html.

U.S. Residents

Mail your information to:
LeapFrog
ATTN: Product Registration
P.O. Box 981123
El Paso, TX 79998-1123

Canadian Residents

Mail your information to:
LeapFrog Canada
466 Speers Rd., 3rd Floor
Oakville, Ontario
L6K 3W9
CANADA

U.K. Residents

Mail your information to:
LeapFrog Toys (U.K.) Limited
36 Windsor Street, Uxbridge
Middlesex, UB8 1AB
UNITED KINGDOM

Residents of Australia and New Zealand

Mail your information to:
Funtastic Limited
635 Waverley Road
Glen Waverley
Victoria 3150
AUSTRALIA

Registration of your product is not required for your warranty or your use of your product.

LEAPFROG, the LeapFrog Baby logo, COUNTING PAL, LEARN & GROOVE, FRIDGE FARM and FRIDGE PHONICS are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2008 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 3 months and up
Convient aux enfants à partir de 3 mois