

More fun learning toys from LeapFrog!



Hug & Learn™ Animal Globe

6+ months

Learning Band™ Walker

9+ months



Fridge Farm™ Magnetic Animal Set

12+ months

Learning Connections™ Train

9+ months



Discovery Ball

Infants can spin the Discovery Ball in its base. Detach the ball from its base for toddler roll-around fun!



Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

www.leapfrog.com



Learning Skills



Gross Motor

Batting the ball in the base or rolling the ball on the floor encourages gross motor development.



Fine Motor

Easy-to-press letters help baby develop fine motor skills.



Sensory

Tactile letters, sparkling lights, and soothing melodies stimulate baby's senses.



Language

Introduces letter names and sounds, which are the fundamentals of language development.

Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

Babies and toddlers are discovering the world for the first time. That is why we develop learning toys that introduce critical discovery skills, including color and shape recognition, fine motor skill development, and social play. They come in playful colors, with engaging features that will captivate your child's imagination.

LeapFrog™ learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our Web site (www.leapfrog.com), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

Tom Kalinske
CEO
LeapFrog Enterprises, Inc.

INSTRUCTIONS FOR PLAY



How to Play with the Discovery Ball

- Turn on Discovery Ball by sliding the volume switch from OFF to ON or LOW depending on your desired volume level.
- Turn off Discovery Ball by sliding the volume switch to the OFF position. Discovery Ball will also shut off after 15 seconds of inactivity.

Letters Mode:

- Move the selector switch to Letters Mode.
- Press any letter on the Discovery Ball to hear the letter's name.
- Spin Discovery Ball in its base or roll the ball on the floor to hear the ABC song.

Phonics Mode:

- Move the selector switch to Phonics Mode.
- Press any letter on the Discovery Ball to hear the letter's primary phonetic sound.
- Spin Discovery Ball in its base or roll the ball on the floor to hear the ABC song.

Music Mode:

- Move the selector switch to Music Mode.
- Press any letter on the Discovery Ball to hear a short melody. Discovery Ball plays 26 individual classic children's tunes. See list below.
- Spin the ball in its base or roll the ball on the floor to hear three different instrumental tunes.

Music List:

A – Are You Sleeping? • B – Billy Boy • C – Clementine • D – Did You Ever See Lassie?
 E – East Side, West Side • F – The Farmer in the Dell • G – Greensleeves • H – Hey Diddle Diddle
 I – I've Been Working on the Railroad • J – Jimmy Crack Corn • K – Camptown Races
 L – London Bridge • M – Mary Had a Little Lamb • N – The Man on the Flying Trapeze
 O – Old MacDonald Had a Farm • P – Pop! Goes the Weasel • Q – Chopsticks
 R – Row, Row, Row Your Boat • S – She'll Be Comin' Round the Mountain • T – This Old Man
 U – Upside Down World • V – Froggie Went-A-Courtin' • W – Oh Where, Oh Where Has My Little Dog Gone?
 X – Yellow Rose of Texas • Y – Yankee Doodle • Z – Wait for the Wagon

Removing Discovery Ball from Base

- Slide the Parent Safety Latch into the down position on the base. Firmly grasp the Discovery Ball and press the release button on the base to remove Discovery Ball from the base.

Inserting Discovery Ball Back into Base

- Slide the Parent Safety Latch into the down position on the base. Align the end caps of the ball with the inside arms of the base and snap the Discovery Ball back into its base. Slide the safety lock into the up position to secure the Discovery Ball.

Care and Maintenance:

- Keep product away from foods and beverages
- Clean with a slightly damp cloth
- Never submerge product in water
- Remove batteries from the product for prolonged storage

Battery Information:

Batteries included are for in-store demonstration, and should be replaced to improve performance. Requires 3 AA (called LR06 in some countries) alkaline batteries.

Battery Safety:

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent. NE PAS INCINÉRER les piles usagées. NE PAS JETER les piles au feu, car elles peuvent exploser ou fuir. NE PAS MELANGER piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard). NE PAS UTILISER de piles rechargeables. NE PAS RECHARGER des piles non rechargeables. NE PAS COURT-CIRCUITER les terminaux d'alimentation.

Battery Installation:

1. Requires 3 AA (called LR06 in some countries) alkaline batteries.
2. Locate the dial on the end of the ball, and unlock the dial by using a flat instrument, such as a screwdriver or coin.
3. Holding the ball in both hands, twist sides in opposite directions and pull the blue side away from the center.
4. Locate the battery door on the inside of the white center piece.
5. Remove the two screws in the compartment door and install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
6. Replace battery door securely and reassemble ball before use.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> • Make sure batteries are correctly installed • Make sure battery cover is securely attached • Remove batteries and put them back in • Clean battery contacts with rubbing alcohol • Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> • Clean battery contacts with rubbing alcohol then install new batteries
Toy makes improper responses	<ul style="list-style-type: none"> • Clean battery contacts with rubbing alcohol then install new batteries

U. S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://fcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, review your previous questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)
 Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at: <http://leapfroguk.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435
 Eire: 00 44 1702 200244
 Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

AVERTISSEMENT : Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

Note: This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the Leapfrog Baby Logo, HUG & LEARN, LEARNING BAND, FRIDGE FARM and LEARNING CONNECTIONS are trademarks or registered trademarks of LeapFrog Enterprises, Inc. Copyright © 2001, 2004 LeapFrog Enterprises, Inc. All rights reserved.

U.S. Patent Number(s) 5,997,304; B1 5,188,533; and 6,761,611B2. Patents Pending

Visit our fun-filled Web site at: www.leapfrog.com

For ages 6 months and up
 Convient aux enfants à partir de 6 mois