

More fun learning toys from LeapFrog!



Learning Friends™
Phonics Bus™

12+ months

See and Learn™ Driver

12+ months



Fridge Phonics™
Magnetic Letter Set

2+ years

Learning Video Library

2+ years



Now available!



Fridge Farm™ Magnetic Animal Set



Mix and match
magnetic puzzle pieces
to make **25** real or
silly combinations!

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

www.leapfrog.com

How to get the most out of your Fridge Farm™ Magnetic Animal Set

Creativity begins with experimentation!

Children learn by using their creativity to experiment with objects in new and inventive ways.

- You can participate in the fun by creating as many animal combinations as possible—real or silly! As your child begins to express different thoughts and ideas through learning play, she will begin to explore different solutions to everyday problems in her own special way.

Compare and match!

As children grow, they develop the ability to recognize, compare and match two or more shapes.

- Encourage your child to experiment and begin to anticipate the results of putting different animal shapes together. Start by making a correct animal match, and then say the name of the animal, followed by the sound the animal makes. Once your child becomes familiar with each animal, ask him to find animals by name and color/colour. "Can you find the purple cow?"

Build new vocabulary skills!

Children develop new vocabulary by labeling objects with names, and imitating the sounds that they hear.

- As you play with your child, help reinforce connections between objects and their names by repeatedly labeling objects out loud. Later, ask your child to name familiar animals in a book. The more you help put labels to objects, the faster your child's vocabulary will grow.

- You can also help in the development of new vocabulary by reinforcing the sounds that each animal makes. Have fun by making animals sounds together! After a while, your child will be able to replicate the sounds on her own.


A rainbow of colors!

At a very early age, children use color/colour to help distinguish objects, even if they can't verbalize the name of the object.

- Encourage your child to learn about and explore colors/colours by playing a fun call-and-response game! Offer your child a variety of brightly colored/coloured animals, and point to each animal as you say its color/colour. Then say a color/colour and wait to see if your child points to the correct animal before you do! Your child will soon begin noticing and recognizing different colors/colours, and will most likely start developing a preference for a "favorite" color/colour.



INSTRUCTIONS FOR PLAY

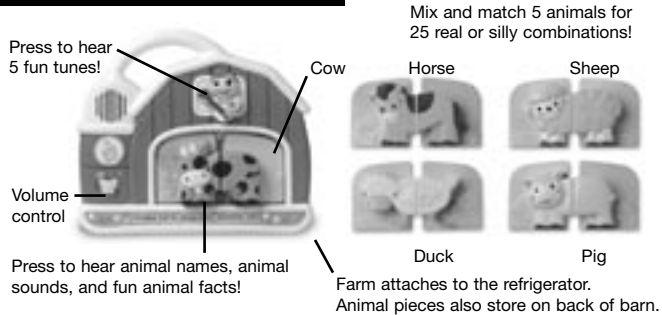

Getting Started:

Turn on the FRIDGE FARM™ Magnetic Animal Set by sliding the volume control switch from OFF to the LOW or HIGH position. The product will automatically turn off after 2 minutes of inactivity.

How to Play with the FRIDGE FARM™ Magnetic Animal Set:

Correct Match

- **Animal head:** Place an animal head into the reader and press to hear its name, sound and color/color.
- **Animal tail:** Place the correct animal tail into the reader and press to hear a reward, followed by a short song that incorporates the animal's name and sound.

Press either the animal head or tail a second time to hear fun facts about that animal.

Silly Match

- **Animal head:** Place an animal head into the reader and press to hear its name, sound and color/color.
- **Animal tail:** Place an animal tail that does not match the head to make a silly animal match! Press to hear a silly match song that identifies which animal you put in first.

Press either the animal head or tail a second time to hear a silly match song.

Farmer Tad Music Button

- Press Farmer Tad's music button to hear 5 fun tunes:
 - She'll Be Comin' Round the Mountain*
 - 5 Little Ducks*
 - Farmer in the Dell*
 - Skip to My Lou*
 - Oh, Susannah*

Volume Control:

Move the OFF/LOW/HIGH switch to the LOW or HIGH position.

Care and Maintenance:

- Keep product away from foods and beverages
- Clean with a slightly damp cloth
- Never submerge product in water
- Remove batteries from product for prolonged storage
- Avoid exposing product to extreme temperatures

Battery Information:

Batteries included are for in-store demonstration, and should be replaced to improve performance. Requires 3 AAA (called LR03 in some countries) alkaline batteries.

Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT incinerate used batteries.
- DO NOT dispose of batteries in fire, as batteries may explode or leak.
- DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard).
- DO NOT use rechargeable batteries.
- DO NOT recharge non-rechargeable batteries.
- DO NOT short-circuit the supply terminals.

Sécurité relative aux piles :

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte.

Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles.

Enlevez rapidement les piles usagées du jouet.

Retirez les piles en cas de non-usage prolongé.

Suivez les procédures adéquates pour vous débarrasser des piles usagées.

Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- **NE PAS INCINÉRER** les piles usagées.
- **NE PAS JETER** les piles au feu, car elles peuvent exploser ou fuir.
- **NE PAS MÉLANGER** piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- **NE PAS UTILISER** de piles rechargeables.
- **NE PAS RECHARGER** des piles non rechargeables.
- **NE PAS COURT-CIRCUITER** les terminaux d'alimentation.

Battery Installation:

1. Open the battery door with a screwdriver.
2. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
3. Replace battery door securely.

TROUBLESHOOTING

Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none">• Make sure batteries are correctly installed• Make sure battery cover is securely attached• Remove batteries and put them back in• Clean battery contacts with rubbing alcohol• Install new batteries
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none">• Clean battery contacts with rubbing alcohol• Install new batteries
Toy makes improper responses	<ul style="list-style-type: none">• Clean battery contacts with rubbing alcohol• Install new batteries

U.S./Canada Consumer Service Contact:

Please visit our U.S. Consumer Support Web site at: <http://www.leapfrog.com/support>, or our Canada Consumer Support Web site at: <http://lcanada.custhelp.com>, 24 hours a day. You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.S./Canada Office:

Telephone: (800) 701-LEAP (5327)

Hours: Monday through Saturday, 5:00 AM to 7:00 PM, Pacific time.

U.K. Consumer Service Contact:

Please visit our U.K. Consumer Support Web site at:

<http://leapfroguk.custhelp.com>, 24 hours a day.

You can search for frequently asked questions, or submit a question to our support staff via e-mail.

U.K. Office:

Telephone: 0800 169 5435

Eire: 00 44 1702 200244

Hours: Monday through Friday, 9:00 AM to 5:00 PM.

IMPORTANT: Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

AVERTISSEMENT : Tout changement ou modification de cette unité n'ayant pas été expressément approuvé par les parties responsables de la conformité entraîne l'annulation du droit de l'utilisateur à exploiter l'équipement.

CAUTION: Product contains strong magnets. Keep at least 6" away from pacemakers, and avoid contact with:

- Magnet computer media, including floppy disks, zip disks, removable hard disk drives
- Televisions and computer video monitors
- Other magnetic media, including audio cassette tapes, video cassette tapes, credit cards, ID badges, etc.
- Audio tape recorders
- Iron fillings and other ferrous-metal shavings/particles
- Pointed objects of ferrous materials, such as nails, screws, carpet tacks, etc.
- May scratch stainless steel surfaces

AVERTISSEMENT :

Ce produit contient des aimants puissants.

Gardez-le à une distance minimum de 15 cm d'un stimulateur cardiaque et évitez tout contact avec :

- les supports informatiques magnétiques tels que disquettes, disques Zip, disques durs amovibles
- les postes de télévision et écrans vidéo d'ordinateur
- les autres supports magnétiques tels que bandes sur cassette audio, bandes sur cassette vidéo, cartes de crédit, badges d'identité, etc.
- les magnétophones
- la limaille de fer et autres ébarbures/particules de métaux ferreux
- les objets pointus en matériaux ferreux tels que clous, vis, punaises, etc.
- peut rayer les surfaces en acier inoxydable.

Note:

This device complies with Part 15 of the FCC rules.

Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

Warranty Information

This LeapFrog product is warranted only to the original purchaser for a period of 3 months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express warranty on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement product will be covered under the original warranty or for 30 days, whichever is longer.

Canada: In addition to the above-referenced warranty, the hardware component shall be free from defects in material and workmanship for 12 months. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights, which vary from province to province.

U.K.: In addition to the above-referenced warranty, this LeapFrog product shall be free from defects in material and workmanship for 12 months where the 3-month warranty period is not valid. The above express warranty and any applicable implied warranties are limited in duration to the warranty periods described above. Some provinces do not allow limitations on how long an implied warranty lasts, or the exclusion of incidental or consequential damages, so the above limitations do not apply to you. You may also have other rights under U.K. law, which this warranty does not limit.

LEAPFROG, the LeapFrog logo, FRIDGE FARM, LEARNING FRIENDS, FRIDGE PHONICS, PHONICS BUS, TALKING WORDS FACTORY, LETTER FACTORY and SEE & LEARN are registered trademarks or trademarks of LeapFrog Enterprises, Inc. © 2004 LeapFrog Enterprises, Inc. All rights reserved. U.S. Patent Pending.

Visit our fun-filled Web site at: www.leapfrog.com

For ages 12 months and up.

Part No. 605-10464-A