



FridgeTalk™

magnetic wordplay recorder



Take the stage to build vocabulary, comprehension and other language skills!

Parent Guide & Instructions

This guide contains important information. Please keep it for future reference.

Learning Skills

Learning skills take center stage!

Vocabulary

Children strengthen their vocabulary and comprehension as they play word games, such as the Opposite Game and Mystery Word, and sing along to *The Big Words Song*.

Language Skills

Engaging games promote language-rich learning experiences for children to express their thoughts and make connections between words and ideas.

Listening Skills

A variety of playful games help children build listening skills as they follow directions and answer questions.

Continue Your Child's Learning Journey



FRIDGE WORDS™
magnetic word builder

3+ years

SING-ALONG READ-ALONG™
early reading set

4+ years



TAG™ Reading System
the amazing touch reading system

4-8 years

Additional products sold separately. All items may not be available in all markets. Actual products may vary.



See the Learning.™

Learning experiences are never one-size-fits-all. That's why we created an online Learning Path that can be custom-tailored to shape and inspire each child's unique learning journey. Connect and see what they're learning, how they're growing and, most importantly, who they're becoming.

leapfrog.com/learningpath



Register your product online!

You can also sign up to receive email updates with special offers, educational insights and the latest in learning from LeapFrog.

leapfrog.com

Don't have web access? See the reverse side for instructions on how to register by mail.

Instructions for Play

Your child is the star of the show! Place a photo here.

Push the Talk button to record your voice!

3 ways to learn! Develop language skills through word play, music play and creative play.

Open the curtain or push the Play button to hear your recording.

Press the Next button to go to the next activity.

High/low volume control

Hangs on walls and all magnetic surfaces! (Wall hooks not included.)



Getting Started

To turn on the FRIDGE TALK™ magnetic wordplay recorder, slide the switch to one of three modes. To turn it off, slide the switch to Off.

Note: FRIDGE TALK magnetic wordplay recorder will automatically turn off after one minute of inactivity. You can start playing again by pressing any button or sliding the switch.

Play and Learn!

When you slide the switch to any of the three modes, the first activity will launch right away. Press the Next button to go to the next activity.

When you're ready to record your voice, press the Talk button. Recording begins after the beep. The red light will be on during recording. It will blink rapidly when you have two seconds remaining. A second beep will tell you that the recording time has ended. Recordings are set to different lengths for different activities.

Press the Play button or open the curtain to play back the recording. You can record and play back in each activity as many times as you want.

Three Learning Modes!

The Word Show

The Word Show presents a variety of playful games to help your child's vocabulary grow. These activities introduce new words and encourage your child to use familiar words in new ways.

The Song Show

It's time for a sing-along! The Song Show provides activities that encourage children to sing and perform while reinforcing important preschool skills such as letter sounds and rhyming.

Your Show

Creative expression takes center stage in Your Show mode. It's fun and easy for your child to record and play back his or her own songs, stories and other verbal creations. Press the Next button to hear open-ended suggestions for recordings.

Instructions For Care

Keep food and beverages away from product. Never spill liquid of any kind on this product as it may cause damage or render the device inoperative. Clean with a slightly damp cloth (cold water). Do not use soap or detergent. Never submerge the unit in water. Avoid prolonged exposure to extreme temperatures and direct sunlight. Avoid dropping the unit. Never try to dismantle it.

Battery Information

Batteries included are for in-store demonstration and should be replaced for home use. Requires 3 AAA (called LR03 in some countries) alkaline batteries.

Battery Removal and Installation Instructions

1. Open the battery door with a screwdriver.
2. If used or spent batteries are present, remove these batteries from the unit by pulling up on one end of each battery.
3. Install new batteries as shown in the polarity (+/-) diagram inside the battery compartment.
4. Replace battery door securely.

Battery Safety

Batteries are small objects. Batteries must be replaced by an adult. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. Remove batteries for prolonged storage. Only batteries of the same or equivalent type as recommended are to be used.

- DO NOT** incinerate used batteries.
- DO NOT** dispose of batteries in fire, as batteries may explode or leak.
- DO NOT** mix old and new batteries or types of batteries (i.e., alkaline/standard).
- DO NOT** use rechargeable batteries.
- DO NOT** recharge non-rechargeable batteries.
- DO NOT** short-circuit the supply terminals.

Sécurité relative aux piles

Les piles sont des objets de petite taille. Le remplacement des piles doit être effectué par un adulte. Respectez le schéma de polarité (+/-) reproduit dans le compartiment des piles. Enlevez rapidement les piles usagées du jouet. Suivez les procédures adéquates pour vous débarrasser des piles usagées. Retirez les piles en cas de non-usage prolongé. Utilisez uniquement des piles ou accumulateurs du type recommandé ou d'un type équivalent.

- NE PAS** incinérer les piles usagées.
- NE PAS** jeter les piles au feu car elles peuvent exploser ou fuir.
- NE PAS** mélanger piles usagées et piles neuves, ni différents types de piles (c'est-à-dire alcalines/standard).
- NE PAS** utiliser des piles rechargeables.
- NE PAS** recharger des piles non rechargeables.
- NE PAS** court-circuiter les terminaux d'alimentation.

⚠ WARNING: This product contains inaccessible magnets. Should the toy break or magnets ever become exposed, remove the toy from use. Magnets should not be eaten or inhaled. Swallowed magnets can stick together across intestines causing serious infections and death. Seek immediate medical attention if magnets are swallowed or inhaled.

⚠ AVERTISSEMENT : Les aimants contenus dans ce produit sont hors d'atteinte des enfants. Confiner ce jouet s'il vient à se briser ou si un contact avec les aimants devient possible. Un aimant n'est pas fait pour être mangé ou inhalé. L'ingestion par un enfant d'au moins deux aimants (qui peuvent s'attirer mutuellement et perforer ses intestins) risque de provoquer des lésions intestinales pouvant s'avérer mortelles. En cas d'ingestion ou même d'inhalation, contactez de toute urgence votre médecin.

⚠ CAUTION: Product contains strong magnets. Keep at least 6 inches (15 cm) away from pacemakers and avoid contact with the following:

- Magnetic computer media, including floppy disks and removable hard disk drives
- Televisions and computer video monitors
- Other magnetic media, including audio cassette tapes, credit cards, ID badges, etc.
- Audio tape recorders
- Iron filings and other ferrous-metal shavings/particules
- Pointed objects of ferrous materials, such as nails, screws, carpet tacks, etc.

May scratch painted or magnetic surfaces.

⚠ ATTENTION : Ce produit contient des aimants puissants. Gardez-le à une distance minimum de 6 pouces (15 cm) d'un stimulateur cardiaque et évitez tout contact avec :

- les supports informatiques magnétiques tels que disquettes, disques Zip, disques durs amovibles
- les postes de télévision et écrans vidéo d'ordinateur
- les autres supports magnétiques tels que cassettes audio, cassettes vidéo, cartes de crédit, badges d'identité, etc.
- les magnétophones
- la limaille de fer et autres ébarbures/particules de métaux ferreux
- les objets pointus en matériaux ferreux tels que clous, vis, punaises, etc.

Peut rayer les surfaces peintes ou magnétiques.

Troubleshooting

Symptom

Toy does not turn on or does not respond

Try This

- Make sure the OFF/mode switch is not in the OFF position
- Make sure batteries are correctly installed
- Make sure battery cover is securely attached
- Remove batteries and put them back in
- Clean battery contacts by rubbing lightly with a soft eraser and then wiping with a clean and dry cloth
- Install new batteries

Toy makes improper responses

- Follow the above instructions to clean battery contacts
- Install new batteries

U.S. Consumer Service Contact: Visit our U.S. Consumer Support website at <http://www.leapfrog.com/support> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

Canada Consumer Service Contact: Visit our Canada Consumer Support website at <http://ifcanada.custhelp.com> 24 hours a day, or call (800) 701-LEAP (5327) during normal business hours.

U.K. Consumer Service Contact: Visit our U.K. Consumer Support website at <http://leapfroguk.custhelp.com> 24 hours a day, or call 0800 169 5435, or Eire +44 1702 200244, during normal business hours.

Australia Consumer Service Contact: Please submit questions to our support staff via email at info@funtastic.com.au or free-call 1800 244 543 during normal business hours.

FCC Notice:

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:

- 1) This device may not cause harmful interference, and
- 2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

NOTE: Changes or modifications to this unit not expressly approved by LeapFrog Enterprises, Inc., could void the user's authority to operate the equipment. This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

IMPORTANT: If you have a problem with this product, return it to the retailer where the product was purchased for exchange. If the retailer is unable to assist you for any reason, contact LeapFrog Consumer Services. If our service representative is unable to help you resolve the problem, you will be given instructions on how to replace the product and an authorization number. Returns must have a Return Merchandise Authorization (RMA) number to be accepted at our warehouse. If you need replacement parts for this product, please contact LeapFrog Consumer Services.

LIMITED WARRANTY: Subject to a limited three (3) month warranty. Please call Consumer Support at one of the numbers listed to the left or visit our website at www.leapfrog.com for full details of the warranty provided in your country. LeapFrog shall not be liable for any incidental or consequential damages for the breach of any warranty on this product. Some jurisdictions do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

GARANTIE LIMITÉE : Soumis à une garantie limitée de trois (3) mois. Veuillez s'il vous plaît communiquer avec notre service à la clientèle au (800) 701-LEAP (5327) ou voir notre site internet à www.leapfrog.com pour tous les renseignements. LeapFrog ne pourra être tenu responsable de tout dommage accessoire ou indirect découlant de la violation de toute garantie reliée à ce produit. Certaines juridictions ne permettent pas l'exclusion ou la limitation de dommages accessoires ou indirects, ou la limitation de la durée d'une garantie implicite, par conséquent, les limites ou exclusions précédentes peuvent ne pas s'appliquer à tous.

Product Registration

Register your product online at leapfrog.com or just mail us the following information:

- First and last name
- Street address, city, state, zip code
- Age of purchaser
- Email address
- Child's birth date (optional)
- The LeapFrog product that you purchased
- Yes, sign me up for email news from LeapFrog (optional)

Privacy Policy: To view LeapFrog's privacy statement, go to leapfrog.com.

U.S. Residents

Mail your information to:
LeapFrog
ATTN: Product Registration
P.O. Box 981123
El Paso, TX 79998-1123

U.K. Residents

Mail your information to:
LeapFrog Toys (U.K.) Limited
36 Windsor Street, Uxbridge
Middlesex, UB8 1AB
UNITED KINGDOM

Canadian Residents

Mail your information to:
LeapFrog Canada
466 Speers Rd., 3rd Floor
Oakville, Ontario
L6K 3W9
CANADA

Residents of Australia and New Zealand

Mail your information to:
Funtastic Limited
635 Waverley Road
Glen Waverley
Victoria 3150
AUSTRALIA

Registration of your product is not required for your warranty or to use the product.

LEAPFROG, the LeapFrog logo, the LeapFrog Learning Path logo, SEE THE LEARNING, FRIDGE TALK, FRIDGE WORDS, SING-ALONG READ-ALONG, TAG and the TAG logo are registered trademarks or trademarks of LeapFrog Enterprises, Inc. Copyright © 2008 LeapFrog Enterprises, Inc. All rights reserved.

leapfrog.com

For ages 3 years and up.
Convient aux enfants à partir de 3 ans.
Part number: 605-11220-A