

# Parent Guide & Instructions

Dear Parent,

We at LeapFrog know that you are your child's most important teacher. Our goal is to help you build an environment for your child that is rich in experiences—one that encourages discovery and fosters learning success.

As children grow, they are ready for more complex challenges. For preschoolers, we have a line of products that develop basic fundamentals to help prepare children to enter the classroom. Cheerful characters and delightful songs enhance the play experience while teaching the alphabet, phonics, vocabulary, colors, numbers and counting.

LeapFrog® learning toys are designed to grow alongside your child through each stage of development. All are made with the same playful spirit that promotes a lifelong love of learning. For additional information on how to make learning fun and effective, visit our web site ([www.leapfrog.com](http://www.leapfrog.com)), where you'll find tips from parents and educators. We hope you'll join us there.

Sincerely,

*Mike Wood*

Mike Wood  
President  
LeapFrog Enterprises, Inc.

This guide contains important information.  
Please keep it for future reference.



Teaches as you color, touch and play!



**Imagination Desk**®  
Learning System

**Extend the Learning Fun** when you Purchase

Additional Coloring Books from the

# Imagination Desk™

## Learning Library

The Pre-Reading Series introduces over 25 essential Pre-K reading skills.

### Read



#### Lesson 1

Phonics  
Initial Letters  
Initial Sounds  
Vocabulary

#### Lesson 2

Rhyming  
Comprehension  
Ending Sounds  
Recalling Details

#### Lesson 3

Alphabetical Order  
Final Letters  
Beg./ending Sounds  
Early Reading

The Pre-Math Series introduces over 20 essential Pre-K math skills.

### Math



#### Lesson 1

Shapes  
Measurement  
Same vs Different  
Tracing Shapes

#### Lesson 2

Numbers  
Counting  
Quantities  
Deductive Logic

#### Lesson 3

Part vs Whole  
Mathematical Terms  
Positional Concepts  
Patterns

The Life Lessons Series introduces over 15 essential Pre-K skills in the areas of science, social studies and health & safety.

### Life Lessons



© 2001 DISNEY

© 2001 SCHOLASTIC

#### Lesson 1

Times of the Day  
Daily Routines  
Positional Words  
Friendship

#### Lesson 2

Community Helpers  
Socialization  
Health & Safety  
Manners

#### Lesson 3

The Four Seasons  
Patterns  
Sequencing  
Nature Science

All Imagination Desk books include replacement coloring pages at [www.leapfrog.com](http://www.leapfrog.com) for unlimited printing at home.


# INSTRUCTIONS FOR PLAY




See the inside cover of the *Let's Learn Letters* coloring book for detailed instructions on getting started with the Imagination Desk® Learning System.

**Important!** Always use a crayon with the Imagination Desk Learning System. Never use a pen, pencil, or other writing instrument. Color with moderate pressure for best results.


## Learn!

1. Slide the mode selector to 
2. With a crayon, color the picture.

## Play a Game!

1. Slide the mode selector to 
2. Play the game.
3. Answer questions by pressing the correct object with your finger or crayon.

## Color to Music!

1. Slide the mode selector to 
2. Hear the musical tunes change as you color different objects on the page.

## Print Replacement Coloring Pages from [www.leapfrog.com](http://www.leapfrog.com)

When it's time to replenish your child's supply of *Let's Learn Letters* coloring pages, follow these simple steps: (Internet access and printer required)

- 1) Go to [www.leapfrog.com/coloringgalleries](http://www.leapfrog.com/coloringgalleries).
- 2) Download and install the LeapPrint utility.
- 3) Select the coloring book you want to replenish.
- 4) Follow the on-screen instructions to print the entire book or selected page.

If you do not have Internet or printer access, call LeapFrog Consumer Services at 1-800-701-LEAP (5327) to receive replacement pages by mail. All orders are subject to a charge of \$4.99, plus tax. For your convenience, phone orders contain 2 sets of *Let's Learn Letters* coloring pages per shipment. Please refer to item #690-00100 when ordering.

## Automatic Shut-Off:

When you finish playing, slide the mode selector to the off position. If the Imagination Desk is not used for more than 3 minutes, it will automatically turn itself off.

## Battery Information:

Requires 4 AA, (called LR6 in some countries) alkaline batteries, not included.

## Battery Safety:

Batteries are small objects. Replacement of batteries must be done by adults. Follow the polarity (+/-) diagram in the battery compartment. Promptly remove dead batteries from the toy. Dispose of used batteries properly. DO NOT incinerate used batteries. DO NOT dispose of batteries in fire, as batteries may explode or leak. DO NOT mix old and new batteries or types of batteries (i.e. alkaline/standard). DO NOT use rechargeable batteries. DO NOT recharge non-rechargeable batteries. DO NOT short-circuit the supply terminals.

## Battery Installation:

1. Requires 4 AA, (called LR6 in some countries) alkaline batteries.
2. When the batteries run low on power, the toy's speech may become garbled or it may repeat itself. Replace the batteries at this time.
3. Open the battery door with a screwdriver.
4. Install new batteries as shown in the polarity diagram (+/-) inside the battery compartment.
5. Replace battery door securely.

## Care and Cleaning of the Smart Surface:

To clean the smart surface, use a cloth slightly dampened with a solution of 50% glass cleaner and 50% water.

## Snap-away Hinge

The Imagination Desk Learning System features a snap-away hinge to prevent the top frame from breaking if too much force is exerted on it. Should the top detach, simply align the hinges and snap them back together.

TROUBLE SHOOTING	
Symptom:	Try This:
Toy does not turn on or does not respond	<ul style="list-style-type: none"> <li>Remove batteries and put them back in</li> <li>Make sure battery cover is correctly secured</li> <li>Clean battery contacts with rubbing alcohol</li> <li>Install new AA batteries</li> </ul>
Toy makes strange sounds or behaves erratically	<ul style="list-style-type: none"> <li>Install new AA batteries</li> </ul>
Toy makes improper responses	<ul style="list-style-type: none"> <li>Check batteries</li> <li>Check to make sure that the coloring page and cartridge being used have the same title. <i>Let's Learn Letters</i> coloring pages do not require a cartridge</li> </ul>

**Consumer Service contact:**  
email: support@leapfrog.com

Please visit our Consumer Support web site at <http://www.leapfrog.com/support> available 24 hours per day. You can search for frequently asked questions or submit a question to our support staff via email.

Telephone: (800) 701-LEAP (5327)  
Hours: Monday through Friday 5:00 AM to 7:00 PM Pacific Time  
Saturday 7:00 AM to 4:00 PM Pacific time

**UK Office:**  
email: info@leapfrog.uk.net  
Phone: 0800 169 5435  
EIRE: 00 44 1702 200244

**IMPORTANT:** Please notify the LeapFrog Consumer Service department of any difficulties before returning this product for any reason. Returns must have a Return Authorization number (RA#) in order to be processed. If the service representative is unable to solve the problem, you will be given instructions on how to replace the product.

**WARNING:** Changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Note:**

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions:  
1) This device may not cause harmful interference, and  
2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference to radio communications. Because this toy generates, uses, and can radiate radio frequency energy, there can be no guarantee that interference will not occur. If this toy does cause interference to radio or television reception (you can check this by turning the toy off and on while listening for the interference), one or more of the following measures may be useful:

- Reorient or relocate the receiving antenna
- Increase the separation between the toy and the radio or the TV
- Consult the dealer or an experienced TV-radio technician for help

**Warranty Information**

This LeapFrog product is warranted only to the original purchaser for a period of three months from the original purchase date, under normal use and service, against defective workmanship and material. This warranty is void if the product has been damaged by accident or unreasonable use, immersion in water, neglect, abuse, battery leakage or improper installation, improper service, or other causes not arising out of defects in workmanship or materials. Repair or replacement as provided under this warranty is the exclusive remedy of the purchaser. LeapFrog shall not be liable for any incidental or consequential damages for breach of any express on this product. Any implied warranty of merchantability or fitness for a particular purpose on this product is limited to the duration of this warranty. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights, which vary from state to state.

During the warranty period, your product will either be repaired or replaced at LeapFrog's option, when returned, shipping prepaid and with proof of purchase date as instructed by a LeapFrog service representative. In the event that your product is replaced, the replacement will be covered under the original warranty or for 30 days, whichever is longer.

LEAPFROG, the LEAPFROG LOGO and IMAGINATION DESK are registered trademarks of LeapFrog Enterprises, Inc. LEAPPAD, LEAP'S PHONICS POND and PHONICS WRITING DESK are trademarks of LeapFrog Enterprises, Inc. © 2002 LeapFrog Enterprises, Inc. All rights reserved. Patents Pending.

**MADE IN CHINA**

Visit our fun-filled Web site at [www.leapfrog.com](http://www.leapfrog.com)

For ages 3 years and up